

高速直驱罗拉车一体机

HIGH-SPEED DIRECT-DRIVE COMPU TERIZED POSTBED MACHINE

使 用 说 明 书 零 件 手 册
OPERATION MANUAL PARTS BOOK

零件手册及说明书 使用说明

1. 本手册适用于封面上所示不同系列的缝纫机;
2. 本手册为2016年01月的版本;
3. 部分零件设计上的改变不预先通知用户;

Notes for using this operation manual and parts book

1. This book is applicable to sewing machines which have the same plate number as shown on the cover of this book.
2. This book was prepared based on information available in January 2016.
3. Parts ares subject to changes in design without prior notice.

目 录

目录	章 - 页
1	安全 1 - 1
1.01	注意安全图标 1 - 1
1.02	工作中的特殊注意事项 1 - 1
1.03	危险警告 1 - 2
2	应用规定 2 - 1
3	技术数据 3 - 1
3.01	9610, 9620 3 - 1
3.02	针和线 3 - 2
3.03	可供货的机型及分机型 3 - 2
4	工作图表 4 - 1
5	操作元件 5 - 1
5.01	机头按键(仅用于安装有-D3的机器) 5 - 1
5.02	有线迹计数功能的梭心线控制器 5 - 1
5.03	踏板 5 - 2
5.04	滚轮压脚扳手 5 - 2
5.05	膝提杆 5 - 2
5.06	线迹长度设置按键 5 - 3
5.07	滚轮压脚向外摆动 5 - 3
6	安装和试车 6 - 1
6.01	安装 6 - 1
6.01.01	台板高度的调整 6 - 1
6.02	安装线架 6 - 2
6.03	安装翻转保险 6 - 2
6.04	试车 6 - 3
6.05	倾斜的支承块 6 - 3
6.06	台板开槽部位尺寸 6 - 4
6.07	安装台板 6 - 4
7	机器准备 7 - 1
7.01	在9610系列机型上装机针 7 - 1
7.02	在9620系列机型上装机针 7 - 2
7.03	绕梭心线;调节梭心线的初始张力 7 - 3
7.04	取出/装入梭壳 7 - 4

目 录

7.05	梭壳穿线/调节梭心线的张力	7 - 4
7.06	在9610机型上穿针线并调节针线张力	7 - 5
7.07	在9620机型上穿针线并调节针线张力	7 - 6
7.08	设置线迹长度	7 - 7
8	维护与保养	8 - 1
8.01	检查/调节空气压力	8 - 1
8.02	清洁空气滤清器/润滑器的过滤网	8 - 2
8.03	清洁	8 - 2
8.04	给旋梭加油	8 - 3
8.05	旋梭润滑油盒	8 - 4
8.06	给线润滑系统的油盒加油	8 - 4
8.07	给伞齿轮副润滑	8 - 5
9	调整	9 - 1
9.01	对调整工作的提示	9 - 1
9.02	工具、量规和其它辅助材料	9 - 1
9.03	调整基础机器	9 - 2
9.03.01	在9610机型上从缝纫方向上看机针的位置	9 - 2
9.03.02	在 9620机型上从缝纫方向看机针的位置	9 - 3
9.03.03	初步调整针的高度	9 - 4
9.03.04	在 9620机型上针的上升, 旋梭到针的距离, 针的高度和护针器	9 - 5
9.03.05	在9610S和9610机型上针的上升, 旋梭到针的距离, 针的高度和 . 护针器	9 - 7
9.03.06	在 9620机型上从垂直于缝纫方向看机针的位置	9 - 9
9.03.07	在 9610机型上从垂直于缝纫方向看机针的位置	9 - 10
9.03.08	开梭器的高度和行程	9 - 11
9.03.09	在 9620机型上进给轮高度的调整	9 - 12
9.03.10	在 9610机型上进给轮高度的调整	9 - 13
9.03.11	线迹长度控制的偏心度调整	9 - 14
9.03.12	线迹长度刻度盘调整	9 - 15
9.03.13	杆状曲柄到进给轮的传动调整	9 - 16
9.03.14	杆状曲柄到滚轮压脚的传动调整	9 - 17
9.03.15	滚轮压脚和进给轮之间的距离	9 - 18
9.03.16	滚轮压脚调整	9 - 19
9.03.17	按线迹长度刻度盘的指示值调整线迹长度	9 - 20
9.03.18	滚轮压脚和进给轮的同步调整	9 - 21
9.03.19	压料器(仅9620机型才有)	9 - 22
9.03.20	膝提杆	9 - 23
9.03.21	针线松线调整	9 - 24
9.03.22	挑线簧调整(9610S、9625和9610机型)	9 - 25
9.03.23	挑线簧调整(9620机型)	9 - 26
9.03.24	绕线器	9 - 28

目 录

9.03.25	滚轮压脚的压力调整	9 - 29
9.03.26	润滑.....	9 - 30
9.03.27	安全联轴器复位.....	9 - 31
9.04	剪线器-D的调整	9 - 32
9.04.01	滚子杠杆的静止位置/控制凸轮的径向位置调整.....	9 - 32
9.04.02	捕线器架的位置调整.....	9 - 33
9.04.03	捕线器与针板间的距离	9 - 34
9.04.04	捕线器位置调整	9 - 35
9.04.05	切刀位置和切刀压力	9 - 36
9.04.06	梭心线夹持弹簧	9 - 37
9.04.07	手动剪线试验	9 - 38
9.04.08	夹线器松线	9 - 39
9.04.09	联动杆调整(仅 9620机型有)	9 - 40
9.05	调整倒缝机构-D3	9 - 41
9.05.01	机针在针孔中的位置 (仅对于 9610机型)	9 - 41
9.05.02	滚轮压脚驱动装置的联接器调整	9 - 42
9.05.03	进给轮驱动装置的伞齿轮 (在 9620机型上)	9 - 43
9.05.04	伞齿轮 间隙调整(在 9620机型上)	9 - 44
9.05.05	进给轮驱动装置的伞齿轮调整(在9610S和9610机型上)	9 - 45
9.05.06	伞齿轮 间隙调整(在9610S和9610机型上)	9 - 46
9.05.07	伞齿轮 间隙调整(在9610SA和9610A机型上)	9 - 47

Index

Contexts	Chapter - Page
1	Safety 1 - 1
1.01	Safety symbols 1 - 1
1.02	Important points for the user..... 1 - 1
1.03	Danger 1 - 2
2	Proper use 2 - 1
3	Specifications 3 - 1
3.01	9610, 9620 3 - 1
3.02	Needles and threads 3 - 2
3.03	Possible models and 3 - 2
4	Explanation of symbols 4 - 1
5	Controls 5 - 1
5.01	Keys on the machine head (only for machines with -D3) 5 - 1
5.02	Bobbin thread monitoring with stitch counting 5 - 1
5.03	Pedal 5 - 2
5.04	Lever for lifting roller presser 5 - 2
5.05	Knee lever 5 - 2
5.06	Key for setting stitch length 5 - 3
5.07	Swing out roller presser 5 - 3
6	Installation and comminssioning 6 - 1
6.01	Installation..... 6 - 1
6.01.01	Adusting the table height..... 6 - 1
6.02	Fitting the reel stand 6 - 2
6.03	Kippsichtiges..... 6 - 2
6.04	Commissioning 6 - 3
6.05	Tilted work base 6 - 3
6.06	Tilted work base 6 - 4
6.07	Mounting the table top 6 - 4
7	Preparation 7 - 1
7.01	Inserting needle on model 9610 7 - 1
7.02	Inserting the needle on model 9620 7 - 2

Index

7.03	Winding the bobbin thread; adjusting the primary thread tension	7 - 3
7.04	Removing/Inserting the bobbin case	7 - 4
7.05	Threading the bobbin case/Adjusting the bobbin thread tension	7 - 4
7.06	Threading the needle thread and regulating its tension on model 9610.....	7 - 5
7.07	Threading the needle thread and regulating its tension on model 9620	7 - 6
7.08	Setting the stitch length	7 - 7
8	Care and maintenance	8 - 1
8.01	Checking adjusting the air pressure	8 - 1
8.02	Cleaning the air filter of the air-filter/lubricator.....	8 - 2
8.03	Cleaning	8 - 2
8.04	Oiling the hook	8 - 3
8.05	Oil bowl for hook lubrication	8 - 4
8.06	Filling the oil reservoir of the thread lubrication unit.....	8 - 4
8.07	Lubricating the bevel gears.....	8 - 5
9	Adjustment	9 - 1
9.01	Notes on adjustment	9 - 1
9.02	Tools, gauges and other accessories	9 - 1
9.03	Adjusting the basic machine	9 - 2
9.03.01	Needle position in sewing direction on the 9610.....	9 - 2
9.03.02	Needle position in sewing direction on the 9620.....	9 - 3
9.03.03	Preliminary adjustment of the needle height	9 - 4
9.03.04	Needle rise, hook clearance, needle height and needle guard on the 9620	9 - 5
9.03.05	Needle rise, hook clearance, needle height and needle guard on the 9630 and 9610.....	9 - 7
9.03.06	Needle position crosswise to sewing direction on the 9620	9 - 9
9.03.07	Needle position crosswise to sewing direction on the 9610.....	9 - 10
9.03.08	Height and stroke of the bobbin case opener	9 - 11
9.03.09	Height of the feed wheel on the 9620	9 - 12
9.03.10	Height of the feed wheel on the 9610S and 9610	9 - 13
9.03.11	Stitch length control eccentric	9 - 14
9.03.12	Stitch length scale disk	9 - 15
9.03.13	Shaft crank to feed wheel drive	9 - 16
9.03.14	Shaft crank to roller presser drive.....	9 - 17
9.03.15	Clearance between roller presser and feed wheel	9 - 18
9.03.16	Roller presser	9 - 19
9.03.17	Stitch length on stitch length scale	9 - 20
9.03.18	Synchronization of roller presser and feed wheel	9 - 21


Index

9.03.19	Retainer(only on 9620)	9 - 22
9.03.20	Knee lever.....	9 - 23
9.03.21	Needle thread tension release	9 - 24
9.03.22	Thread check spring (9610)	9 - 25
9.03.23	Thread check springs (9620)	9 - 26
9.03.24	Bobbin winder	9 - 28
9.03.25	Pressure of roller presser	9 - 29
9.03.26	Lubrication	9 - 30
9.03.27	Re-engage safety coupling	9 - 31
9.04	Adjusting the thread trimmer -D	9 - 32
9.04.01	Resting position of the roller lever/radial position of the control cam	9 - 32
9.04.02	Position of the thread catcher holder	9 - 33
9.04.03	Distance between thread catcher and needle plate	9 - 34
9.04.04	Position of the thread catcher	9 - 35
9.04.05	Knife position and knife pressure	9 - 36
9.04.06	Bobbin thread retaining spring	9 - 37
9.04.07	Manual cutting test	9 - 38
9.04.08	Releasing the tension	9 - 39
9.04.09	Linkage rod (only for 9620)	9 - 40
9.05	Adjustment backtacking mechanism-D3.....	9 - 41
9.05.01	Needle in needle hole (only for 9610).....	9 - 41
9.05.02	Coupling for roller presser drive	9 - 42
9.05.03	Bevel gears for feed wheel drive (on the 9620).....	9 - 43
9.05.04	Bevel gear play (on the 9620)	9 - 44
9.05.05	Bevel gears for feed wheel drive (on the 9610S and 9610).....	9 - 45
9.05.06	Bevel gear play(on the 9610S and 9610).....	9 - 46
9.05.07	Bevel gear play(on the 9610SA and 9620SA).....	9 - 47

安全 Safety

1. 安全 Safety

1.01 注意安全图标 Safety symbols

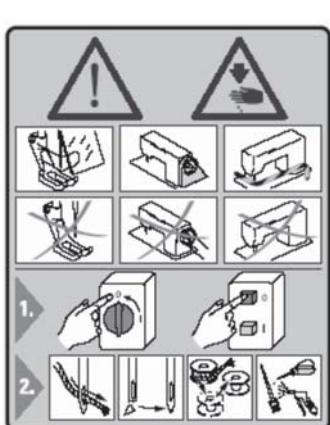

危险位置! Danger!
特别注意点。Points to be observed



对操作人员及专业人员有受伤危险!
Danger of injury for operating and
specialist personnel!

注意 Caution

不允许在没有护指器和安全装置的情况下工作。
在穿线，换梭心，换针，清洁等工作之前，关闭总开关。

Do not operate without finger guard
and safety devices.

Before threading, changing bobbin
and needle, cleaning etcs switch off
main switch.

1.02 工作中的特殊注意事项

Important points for the user

- 使用说明书属于机器一部分，因此操作人员必须随时可以取用。
- 在首次试车调试之前，必须阅读使用说明书。
- 必须对操作人员及专业人员进行有关机器的防护装置及安全工作方面的培训。
- 机器的使用者有责任保证机器在正常的无故障状态下运作。
- 机器的使用者必须保证不拆除任何安全装置或使它们失效。
- 机器的使用者必须注意，只允许被授权的人员在机器上工作。
- This Instruction Manual is a component of the machine and must be available to the operating personnel at all times.
- The Instruction Manual must be read before operating the machine for the first time.
- The operating and specialist personnel must be instructed in the safeguards of the machine and safe work methods.
- It is the duty of the user to operate the machine in perfect running order.
- It is the obligation of the user to ensure that none of the safety mechanisms are removed or deactivated.
- It is the obligation of the user to ensure that only authorized persons operate and work on the machine.

安全 Safety

1.03 危险警告 Danger



机器运作过程中，必须在机器的前后各保留1m的自由工作范围，以保证人员随时地、不受阻地接近机器。

A working area of 1 meter is to be kept free both in front of and behind the machine in operation so that the machine is always easily accessible.



在缝纫过程中，不许在缝纫针区域抓取任何东西！有被针扎伤的危险！
Never reach into the sewing area while sewing! Danger of injury by the needle!




调整工作过程中，不许在工作台上放任何物品！物品有被卡住或被摔走的可能！有被四下乱飞的物品伤害的危险！

Never leave objects on the table while adjusting the machine settings!
Objects can become trapped or be slung away! Danger of injury!



不许开动没有支承件1的机器！因为机头非常重，当向后倾斜时，机器有向后翻倒的危险！

Do not operate the machine without support 1! Danger due to top-heavy sewing head! Machine can tip over backwards when tilted!

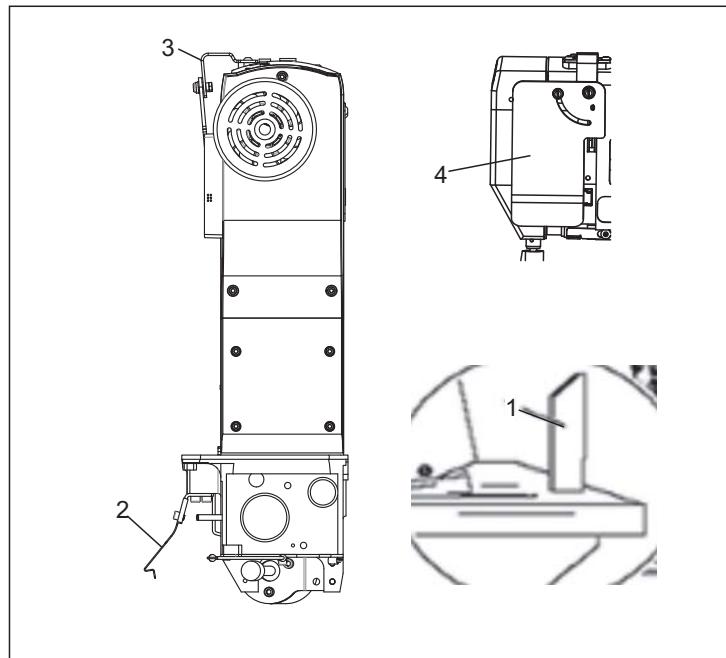

安全 Safety



在向后倾斜机器前关闭总开关！
有被机器意外地起动伤害的危险！
Switch the machine off before tilting it backwards!
Danger of injury if the machine is started accidentally!




不许开动没有挑线杆护罩3的机器！
有被挑线杆的动作伤害的危险！
Do not operate the machine without its take-up-lever guard 3!
Danger of injury due to the motion of the take-up lever!



带有线润滑器的机器不许在护眼装置4放下前开动！护眼装置4保护眼睛免受来自线润滑的油微粒伤害。
On machines with thread lubricator, only operate the machine with the eye guard 4 lowered! The eye guard 4 protects the eyes from oil particles from the thread lubrication!



不许开动没有翻转保险2的机器！
有在机头和抬板之间被挤伤的危险！
Do not operate the machine without tilt lock 2!
Danger of crushing between sewing head and table top!

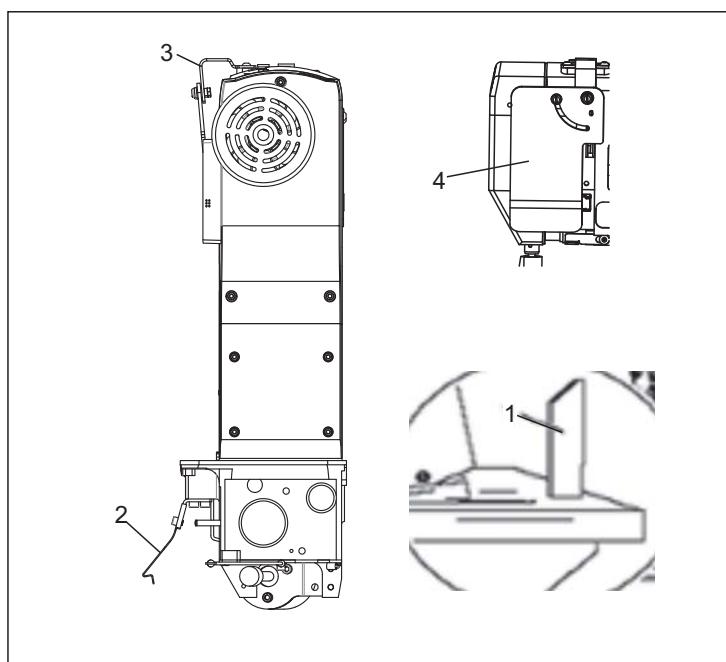

应用规定 Proper use

2

应用规定 Proper use

9620系列

是双针、高速，带有被动送料轮、滚轮压脚的柱式底板缝纫机。

Is a double-needle, high-speed post bed sewing machine with driven feed wheel and roller presser.

9610系列

是单针、高速，带有被动送料轮、滚轮压脚和同步针的柱式底板缝纫机（柱式底板在针右边）。

Is a single needle, high-speed post bed sewing machine (post to the right of the needle) with driven feed wheel and roller presser and synchronized needle.

这些机器用于皮革制品和装饰工业中完成锁式线迹缝纫。

The machines are used for sewing lockstitch seams in the leather and upholstery industries.



任何未经机器制造商准许的应用，都被视为违反规定！对由于违反规定的应用引起的损失，机器制造商不负任何责任！属于应用规定的内容也包括遵守由机器制造商所给出的各种操作方法、调节方法、保养和修理措施！

Any use of these machines which is not approved by the manufacturer shall be considered as improper use! The manufacturer shall not be liable for any damage arising out of improper use! Proper use shall also be considered to include compliance with the operation, adjustment, service and repair measures specified by the manufacturer!

技术数据 Specifications

3

技术数据 Specifications

3.01

9610 , 9620 ▲

线迹型式 Stitch type.....	301 (锁式线迹/lockstitch)
在滚轮压脚下通过高度 Clearacne under roller presser.....	7 mm
空间宽度 Clearance width	245 mm
空间高度 Clearance height.....	115 mm
柱式底板高度 Post height	180 mm

缝纫机机头尺寸 Sewing head dimensions

长度 Length.....	大约/approx. 615 mm
宽度 Width	大约/approx. 240 mm
高度(台板以上) Height (above table)	大约/approx. 500 mm
底板尺度 Bedplate dimensions.....	518 x 177 mm

最高速度 Max.speed

9610	3000 线迹/分/spm◆
9620.....	2000 线迹/分/spm◆

接线数据 Connection data

工作电压 Operating voltage	220 V ± 10%, 50/60 Hz
最大耗用功率 Max.power consumption	1.2 kVA
保险丝 Fuse protection	1 x 16 A, 内置/insert

噪音数据 Noise data

在工作场所以合适的速度工作发出的噪音水平

Emission sound level at the work place at appropriate speed

(噪音测量按照DIN 45 635-48-A-1, ISO 11204, ISO 3744, ISO4871)

(Noise measurement in accordance with DIN 45 635-48-A-1, ISO

11204, ISO 3744, ISO4871)

9610 在速度2400线迹/分: $L_{pA} \leq 79 \text{ dB(A)}$ ■■

9610 at a speed of 2400spm $L_{pA} \leq 79 \text{ dB(A)}$ ■■

9620 在速度1600线迹/分: $L_{pA} \leq 75 \text{ dB(A)}$ ■■

9620- at a speed of 1600spm $L_{pA} \leq 75 \text{ dB(A)}$ ■■

9610 在速度1600线迹/分: $L_{pA} \leq 73 \text{ dB(A)}$ ■■

9610 at a speed of 1600spm $L_{pA} \leq 73 \text{ dB(A)}$ ■■

机器净重 Net weight of sewing head..... 大约/approx. 61 kg

机器毛重 Gross weight of sewing head..... 大约/approx. 71 kg

▲ 保留技术更改的权力 Subject to alteration

◆ 取决于材料、工序、和针距 Dependent on material, work
operation and stitch length

■ $K_{pA} = 2,5 \text{ dB}$

技术 据 Specifications

3.02 针和线 Needles and threads

机型	线规格▲ (Nm) 最大▲ 人造纤维线	针规格 单位1/100mm	9620 机针系统	9610 机针系统
M	40/3	90 / 14	134-35	134
H	15/3	120 / 14	134-35	134

Model	Thread thickness (Nm) max. Synthetics	▲Needle thickness 1/100mm	9620 Needle system	9610 Needle system
M	40/3	90 / 14	134-35	134
H	15/3	120 / 14	134-35	134

▲ 或使用具有相同强度的其它种类的线
▲ or similar strengths of other types of thread

注明： M 薄料 Note: M lightweight materials

H 厚料 H Medium-heavy materials

3.03 可供货的机型及分机型 Possible models and subclasses

9610,9610S,9610SA,9620,9620S,9620SA

M型.....适用于缝纫轻薄材料和中厚料
Model M.....For sewing lightweight and medium-weight materials

H型.....适用于缝纫厚材料
Model HFor sewing medium-heavy materials

附加设备 Additional equipment

» 分机型-D.....自动剪线装置
Subclass-D Automatic edge trimmer
» 分机型 D3.....自动剪线装置、自动抬压脚装置、倒缝装置
Subclass-D3..... Automatic edge trimmer, automatic presser foot lifter, backtacking device.

工作图标 **Explanation of symbols**

4 工作图表 **Explanation of symbols**

在使用说明书中，所要进行的工作和重要信息都由相应的图标表达
所使用的图标具有下列含义

In this Instruction Manual, work to be carried out or important information
is accentuated by symbols which have the following meanings:



提示, 信息

Note, information




清洁, 保养

Cleaning, care



润滑

Lubrication

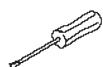

维护, 修理, 调整, 维修 (只能由专业人员完成的工作)


Maintenance, repairs, adjustment, service work (only to be carried
out by technical staff)

操作元件 Controls

5 操作元件 Controls

5.01 机头按键 (仅用于安装有-D3的机器)


Keys on the machine head (only for machines with-D3 9610S)

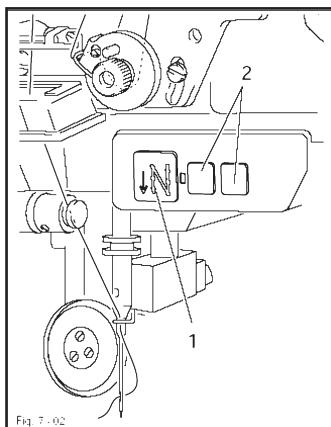

- 在缝纫过程中，只要按下按键1，机器的缝纫方向就反转。
- 按键2是用来设置参数的，请详见电控说明书。
- As long as key 1 is pressed during sewing, the machine sews in reverse direction.
- Keys 2 can be used for parameter settings, Instruction Manual of Electronic Control.

5.02 有线迹计 功能 的梭心线控制器

Bobbin thread monitoring with stitch counting

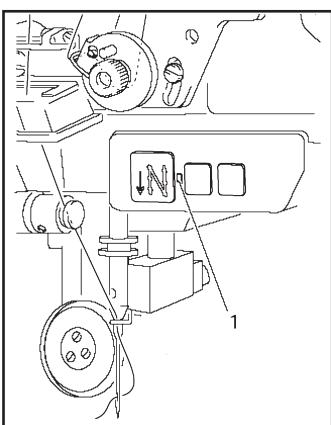

安装有-D3/..的机器

Machines without D3/..

- 在达到预设线迹量前大约100个线迹，发光二极管1开始闪烁。
- 在剪线后和更换梭心后，线迹计器重新开始计数。
- About 100 stitches before reaching the preset number of stitches, LED 1 Flashes.
- After the thread has been trimmed and the bobbin changed, The stitch counting begins anew.




预设线迹量，详见电控说明书。

Presetting the number of stitches, see Instruction Manual of Electronic Control.


操作元件 Controls

5.03 踏板 Pedal

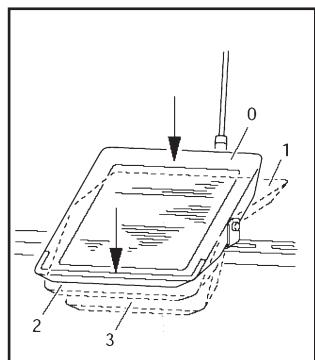


- 0= 静止位置 Neutral position
1= 缝纫 Sewing
2= 抬起滚轮压脚 (在安装有 -D3、9610S的机器上)
Raiser roller presser(on machines with-D3、9610S..)
3= 剪线 (在安装有-D..的机器上)
Trim sewing threads (on machines with-D..)

5.04 滚轮压脚扳手 Lever for lifting roller presser

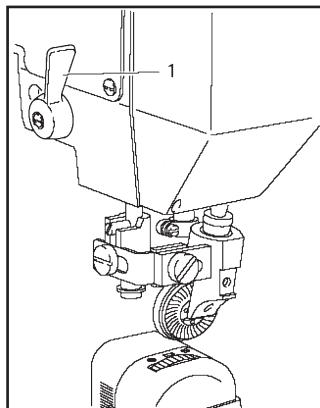

- 可以通过转动扳手1抬起滚轮压脚。
- The roller presser can be raised by turning lever 1.

5.05 膝提杆 Knee lever

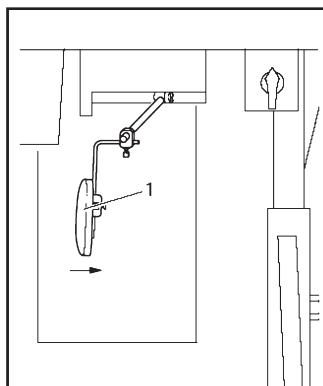


- 可以通过向箭头所示方向挤压膝提杆1，来抬起滚轮压脚。
- The roller presser can be raised by pressing the knee lever 1 in the direction of the arrow.

操作元件 Controls

5.06

线迹长度设置按键

Key for setting stitch length

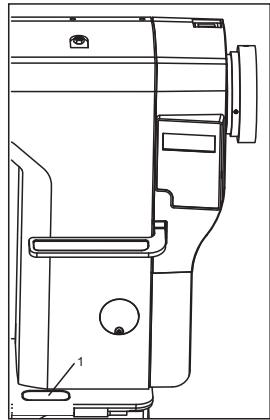


- 通过按下按键1并旋转手轮来设置线迹长度（参见第7.08节“设置线迹长度”）。
- The stitch length is set by pressing key 1 and turning the balance wheel (see Chapter 7.08 Setting the stitch length).

5.07

滚轮压脚向外摆动

Swing out roller presser

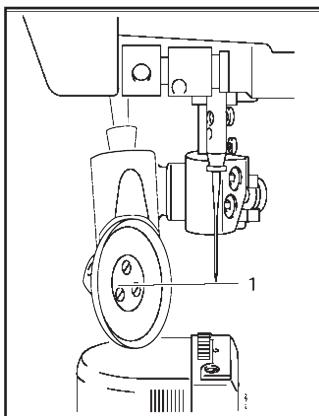

- 当滚轮压脚抬起后，可以通过向下轻拉它，使其向外摆动。
- When the roller presser is raised, it can be swung out by pulling it lightly downwards.

安装和试车 Installation and commissioning

6

安装和试车

Installation and commissioning



只允许有资格的人员对机器进行安装和试车！！

这里必须遵守所有有关的安全规定！

The machine must only be installed and commissioned by qualified personnel!

All relevant safety regulations must be strictly adhered to!



如果缝纫机不带台板供货，则工作时所用的机架和台板必须保证能够承受机器和电机的重量。

在缝纫运行中的台座也要保证牢固而且稳定。

If the machine is delivered without a table, be sure to use a stand and table top that can hold the weight of the machine with its motor.

It is very important to ensure that the stand of the machine is firm and steady, also during sewing.

6.01 安装 Installation

在机器安装地点，必须有与机器相符的电源接口。

在机器安装地点，必须有平整、坚固的地面，以及充分的照明

The site where the machine is installed must be provided with suitable connections for electric current.

It must be ensured that the standing surface of the machine site is firm and horizontal, and that sufficient lighting is provided for.




由于包装和运输的原因，台板高度的调整如下所述。

For packing and transportation reasons the table top is in the lowered position. The table height is adjusted as described below.

6.01.01 台板高度的调整

Adjusting the table height

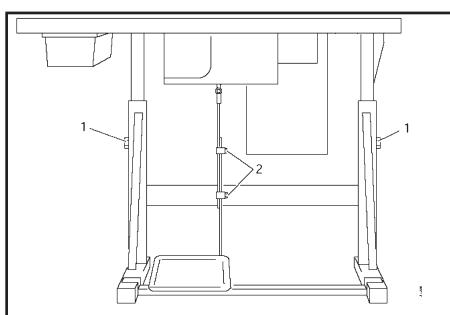


- 松开螺钉1和2，并将台板调整至所需的高度。
- 将螺钉1牢固地拧紧。
- 将踏板调至所需的位置，并且将螺钉2拧紧。
- Loosen screws 1 and 2 and set the table height as required.
- Firmly tighten screw 1.
- Set the required pedal position and tighten screw 2.

安装和试车 Installation and commissioning

6.02


安装线架 Fitting the reel stand

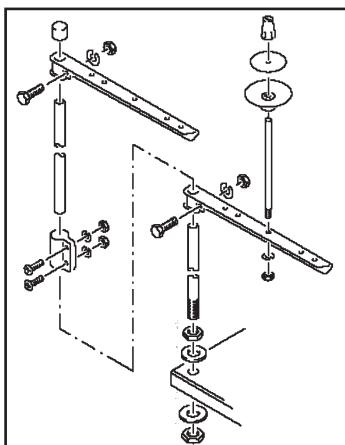

- 如图所示安装线架。
- 然后将线架插入台板的孔中并用随带的螺母可靠地固定。
- Fit the reel stand as shown in Fig.
- Afterwards insert the stand in the hole of the table top and secure it with the nuts provided.

6.03

安装翻转保险

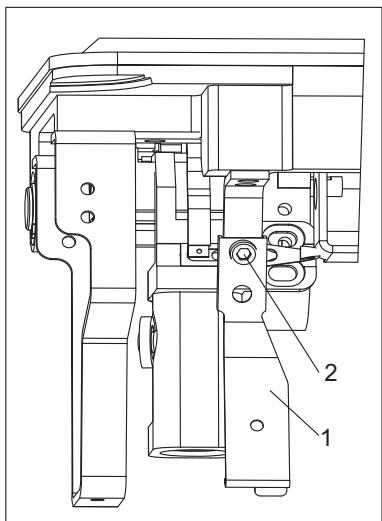

Maschine ausschalten!
Verletzungsgefahr durch unbeabsichtigtes
Anlaufen der Maschine!



Maschine nicht ohne kippsicherung 1
betreiben! Sicherung 1 betreiben!
Quetschgefahr zwischen oberteil und
tischplatte!



关闭机器电源总开关
有被机器意外地起动伤害的危险！

-

用螺栓2固定翻转保险1（随附件供货）




不许开动没有翻转保险1的机器！有在机头
和抬板之间被挤伤的危险！

安装和试车 Installation and commissioning

6.02


安装线架 Fitting the reel stand

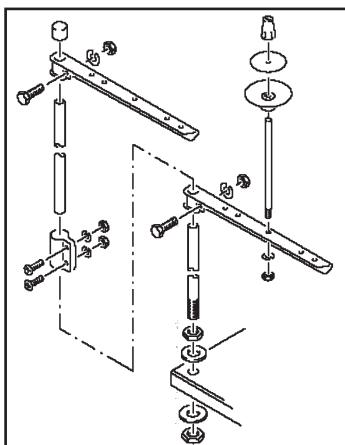

- 如图所示安装线架。
- 然后将线架插入台板的孔中并用随带的螺母可靠地固定。
- Fit the reel stand as shown in Fig.
- Afterwards insert the stand in the hole of the table top and secure it with the nuts provided.

6.03

安装翻转保险

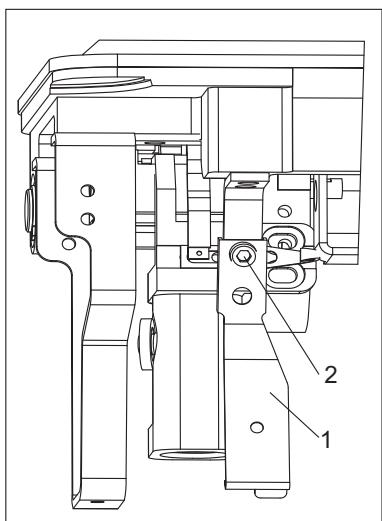

Maschine ausschalten!
Verletzungsgefahr durch unbeabsichtigtes
Anlaufen der Maschine!




Maschine nicht ohne kippsicherung 1
betreiben! Sicherung 1 betreiben!
Quetschgefahr zwischen oberteil und
tischplatte!



关闭机器电源总开关
有被机器意外地起动伤害的危险！



● 用螺栓2固定翻转保险1（随附件供货）

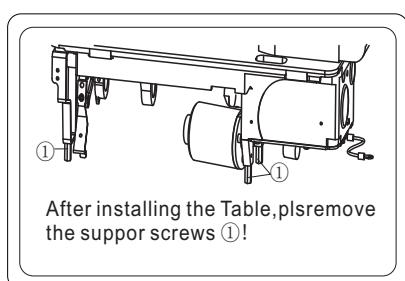

不许开动没有翻转保险1的机器！有在机头
和抬板之间被挤伤的危险！

安装和试车 Installation and commissioning

6.04 试车 Commissioning

- 检查机器是否有损坏，特别是电缆线有无损坏。
- 彻底清洁机器，然后涂油或加油（请参见第11章“维护与保养”）
- 由专业人员检查。机器的电动机是否允许用已有的电源电压驱动，电动机是否正确地在接线盒里接线。在任何有出入的情况下，决不许开车。
- Check the machine, particularly the electrical wiring for any damage.
- Clean the machine thoroughly and then oil it or fill oil in (see Chapter 11 Care and maintenance).
- Have a mechanic check whether the motor of the machine can be operated with the available power supply, and that the motor is correctly connected in the junction box. If there are any discrepancies, the machine **must not be operated under any circumstances**.




机器只允许接在有接地线的插座上！
The machine only be connected to an earthed socket!

- 机器运行时，手轮必须向操作人员方向旋转。如果不对，由专业人员将电动机换接。
- 对带有气动装置的机器，必须将机器接上压缩空气供应系统。压力表应该显示压力为6 bar。如果需要，可对此值进行调整（请参见第8.01节“检查/调节空气压力”）。
- When the machine is running, the balance wheel must turn towards the operator. If it does not, the motor connection must be changed by a mechanic.
- Machines with pneumatic equipment must be connected to the compressed air supply. The pressure gauge should indicate a pressure of 6 bar. If necessary, adjust to the correct setting (see Chapter 8.01 Checking adjusting the air pressure).


6.05 倾斜的支承块

Tilted work base

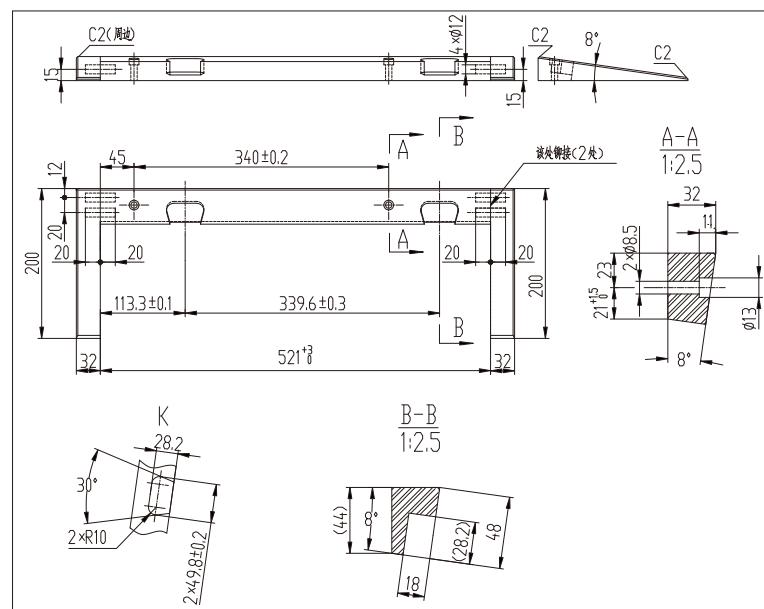


安装和试车 Installation and commissioning

6.06 台板开槽部位尺寸 Tilted work base

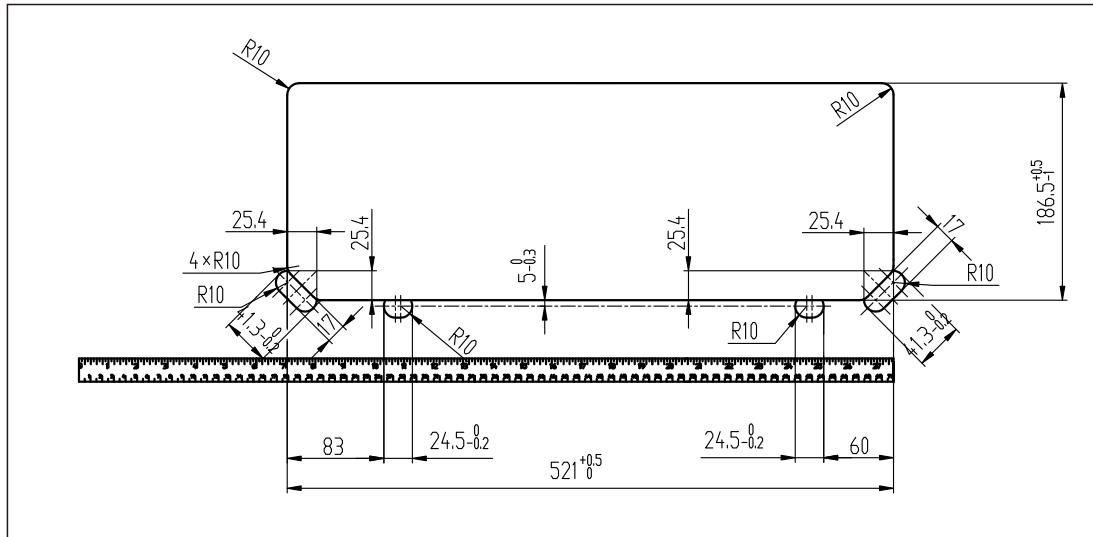

6.07 安装台板 Mounting the table top

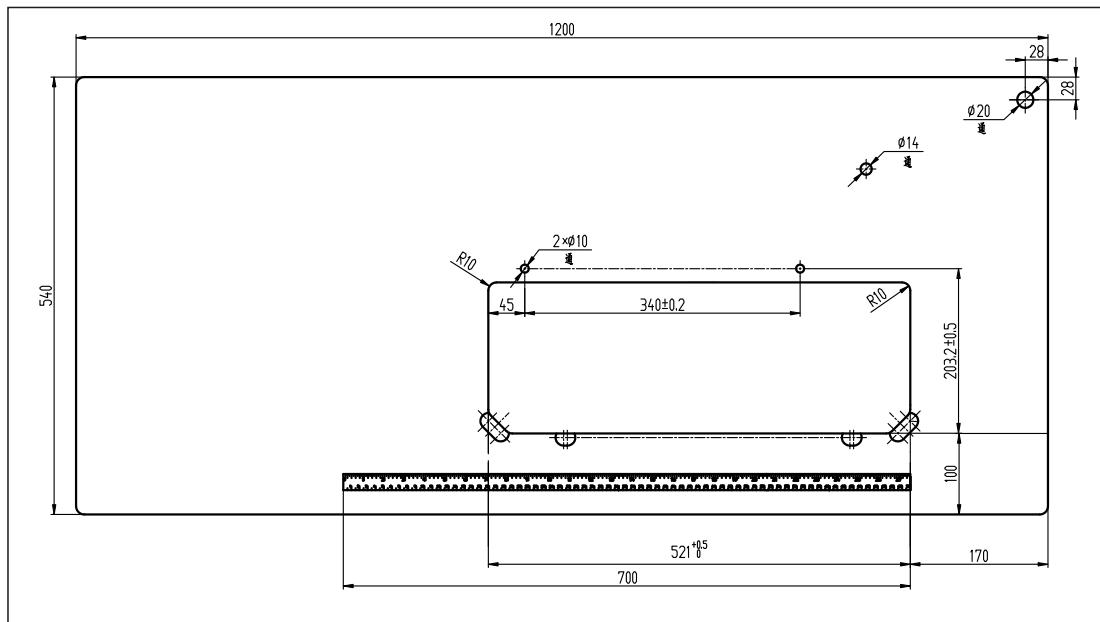

机器准备 Preparation

7

机器准备 Preparation



必须遵守本说明书中所有的规定和提示。
特别要注意所有的安全规定！

All instructions and regulations in this Instruction Manual must be observed.

Special attention must be paid to all safety regulations!



所有机器准备工作只允许由受过相应培训的人员完成。
在所有的机器准备工作时，必须通过关闭总开关或者从电源插座上拔掉插头，以使机器断电。

All setting-up work must only be carried out by personnel with the appropriate training. For all setting-up work the machine must be disconnected from its power supply by turning off the on/off switch, or removing the plug from the electric power socket.

7.01


在9610机型上装机针

Inserting needle on model 9610



关闭机器电源！有被机器意外地起动伤害的危险！

Switch the machine off! Danger of injury if the machine is started accidentally!

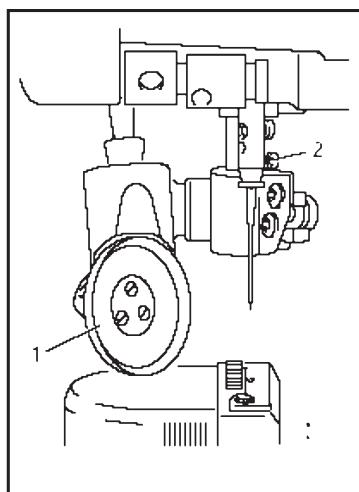

只使用**134**系统的机针。

Only use needles of system **134**

- 抬起滚轮压脚1并将其向外摆动。;
- 松开螺钉2并尽可能深地插入机针。;
对于**9610**机型，长针槽必须面向左边。
- 拧紧螺钉2并将滚轮压脚摆回到原位置。
- Raise the roller presser 1 and swing it out.
- Loosen screw 2 and insert the needles as far as possible. The long groove must face to the left on model **9610**.
- Tighten screw 2 and swing roller presser 1 back to position.



机针的选用取决于机器的型号、线和所缝纫的材料（参见**第3.02节**
“针和线”）

The Choice of needle depends on the model of the machine and the thread and material used (see **Chapter 3.02 Needles and threads**).

机器准备 Preparation


7.02

在9620机型上装机针

Inserting the needle on model 9620



关闭机器电源！ 有被机器意外地起动伤害的危险！
Switch the machine off! Danger of injury if the machine
is started accidentally !

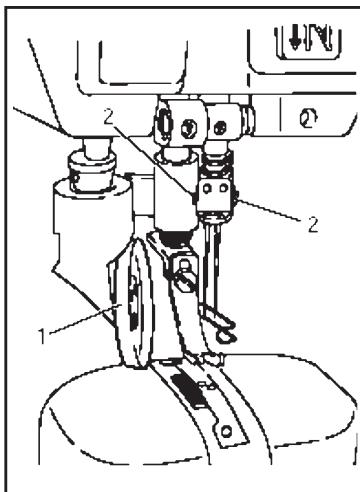

只使用134-35系统的机针。

Only use needles of system 134-35.

- 抬起滚轮压脚1并将其向外摆动。
- 松开螺钉2并插入机针，使左边机针的长针槽面向右边；右边机针的长针槽面向左边。
- 拧紧螺钉2并将滚轮压脚摆回到原位置。
- Raise the roller presser 1 and swing it out.
- Loosen screws 2 and insert the needles so that the long groove of the left needle is facing right, and that of the right needle is facing left.
- Tighten screws 2 and swing roller presser 1 back into position.



机针的选用取决于机器的型号、线和所缝纫的材料（参见第3.02节“针和线”）

The Choice of needle depends on the model of the machine and the thread and material used (see Chapter 3.02 Needles and threads).

机器准备 Preparation

7.03

梭心线；调节梭心线的初始张力

Winding the bobbin thread; adjusting the primary thread tension



- 将一个空的梭心1安装到绕线器轴2上。
- 如图所示9-03给梭心穿线，并将线顺时针方向在梭心上绕几圈。
- 当同时压下绕线器轴2和杠杆3，启动绕线器。
- Place an empty bobbin 1 into bobbin winder spindle 2.
- Thread the bobbin as shown in Fig. And wind it clockwise around bobbin 1 a few times
- Switch on the bobbin winder while pressing bobbin winder spindle 2 and lever 3.




在缝纫过程中，梭心绕线。
The bobbin is filled up during sewing.

- 在梭心1上的线张力可以用滚花螺纹4进行调整。
- 当梭心绕满线后，绕线器自动停止。
- The thread tension of bobbin 1 can be adjusted by knurled screw 4.
- The bobbin winder stops automatically when bobbin 1 is full.

如果绕线不均匀：
If the thread is wound unevenly:

- 松开螺母5。 Loosen nut 5.
- 相应地转动导线板6。 Turn thread guide 6 accordingly.
- 拧紧螺钉5。 Tighten nut 5.

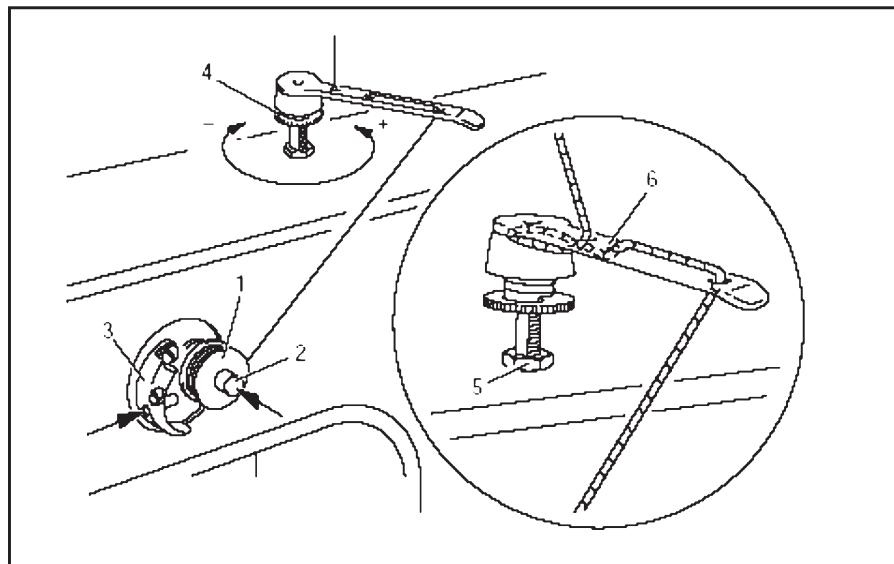

机器准备 Preparation


7.04

取出/装入梭壳

Removing/Inserting the bobbin case



关闭机器电源！ 有被机器意外地起动伤害的危险！
Switch the machine off! Danger of injury if the machine is started accidentally !

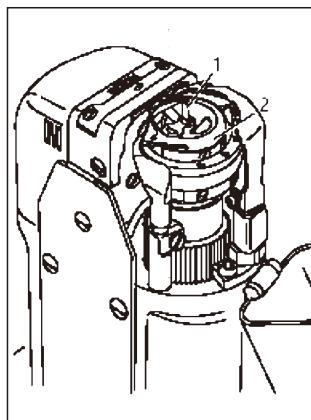

取出梭壳:

Removing the bobbin case:

- 打开柱式底板帽。
- 抬起梭门闩1并取出梭壳2。
- Open the post cap.
- Raise latch 1 and remove bobbin case 2.

装入梭壳:

Inserting bobbin case:


- 装入梭壳2。
- 关闭梭门闩并重新盖上柱式底板帽。
- Insert bobbin case 2.
- Close the latch and close the post



对9620机型的操作如图所示。
9620 is shown in Fig.

7.05

梭壳穿线/调节梭心线的张力

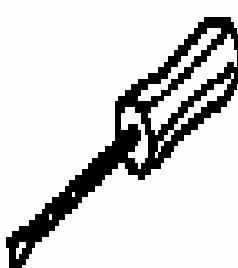

- 将梭心放入梭壳1中。
- 将线穿过弹簧2下的狭槽中。
- 将线穿过凹口处。
- 通过转动螺钉3调节梭心线张力。
- Insert the bobbin into the bobbin case 1.
- Pass the thread through the slot under spring 2.
- Pass the thread through the notch.
- Adjust the thread tension by turning screw 3.



当拉线时，梭心必须朝箭头方向旋转。
When the thread is pulled, the bobbin must rotate in the direction of the arrow.

机器准备 Preparation

7.06

在9610机型上穿针线并调节针线张力

Threading the needle thread and regulating its tension on model 9610.



关闭机器电源！


有被机器意外地起动伤害的危险！

Switch the machine off!

Danger of injury if the machine is started accidentally!



- 向上摆动护眼罩1。
- 如图所示穿针线。
- 在9625机型上，针线是从右向左穿；而在9610、9610S机型上，针线是从左向右穿。
- 通过转动滚花螺栓2调节针线的张力。
- Tilt up the eye guard 1.
- Thread the needle thread as shown in Fig.
- On model 9625 the needle is threaded from the right to the left, and on model 9610、9610S from left to the right.
- Adjust the needle thread tension by turning milled screw 2.

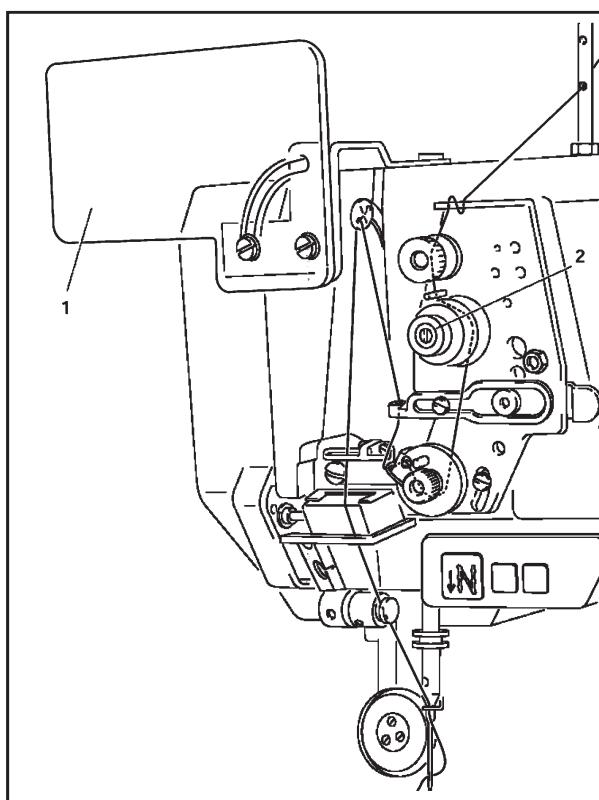

机器准备 Preparation

7.07 在9620机型上穿针线并调节针线张力

Threading the needle thread and regulating its tension on model 9620




关闭机器电源！

有被机器意外地起动伤害的危险！

Switch the machine off!

Danger of injury if the machine is started accidentally!

- 向上摆动护眼罩1。
- 如图所示穿两个针线。
- 在左边的机针上，针线是从右向左穿；而在右边的机针上，针线是从左向右穿。
- 通过转动滚花螺栓2调节针线的张力。
- Tilt up the eye guard 1.
- Thread both needle threads as shown in Fig.
- The left needle is threaded from right to the left, and the right needle from the left to right.
- Adjust the needle thread tension by turning milled screw 2.

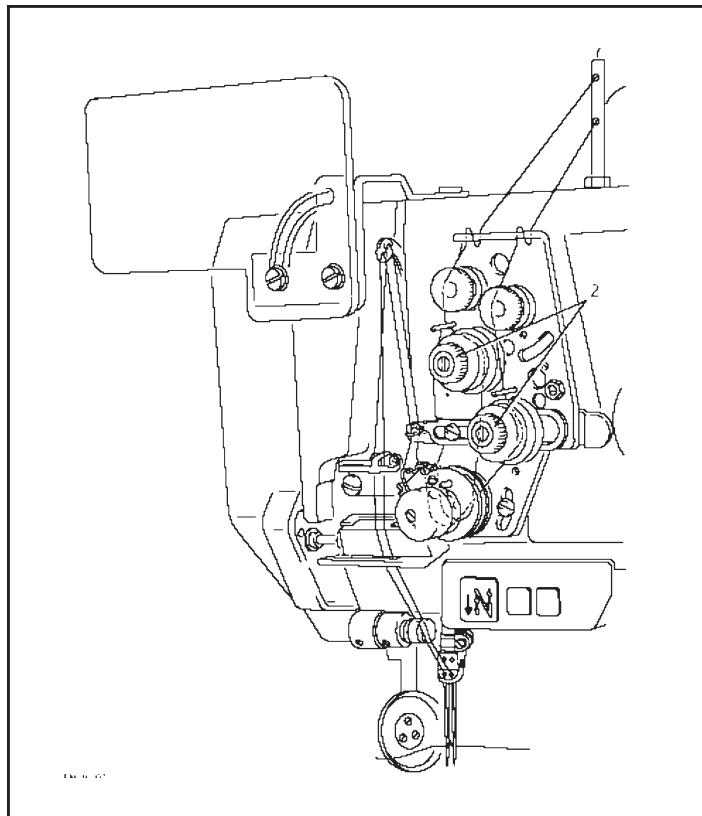

机器准备 Preparation


7.08

设置线迹长度

Setting the stitch length



- 按下键1并同时转动手轮直到线迹调节器吻合嵌入定位位置。
- 保持按下键1并来回地转动手轮，直到在刻度盘2上所需要设置的线迹长度字与下边缘3处对齐。
- Press key 1 and at the same time turn the balance wheel until the stitch setter clicks into position.
- Hold down key 1 and turn the balance wheel to and fro until the stitch length required is shown on the scale 2 opposite the bottom edge 3 of the belt guard recess.

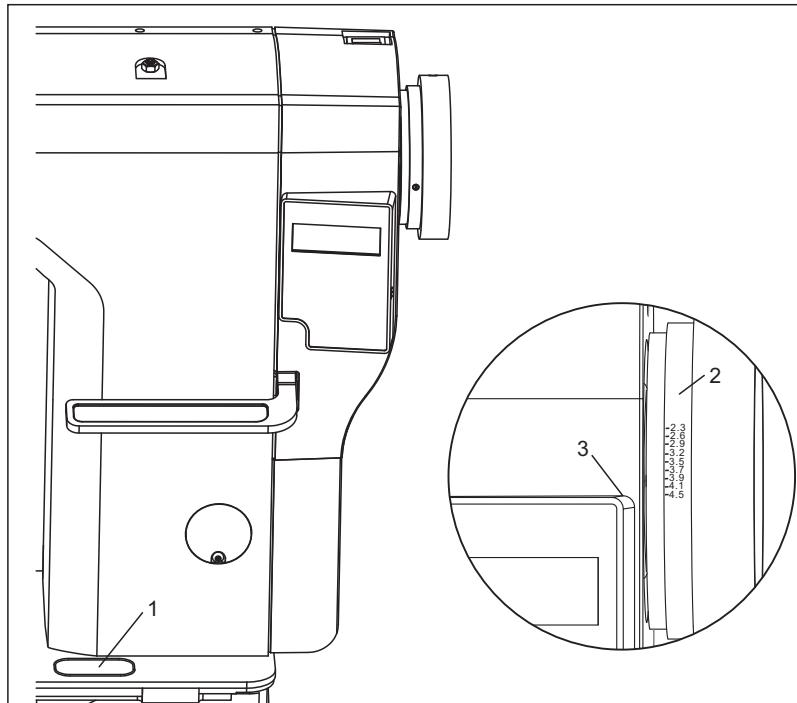

维护与保养 Care and Maintenance

8

维护与保养 Care and Maintenance

清洁	每天, 如果持续运行时, 每天多次
油量检查 (线润滑/旋梭润滑)	每天, 开机之前
给旋梭加油	每天, 开机之前
伞齿轮 润滑	每 一次
检查/调节空气压力	每天, 开机之前
清洁空气滤清器/润滑器的过滤网	在需要时

Clean.....	daily, more frequently if in continuous operation
Oil level (thread lubrication/hook lubrication)	daily, before use
Oil the hook.....	daily, before use
Lubricate the bevel gears.....	once a year
Check/adjust air pressure.....	daily, before use
Clean air filter of air filter/lubricator.....	when required




上述的保养间隔是根据每天单班作业的平均机器运行时间设定的。在机器运行时间增加的情况下，建议缩短保养间隔。

These maintenance intervals are calculated for the average running time of a single shift operation. If the machine is operated more than this, shorter intervals are recommended.

8.01 检查/调节空气压力

Checking /adjsniting the air pressure

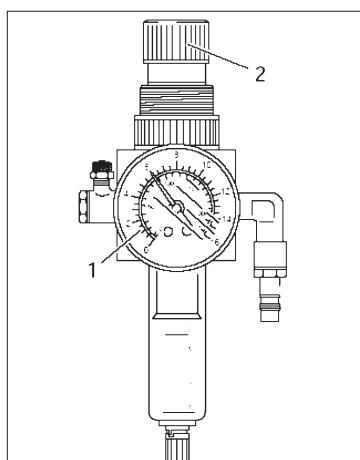

- 在每次开机前，都要先检查气压表1上显示的空气压力。
- 气压表1上必须显示**6 bar**的空气压力。
- 如果需要时，可调整此值。
- 为此，向上拉并旋转旋钮2，直至气压表显示**6 bar**的空气压力为止。
- Before operating the machine, always check the air pressure on gauge 1.
- Gauge 1 must show a pressure of **6 bar**.
- If necessary adjust to this reading.
- To do so, pull knob 2 upwards and turn it so that the gauge shows a pressure of **6 bar**.

维护与保养 Care and Maintenance

8.02

清洁空气滤清器/润滑器的过滤网

Clean the air filter of the air-filter/lubricator




关闭机器电源！

从空气滤清器/润滑器上拆下压缩空气软管。

Switch the machine off!

Disconnect the air hose at the air-filter/lubricator.

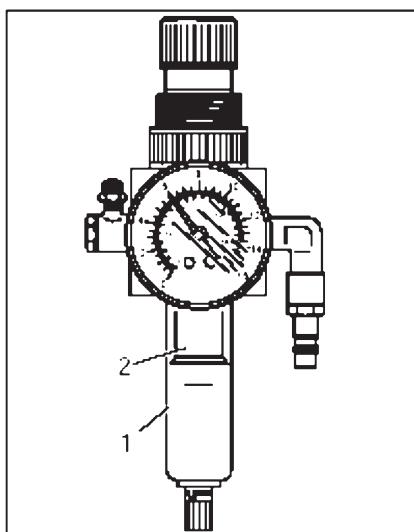

将水杯1中的水排空：

Draining water bowl 1:

- 在从空气滤清器/润滑器上拆下压缩空气软管后，水杯1中的水自动排空。
- Water bowl 1 drains itself automatically when the compressed-air hose is disconnected from the air-filter/lubricator.

清洁过滤网2：

Cleaning filter 2:

- 拧下水杯1。
- 取出过滤网2。
- 用压缩空气或者异丙基酒精
- 拧入过滤网2并将水杯1装回到空气滤清器/润滑器上。
- Unscrew water bowl 1.
- Take out filter 2.
- Clean filter 2 with compressed air or isopropyl alcohol.
- Screw in filter 2 and screw on water bowl 1.

8.03

清洁 Cleaning

每天清洁旋梭，旋梭腔和齿轮3，如果持续运行时，每天清洁多次。

Clean the hook, hook compartment and toothed wheel 3 every day, several times if in continuous use




关闭机器电源！

有被机器意外地起动伤害的危险！

Switch the machine off!

Danger of injury if the machine is started accidentally!

维护与保养 Care and Maintenance

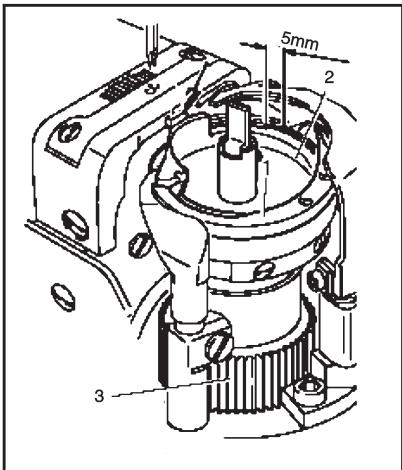

- 将针杆升到最高位置。
- 打开柱式底板冒，取出梭壳和梭心。
- 拧开内梭头舌1的螺钉。
- 转动手轮，直到梭壳2尖端进入旋梭的导槽内大约5mm。
- 取出梭壳2。
- 用石蜡清洁旋梭槽。
- 当放入梭壳2时，要确保梭壳2的凸出鼻端部分啮合入针板的凹槽中。
- 拧紧内梭头舌1的螺钉并关闭底板帽。
- Bring the needle bar to its highest position.
- Open the post cap and remove the bobbin case cap and the bobbin.
- Unscrew hook gib 1.
- Turn the hand wheel until the point of bobbin case 2 penetrates into the groove of the hook race approx. 5mm.
- Remove bobbin case 2.
- Clean th hook race with paraffin.
- When inserting the bobbin case 2, ensure that the horn of the bobbin case 2 engages in the groove of the needle plate.
- Screw hook gib 1 back on and close the post cap.

8.04


给旋梭加油 Oiling the hook



关闭机器电源！
有被机器意外地起动伤害的危险！

Switch the machine off!

Danger of injury if the machine is started accidentally!

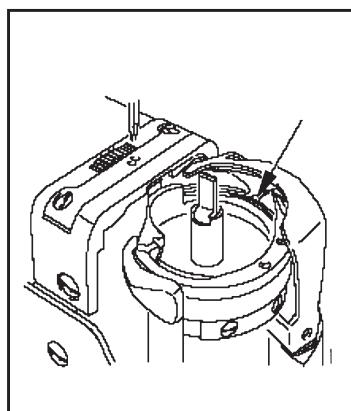


- 每天注1-2滴油到内梭头舌的孔1中。
- 在机器试车前及在长期停机后，注入几滴油到旋梭的槽中（参见箭头所示）。
- Pour 1-2 drops of oil into hole 1 of the hook gib daily.
- Before commissioning the machine, and after long periods out of operation, pour a few drops of oil into the hook race (see arrow).

维护与保养 Care and Maintenance

8.05

旋梭润滑油盒 Oil bowl for hook lubrication

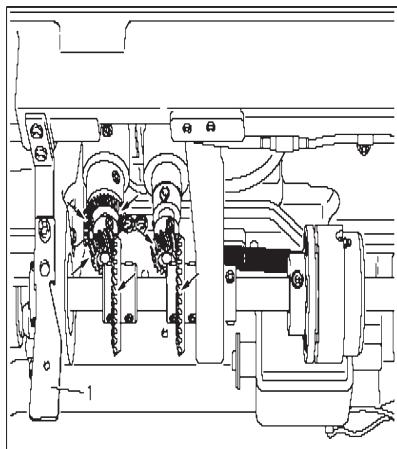

在每次开机前检查油量。必须始终保持油盒1中有油。

Check the oil level before each use.
There must always be oil in reservoir 1.

如果需要可通过加油孔加油。
If required refill oil through hole.



只允许使用在40°C时平均粘度为22.0 mm²/s和在15°C时密度为0.865 g/cm³的润滑油。



Use only oil with a mean viscosity of 22.0mm²/s at 40°C and a density of 0.865g/cm³ at 15°C.


8.06

给线润滑系统的油盒加油 Filling the oil reservoir of the thread lubrication unit



在每次开机前检查油量。
必须保持油盒1中始终有油。

Control the oil level before each use.
There must always be oil in the reservoir 1.

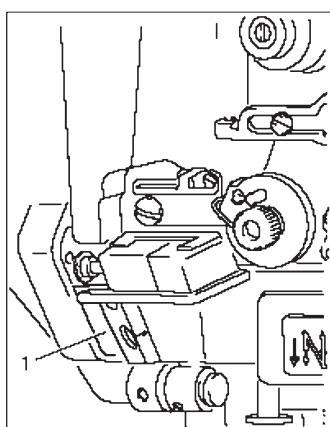

- 如果需要可通过加油孔加油到标记处。
● If necessary, fill oil up to mark through hole.

我们推荐使用线润滑油。
We recommend thread lubricating oil .

维护与保养 Care and Maintenance

8.07

给伞齿轮 润滑

Lubricating the bevel gears



关闭机器电源！

有被机器意外地起动伤害的危险！

Switch the machine off!

Danger of injury if the machine is started accidentally!

- 所有伞齿轮 每 年 必须加一次新油脂。
- 向后翻转机头到支承件上。
- All bevel gears must be supplied with new grease once a year.
- Tilt the sewing head back onto the support.



如图显示出 9620机型的伞齿轮 。

Fig. shows the bevel gears of the 9620.

- 涂油脂到齿轮的全部齿侧面（见箭头所示）。
- 在将机头放回垂直位置时，先向后按翻转保险1，并用双手将机头放回垂直位置。
- Apply grease to all the tooth flanks and the rack (see arrows).
- To set the sewing head upright, press tilt lock 1 backwards and set the sewing head upright using both hands.



必须用双手将机头放回垂直位置

有在机头和抬板之间被挤伤的危险！


Use both hands to set the sewing head upright!

Danger of crushing between the sewing head and the table top!



我们推荐使用滴点大约为150°C含钠油脂。

We recommend sodium grease with a dripping point of approx.150C.

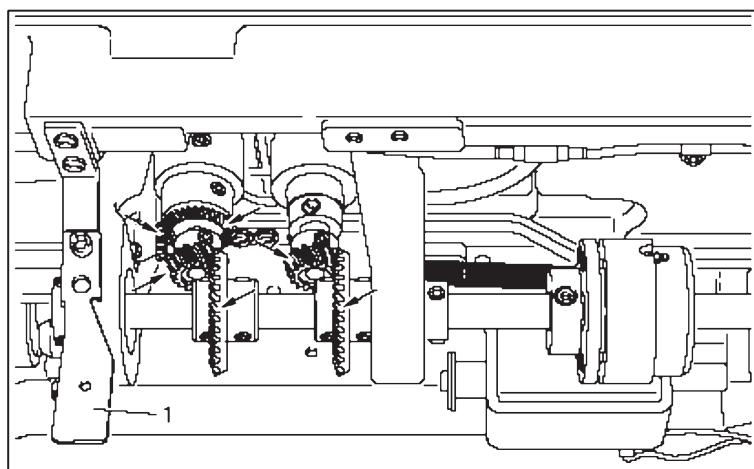

调整 Adjustment

9

调整 Adjustment



除非有特别说明,否则在所有调整工作中必须将机器从电源和压缩空气供给系统上断开!
有被机器意外地起动伤害的危险!
Unless stated otherwise, during all adjustment work the machine must be disconnected from electric and pneumatic power supply!
Danger of injury if the machine is started accidentally!

9.01

对调整工作的提示

Notes on adjustment

- 本章中所述的所有调整工作都是针对全部安装完毕的机器。并且只允许由受过相应培训的专业人员来完成。
- 那些在检查和调整工作中需要拆下并重新装上的机器盖板在文章中将不再提及。
- 后续章节的顺序按照机器进行全部调整的逻辑工作顺序排列。如果仅是有目的地完成某些单项的工作步骤，则要注意其前、后章节。
- 写在括号()内的螺钉、螺母是用来固定机器的零部件，它们必须在调整工作之前松开，并在调整工作之后再重新拧紧。
- All following adjustment are based on a fully assembled machine and may only be carried out by expert staff trained for this purpose.
- Machine covers, which have to be removed and replaced to carry out checks and adjustments, are not mentioned in the text.
- The order of the following chapters corresponds to the most logical work sequence for machines which have to be completely adjusted. If only specific individual work steps are carried out, both the preceding and following chapters must be observed.
- Screws, nuts indicated in brackets () are fastenings for machine parts, which must be loosened before adjustment and tightened again afterwards.

9.02

工具、量规和其它辅助材料

Tools, guages and other accessories

- 1 套头部宽度2至10 mm的螺丝刀
- 1 套开口尺寸7 至 13 mm的开口扳手。
- 1 套1.5 至 6 mm 的内六角螺钉扳手。
- 1 个夹持工具。
- 1 把金属尺子。
- 1 个量规。
- 缝纫线和试缝材料。
- 1 set of screwdrivers with blade widths from 2 to 10 mm
- 1 set of open ended wrenches with opening sizes from 7 to 13 mm
- 1 set of allen keys from 1.5 to 6mm
- 1 clamp
- 1 metal ruler
- 1 gauge
- Sewing thread and test material

调整 Adjustment

9.03 调整基础机器

Adjusting the basic machine

9.03.01 在9610机型上从缝纫方向上看机针的位置

Needle position in sewing direction on the 9610

规则


当将线迹长度设置到最小值，从向缝纫方向看，机针应该位于针板上针孔的中心。

Requirement

With the stitch length set at its minimum, the needle should be positioned in the centre of the needle hole, as seen in the direction of sewing.



- 设置到最小的线迹长度。
- 按照规则调整针杆（螺钉1）。
- Set the minimum stitch length.
- Adjust needle bar (screw 1) according to the Requirement.

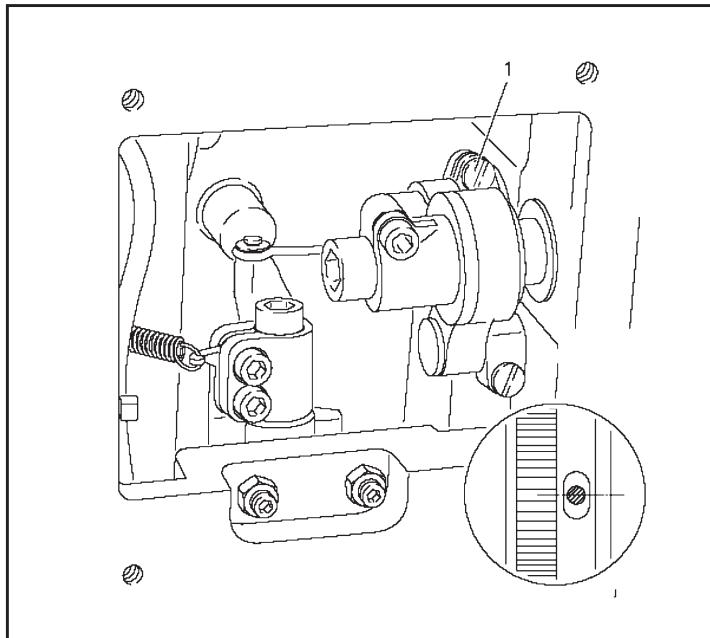

调整 Adjustment

9.03.02 在9620机型上从缝纫方向看机针的位置

Needle position in sewing direction on the 9620

规则


从缝纫方向看，机针应该位于针板上针孔的中心。

Requirement

The needle should be positioned in the centre of the needle hole as seen in the direction of sewing.



- 按照规则调整针杆（螺钉1和2）。
- Adjust needle bar (screws 1 and 2) according to the Requirement.

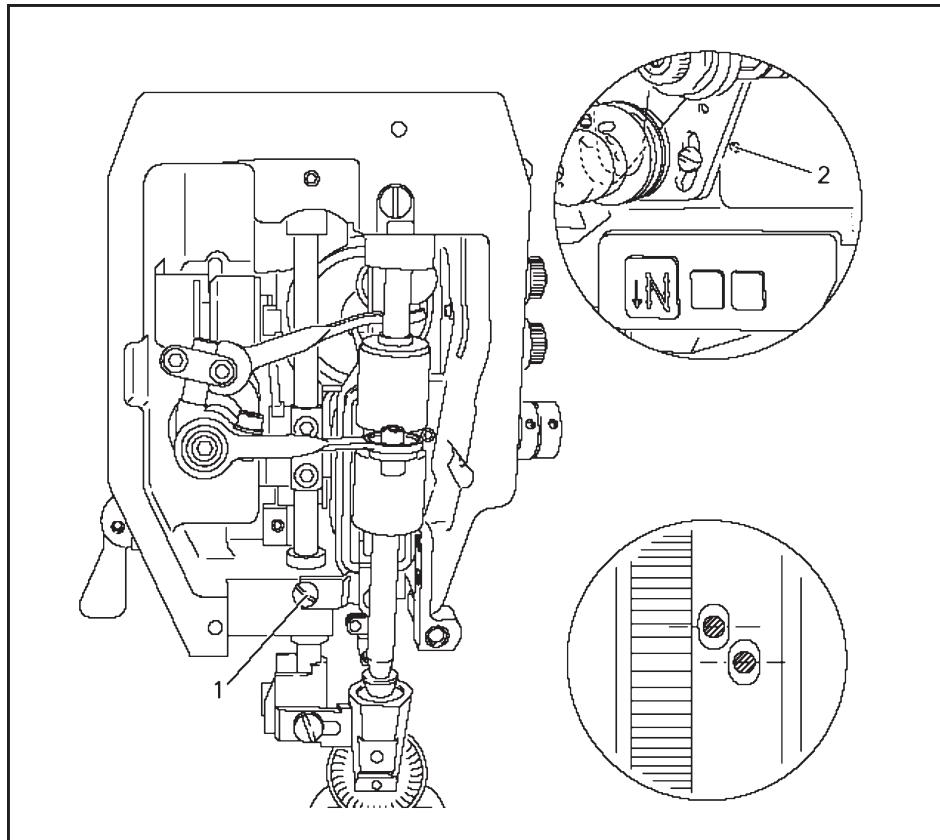

调整 Adjustment

9.03.03 初步调整针的高度

Preliminary adjustment of the needle height

规则


当针杆位于上死点时，在针尖到针板之间必须有大约21 mm的距离。

Requirement

When the needle bar is at top dead centre, there must be a clearance of approx. 21mm between the needle point and the needle plate.



- 按照规则调整针杆1（螺钉2），不要转动针杆。
- Adjust needle bar 1 (screw 2). Without turning it, according to the Requirement.

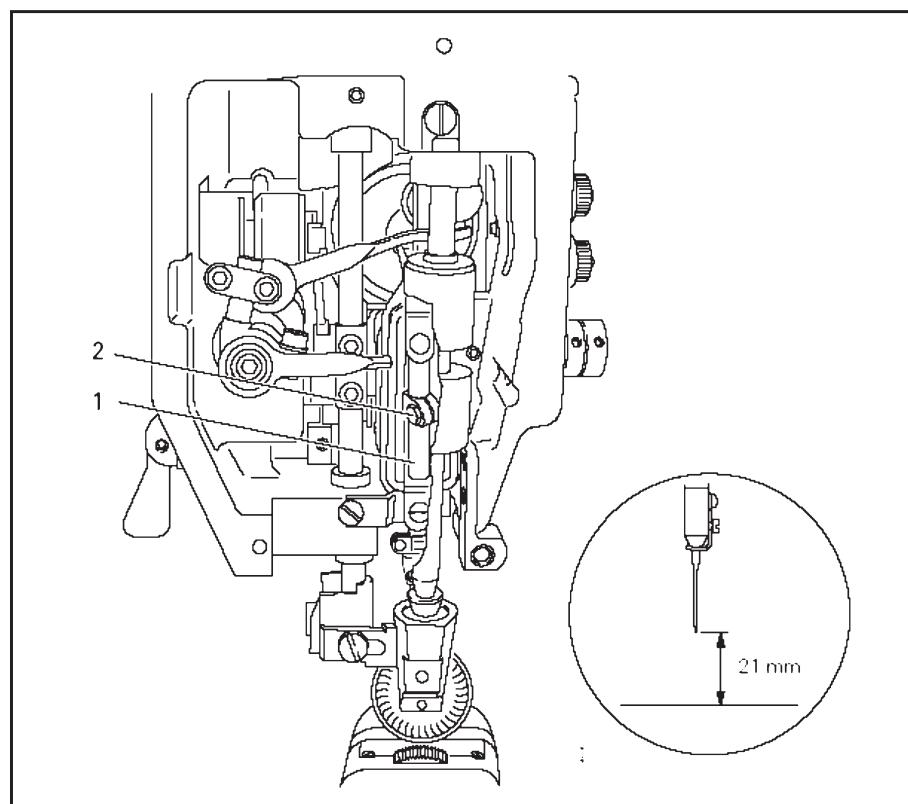

调整 Adjustment

9.03.04

在 9620 机型上针的上升，旋梭到针的距离，针的高度和护针器

**Needle rise, hook clearance, needle height and needle guard
on the 9620**

规则


在两个旋梭上，将针杆置于在下死点之后上升 **2.0 mm** 处：

1. 旋梭尖必须位于针的中心，旋梭到针的距离是 **0.05 至 0.1 mm**。
2. 针眼孔的上边缘必须在旋梭尖下面 **0.8 至 1.0 mm**。
3. 护针器 **9** 必须轻轻地靠着机针。

Requirement

With the needle bar positioned **2.0 mm** after bottom dead centre on both hooks

1. the hook point must be at needle centre with a hook-to-needle clearance of **0.05 to 0.1 mm**.
2. the top of the needle eye must be **0.8 to 1.0 mm** below the hook points.
3. The needle guard **9** must touch the needle lightly.

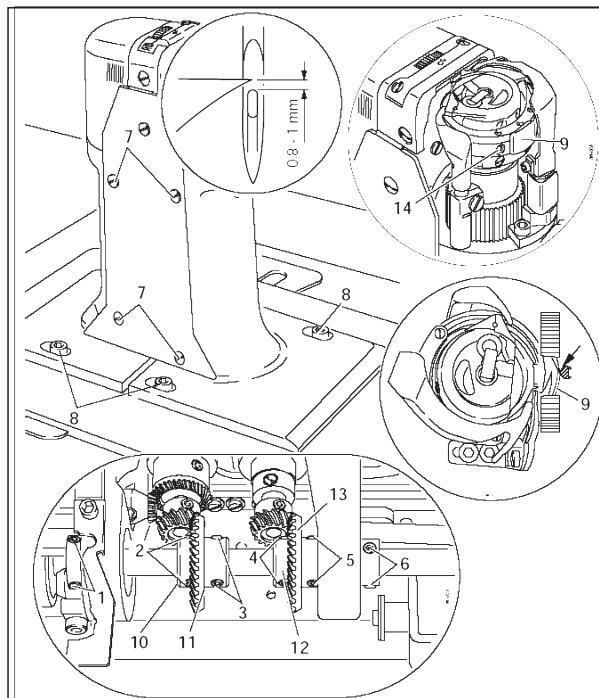

调整 Adjustment




- 拧松螺钉**1, 2, 3, 4, 5, 6**和**7**。
- 轻微地拧松螺钉**8**。
- 将针杆置于下死点后上升**2.0 mm** 处:
- 将两个旋梭尖都调整到机针中心，确信护针器**9**都没有造成机针偏斜。
- 根据第**2**条规则调整机针的高度。
- 按照第**1**条规则调整两个旋梭台柱并拧紧螺钉**8**。
- 拧紧螺钉**1**和**6**。
- 确信各伞齿轮 之间都有一定间隙并运转自如，拧紧螺钉**3**和**5**。
- 用限位圈**10**靠住伞齿轮**11**，拧紧螺钉**2**。
- 用限位圈**12**靠住伞齿轮**13**，拧紧螺钉**4**。
- 在旋梭柱的两边拧紧螺钉**7**。
- 按照第**3**条规则，在两个旋梭上调整护针器**9**（螺钉**14**）。
- Loosen screws **1, 2, 3, 4, 5, 6** and **7**.
- Loosen screw **8** slightly.
- Bring needle bar to **2.0 mm** past bottom dead centre.
- Set both hook points at needle centre, making sure that the needles are not deflected by needle guard **9**.
- Adjust needle height according to Requirement **2**.
- Adjust both hook posts according to Requirement **1** and tighten screw **8**.
- Tighten screws **1** and **6**.
- Making sure that there is some play in the bevel gear, tighten screws **3** and **5**.
- With retaining collar **10** touching bevel gear **11** tighten screws **2**.
- With retainting collar **12** touching bevel gear **13** tighten screw **4**.
- Tighten screws **7** on both sides of the post.
- Adjust needle guard **9** (screw **14**) on both hooks according to Requirement **3**.



当更换旋梭时，确信两个标记**15**和**16**在同一边。

When a hook is changed, make sure that the markings **15** and **16** are both on one side.

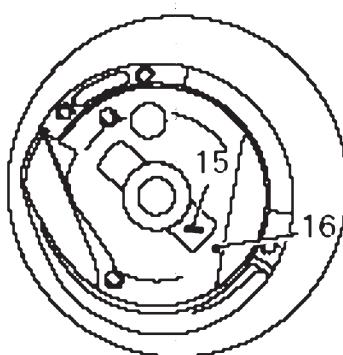

调整 Adjustment

9.03.05 在9610机型上针的上升，旋梭到针的距离，针的高度和护针器 Needle rise, hook clearance, needle height and needle guard on the 9610

规则


当设置线迹长度为“0.8”，将针杆置于在下死点之后上升2.0 mm 处：

1. 旋梭尖必须位于针的中心，旋梭到针的距离是0.05 至 0.1 mm。
2. 针眼孔的上边缘必须在旋梭尖下面0.8 至1.0 mm。
3. 护针器6必须轻轻地靠着机针。

Requirement

With the needle bar positioned 2.0mm after bottom dead centre and the stitch length set at “0.8”:

1. the hook point must be at needle centre with a hook-to-needle clearance of 0.05 to 0.1mm.
2. the top of the needle eye must be 0.8 to 1.0 mm below the hook point.
3. The needle guard 6 must touch the needle lightly.

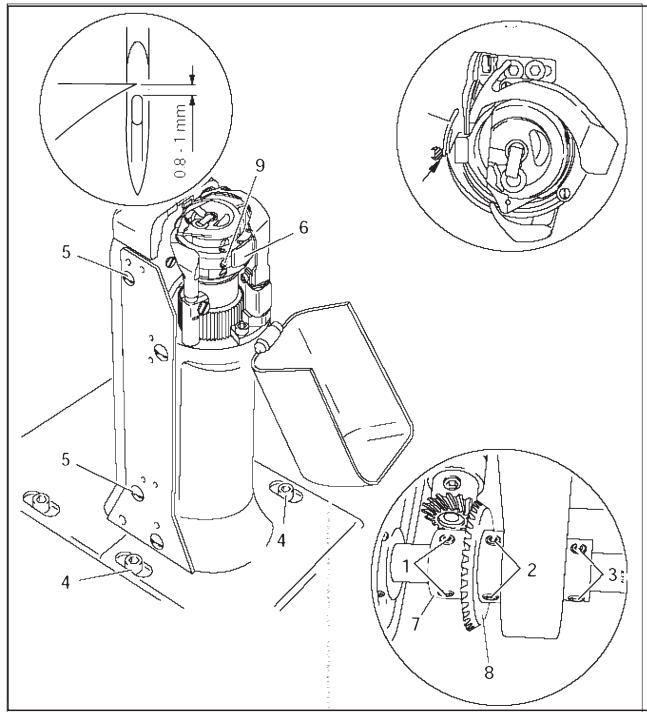

调整 Adjustment




- 设置线迹长度为 "0.8".
- 拧松螺钉**1, 2, 3, 4和5**.
- 将针杆置于下死点后上升2.0 mm 处:
- 将旋梭尖调整到机针中心, 确信护针器**6**没有造成机针偏斜。
- 按照第**2**条规则调整机针的高度。
- 按照第**1**条规则调整旋梭台柱并拧紧螺钉**4**。
- 确信伞齿轮 之间有一定间隙并运转自如, 拧紧螺钉**2**。
- 用限位圈**7**靠住伞齿轮**8**, 拧紧螺钉**1**。
- 按照第**3**条规则调整护针器**6** (螺钉**9**).
- Set stitch length at "0.8".
- Loosen screw **1, 2, 3, 4 and 5**.
- Bring needle bar to 2.0 mm past bottom dead centre.
- Set hook point at needle centre, making sure that the needle is not deflected by needle guard **6**.
- Adjust needle height according to **Requirement 2**.
- Adjust hook post according to **Requirement 1** and tighten screw **4**.
- Making sure that there is some play in the bevel gear, tighten screws **2**.
- With retaining collar **7** tourching bevel gear **8** tighten screws **1**.
- Adjust needle guard **6** (screw **9**) according to **Requirement 3**.



当更换旋梭时, 确信两个标记**10**和**11**在同一边。

When the hook is changed, make sure that the markings **10** and **11** are both on one side.

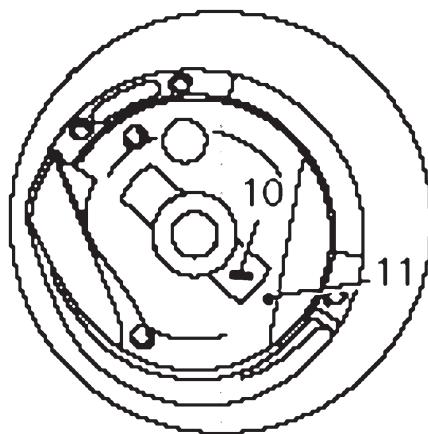

调整 Adjustment

9.03.06 在9620机型上从垂直于缝纫方向看机针的位置

**Needle position crosswise to sewing direnction on the
9620**


规则

当从垂直于缝纫方向看时，机针都必须位于针板的针孔中心。

Requirement

As seen crosswise to the sewing direction, the needles must penetrate in the centre of their needle holes.

- 按照规则通过移动支承板1（螺栓2在柱式底板的两边）来调整。
- Shift bearing plate 1 (screws 2, on both sides of the post) according to the Requirement.

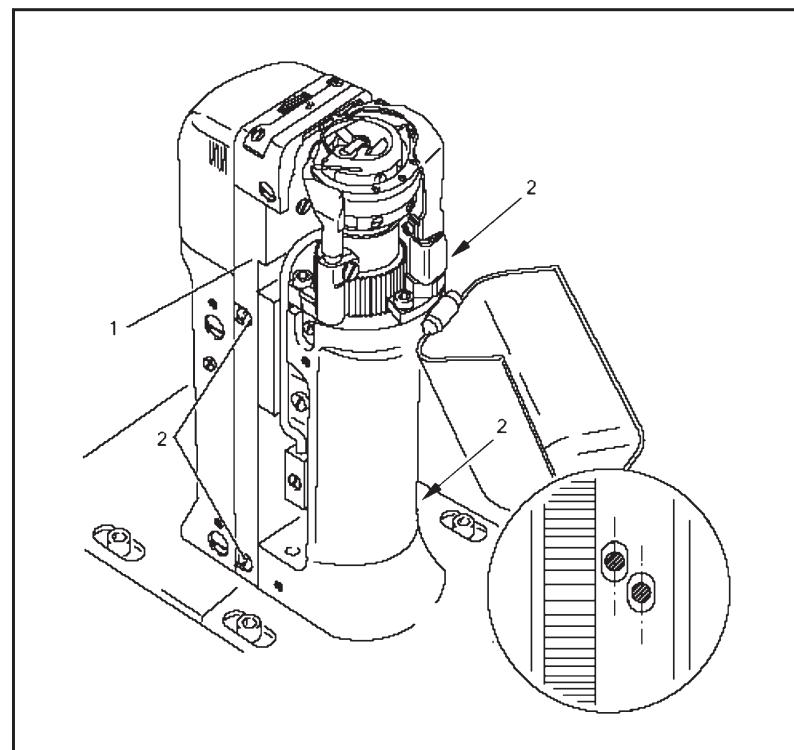

调整 Adjustment

9.03.07 在 9610 机型上从垂直于缝纫方向看机针的位置

Needle position crosswise to sewing direction on the 9610

规则


当从垂直于缝纫方向看时，机针必须位于针板的针孔中心。

Requirement

As seen crosswise to the sewing direction, the needle must penetrate in the centre of the needle hole.



- 按照规则通过调整进给轮台柱1（螺栓2, 3和4）来进行调整。
- Adjust feed wheel post 1 (screws 2, 3 and 4) according to the Requirement.

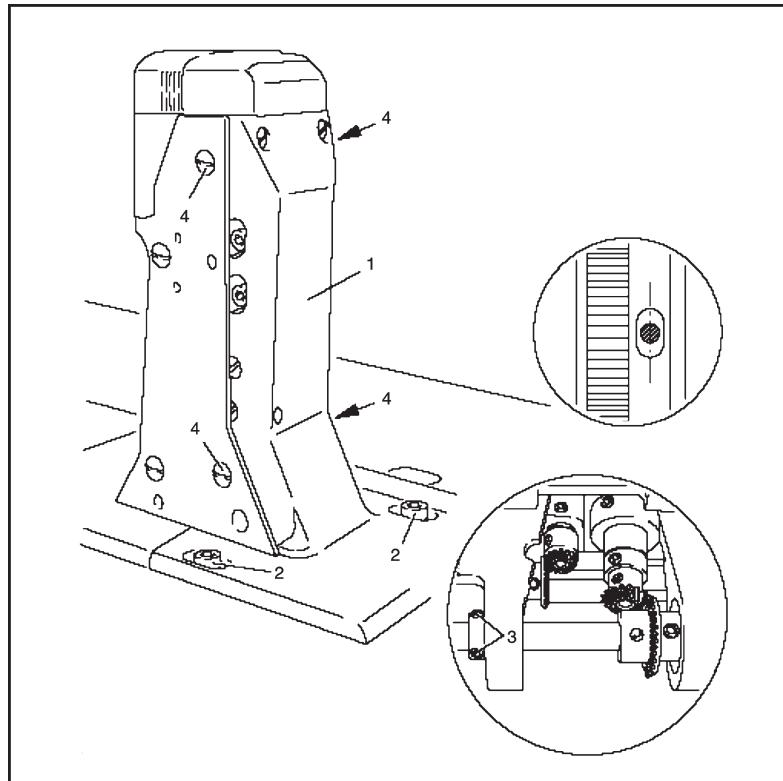

调整 Adjustment

9.03.08 开梭器的高度和行程

Height and stroke of the bobbin case opener

规则


1. 开梭器1和梭壳架3的上边缘应该处于同一水平面。
2. 当开梭器1使梭壳偏转到其最远点时，梭壳的凸出鼻端部分应该距离针板凹槽的后边缘**0.3 至 0.5 mm**。

Requirement

1. The top edges of the bobbin case opener 1 and bobbin case 3 should be on one level.
2. when the bobbin case opener 1 has deflected the bobbin case to its furthest point, the catch of the bobbin case should be from **0.3 to 0.5 mm** from the back edge of the needle plate recess.



- 按照第1条规则调整开梭器1（螺钉2）。
- 旋转手轮直到开梭器使梭壳偏转到其最远点。
- 按照第2条规则调整开梭器1（螺钉2）。
- Adjust bobbin case opener 1 (screw 2) in accordance with Requirement 1.
- Turn the balance wheel until the bobbin case opener has deflected the bobbin case to its furthest point.
- Adjust bobbin case opener 1 (screw 2) in accordance with Requirement 2.

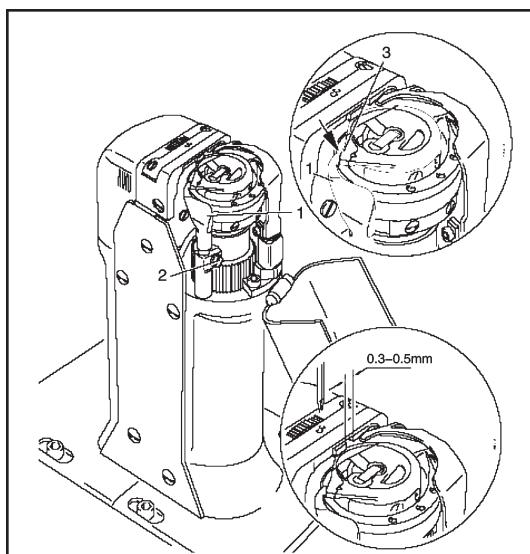

在 9620 机型上，在右边的柱台上必须重复进行上述调整工作。

根据所使用的缝纫线粗细，允许对第2条规则的调整做出改变。

On the 9620 these
adjustments must be repeated
on the right post.
Depending on the thread size,
a variation of the setting in
Requirement 2 is permitted.

调整 Adjustment

9.03.09 在9620机型上进给轮高度的调整

Height of the feed wheel on the 9620

规则


1. 当在进给轮**4**上施加压力时，它应凸出针板平面一个齿高（约**0.8 mm**）。
2. 当没有向进给轮**4**上施加压力时，其在垂直方向上应有**0.3 mm**的间隙。

Requirement

1. when pressure is applied to the feed wheel 4, it should protrude from the needle plate by tooth height (approx. **0.8 mm**).
2. when no pressure is applied to the feed wheel 4, it should have a vertical play of approx. **0.3 mm**.



- 向外摆动滚轮压脚。
- 拧松螺钉**1**和**2**（每一种螺钉有两个）。
- 按照第**1**条规则调整驱动轮**3**，注意驱动轮**3**和进给轮**4**的齿要相互正确地啮合。
- 拧紧螺钉**1**。
- 按照第**2**条规则调整导向件**5**并拧紧螺钉**2**。
- Swing out the roller presser
- Loosen screws **1** and **2** (two screws each).
- Adjust drive wheel **3** according to Requirement **1**, taking care to see that the teeth of drive wheel **3** and feed wheel **4** lock into each other properly.
- Tighten screws **1**.
- Adjust guide **5** according to Requirement **2** and tighten screws **2**.

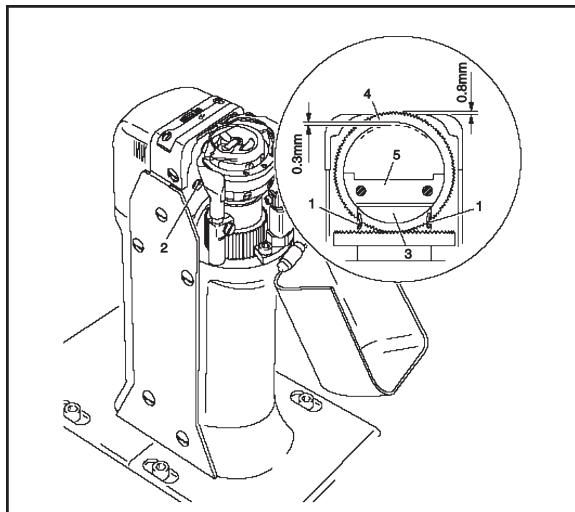

调整 Adjustment

9.03.10 在9610机型上进给轮高度的调整

Height of the feed wheel on the 9610、9610S

规则


进给轮应凸出针板平面一个齿高（约0.8 mm）。

Requirement

Feed wheel should protrude from the needle plate by tooth height (appro. 0.8 mm).



- 向外摆动滚轮压脚。
- 拧松螺钉1。
- 按照规则调整偏心销3（通过孔2容易拧动紧固螺钉）。
- 拧紧螺钉1。
- Swing out the roller presser
- Loosen screws 1.
- Adjust eccentric 3 (fastening screw accessible through hole 2)according.
- Tighten screws 1.

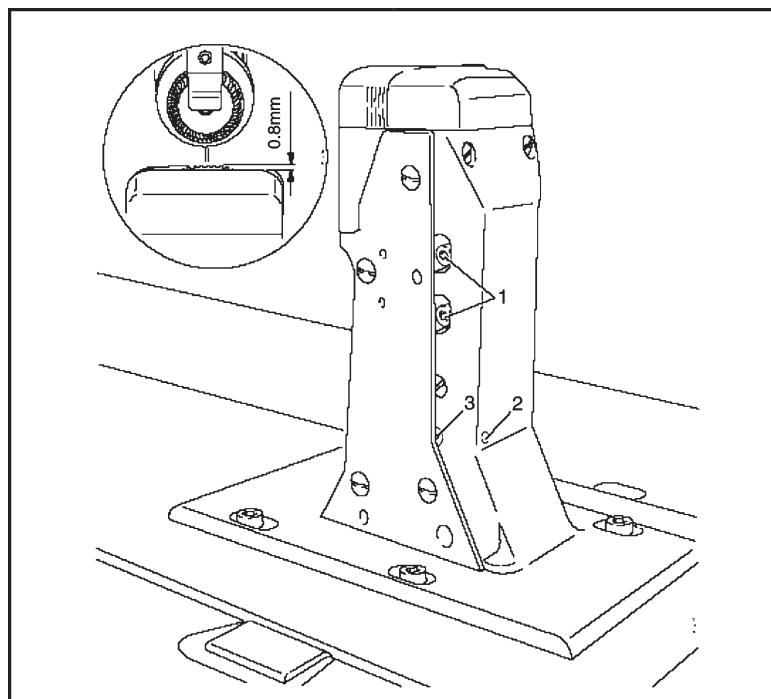

调整 Adjustment

9.03.11 线迹长度控制的偏心度调整 Stitch length control eccentric

规则


在设置为最大线迹长度的情况下，当机针从上死点下降到距针板上面 **3 mm** 时，曲柄**3**必须到达它的前反转点。

Requirement

When the needle (with maximum stitch length set), coming from top dead centre, is 3 mm above the needle plate, the crank **3** must have reached its front point of reversal.



- 设置最大线迹长度。
- 按照规则转动线迹长度控制装置**1**（螺钉**2**）来调整。
- Set the maximum stitch length.
- Turn stitch length control device **1** (screws **2**) according to Requirement.

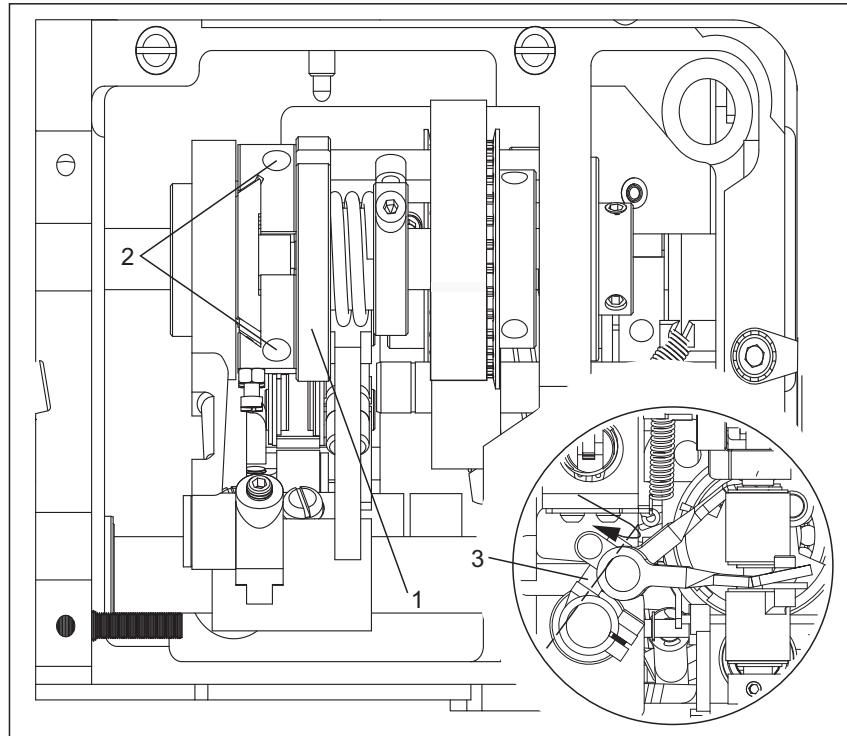

调整 Adjustment

9.03.12 线迹长度刻度盘调整 Stitch length scale disk

规则


当线迹长度控制装置在适当位置被锁定，而且线迹长度设置在最大值时，在刻度盘1上最大字的标记线必须与皮带护罩凹槽的下边缘3处对齐。

Requirement

When the stitch length control device is locked in position, and the maximum stitch length is set, the marking line of the highest number on the scale disk 1 must be opposite the lower edge 3 of the belt guard recess.



- 设置最大线迹长度。
- 按照规则转动刻度盘1（螺钉2）来调整。
- Set the maximum stitch length.
- Turn the scale disk 1 (screw 2) according to the Requirement.

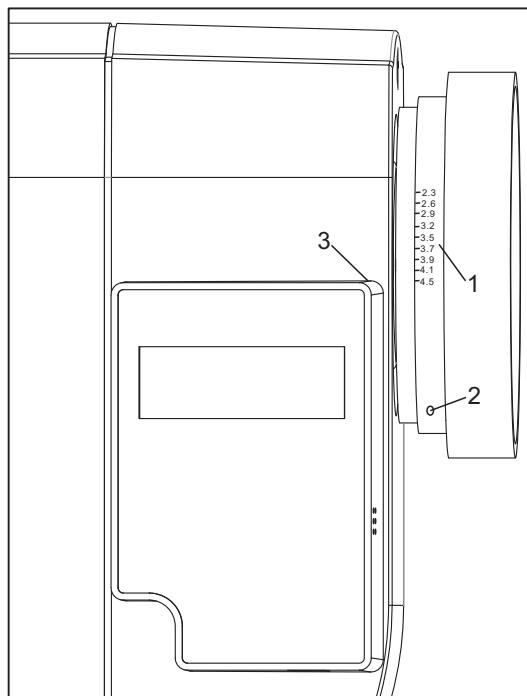

9.03.13 杆状曲柄到进给轮的传动调整 Shaft crank to feed wheel drive

规则


当将线迹设置在最大值，在转动手轮时连杆3（对9625和9610机型是连杆3和4）必须能运动自如。

Requirement

When the maximum length is set, the linkage rod 3, or linkage rods 3 and 4 on the model 9625 and 9610, must be able to move freely when the balance wheel is turned.



- 设置最大线迹长度。
- 按照规则扭转和移动杆状曲柄1（螺钉2）来调整。
- Set the maximum stitch length.
- Twist or shift the shaft crank 1 (screw 2) according to the Requirement.

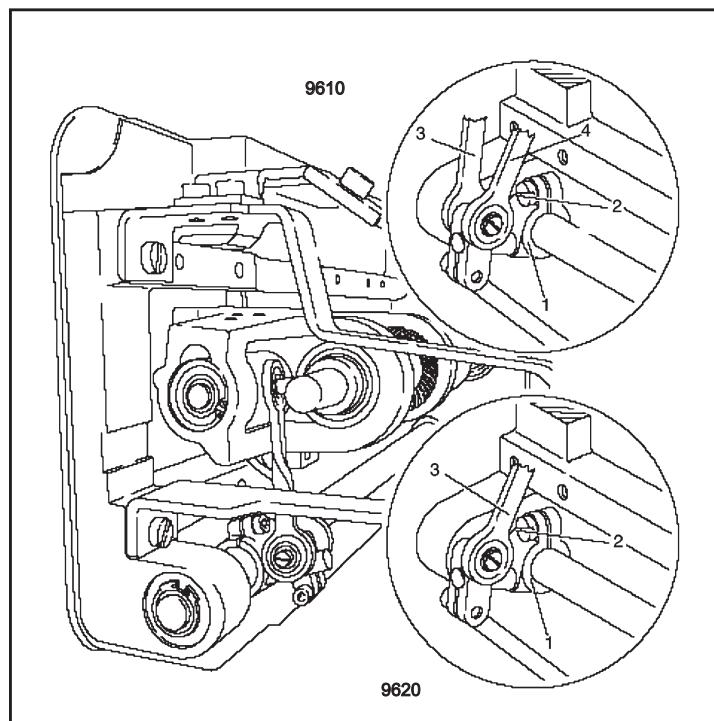

调整 Adjustment

9.03.14 杆状曲柄到滚轮压脚的传动调整

Shaft crank to roller presser drive

规则


当将线迹设置在最大值，在转动手轮时连杆3和4在左右转向点都必须能运动自如。

Requirement

When the maximum stitch length is set, the linkage rods 3 and 4 must be able to move freely at their left and right point of reversal when the balance wheel is turned.



- 设置最大线迹长度。
- 按照规则扭转带夹头杆状曲柄1（螺钉2）来调整。
- Set the maximum stitch length
- Twist or shift the shaft crank 1 (screw 2) according to the Requirement.

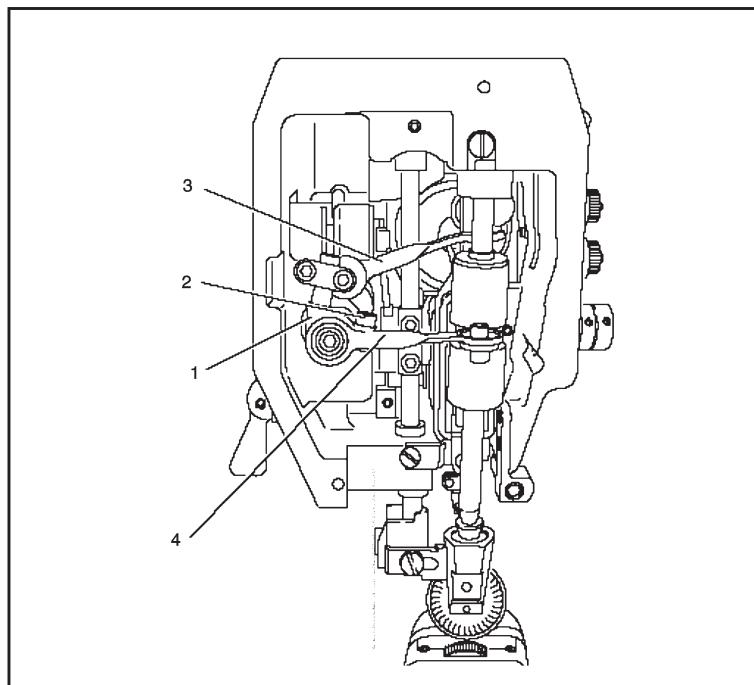

调整 Adjustment

9.03.15 滚轮压脚和进给轮之间的距离 Roller presser and feed wheel

规则


当压脚扳手抬起时，在滚轮压脚和进给轮之间的距离必须是7 mm。

Requirement

When the presser bar lifter is raised, the clearance between the roller presser and the feed wheel must be 7 mm.



- 抬起压脚扳手。
- 按照规则调整压脚杆1（螺钉 2）。确保滚轮压脚与进给轮平行。
- Raise the presser bar lifter.
- Adjust the presser bar 1 (screws 2) according to the Requirement.
Make sure that the roller presser is parallel to the feed wheel.

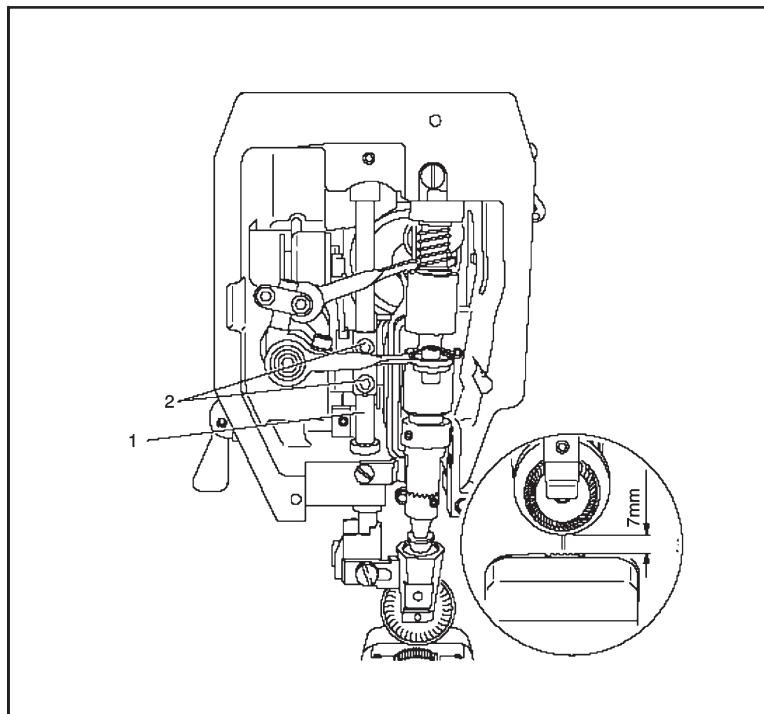

调整 Adjustment

9.03.16 滚轮压脚调整

Roller presser

规则

当滚轮压脚1与进给轮5接触时，它必须满足：

1. 从缝纫方向看，与进给轮5平行。
2. 从垂直于缝纫方向看，位于针的中心（在 9620 机型上位于左针的心）。
3. 从垂直于缝纫方向看，要尽可能地靠近针（在 9620 机型上要尽可能地靠近左针）。


Requirement

When the roller presser 1 is touching the feed wheel 5 it must:

1. be parallel to feed wheel 5, as seen in the direction of sewing.
2. be in the centre of the needle (on model 9620 the left needle), as seen in the direnction of sewing.
3. be as near as possible to the needle (on model 9620 the left needle), as seen crosswise to the direction of sewing.



- 抬起滚轮压脚。
- 在以后的调整中要始终遵守第1条规则。
- 按照第2条规则调整滚轮压脚1（螺钉2）。
- 降下滚轮压脚1，靠在进给轮5上。
- 按照第3条规则调整滚轮压脚支架3（螺钉4）。
- Raise the roller presser.
- Always observe Requirement 1 for subsequent adjustments.
- Adjust roller presser 1 (screw 2) according to Requirement 2.
- Lower roller presser 1 to rest on feed wheel 5.
- Adjust roller presser bracket 3 (screw 4) according to Requirement 3.

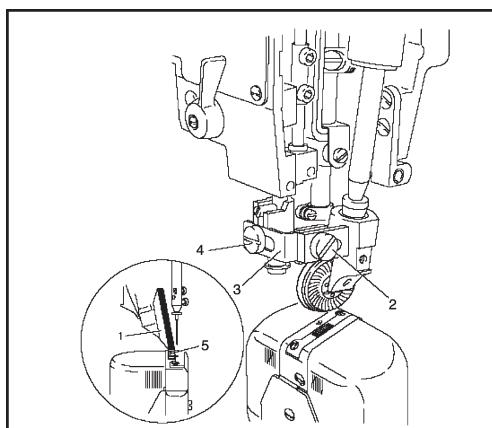

当缝纫缝式为曲率半径很小的曲线时，滚轮压脚必须向操作者方向移动一点。

When sewing very tight curves, the roller presser 1 must be moved a little towards the operator.

调整 Adjustment

9.03.17 按线迹长度刻度盘的指示值调整线迹长度 Stitch length on stitch length scale

规则


当将线迹长度设置为“3”，在针穿入一条皮革上11次后，从第一个到最后一个针孔间的总长度必须是30 mm。

Requirement

When the stitch length is set at 3 , and after the needle has entered a strip of leather 11 times, the total length from the first to last needle penetration must be 30 mm.



- 设置线迹长度为“3”。
- 通过转动手轮，使针穿刺11次并测量线缝总长度。
- 按照规则调整夹紧件1（螺钉2）。
- Set stitch length “3” .
- By turning the balance wheel, let the needle enter 11 times and measure the total length.
- Adjust clamp 1 (screw 2) according to the Requirement.
夹紧件1不能倾斜地安装到摇轴上。
Clamp 1 must not be positioned diagonally to the rock shaft!

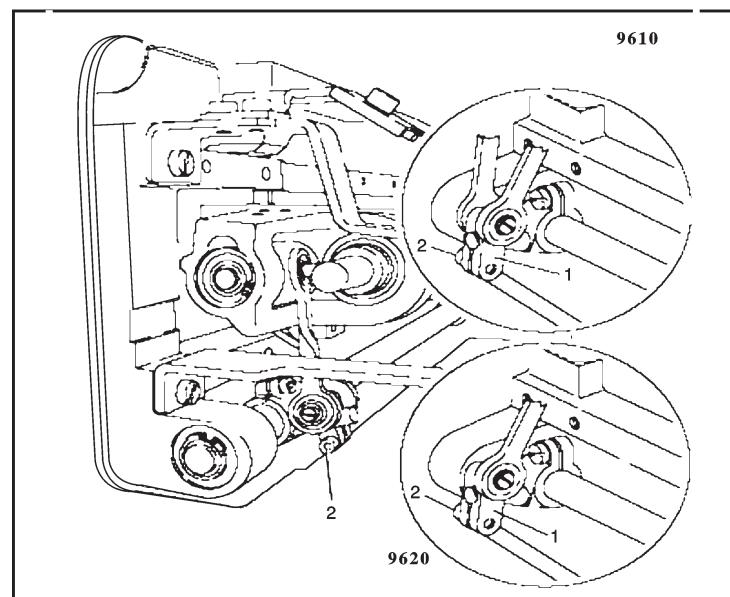

调整 Adjustment

9.03.18 滚轮压脚和进给轮的同步调整

Synchronization of roller presser and feed wheel

规则

当针穿刺了**30**次后，在下层和上层皮革上从第一个到最后一个针刺孔间的总长度应该是相同的。

Requirement


After **30 needle penetrations** in a strip of leather the total length from the first the the last penetration should be the same, both in the lower and the upper leather layer.



- 设置线迹长度为“**3**”。
- 通过转动手轮，使针穿刺**30**次。
- 比较上、下层皮革上所缝纫的总长度。
- 按照规则调整夹紧件**1**（螺钉**2**）。
- Set stitch length “**3**”.
- By turning the balance wheel, let the needle enter **30 times**.
- Compare the total sewn length of the lower and upper leather layer.
- Adjust clamp 1 (screw 2) according to the **Requirement**.

 夹紧件**1**不能倾斜地安装到摇轴上。

Clamp 1 must not be positioned diagonally to the rock shaft.

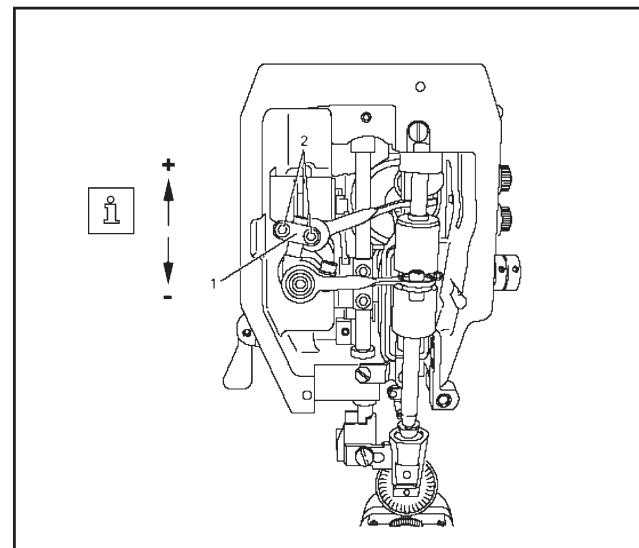

调整 Adjustment

9.03.19 压料器 (仅 9620机型才有) Retainer(only on 9620)

规则

压料器1必须:

1. 从缝纫方向看, 应尽可能地靠近针, 并且
2. 从垂直于缝纫方向看, 位于针的中心。
3. 当滚轮压脚下降时, 在压料器1和缝料间的距离必须是0.2 - 0.3 mm。


Requirement

The retainer 1 must:

1. be as close as possible to the needle, as seen in the direction of sewing .
2. be in the centre of the needle, as seen crosswise to the direction of sewing.
3. when the roller presser is lowered, the distance between the retainer 1 and the workpiece must be 0.2-0.3 mm.



- 按照第3条规则调整压料器器1（螺钉2）。
- 按照第1条和第2条的规则调整支架3（螺钉4）。
- Adjust retainer 1 (screw 2) according to Requirement 3.
- Adjust bracket 3 (screw 4) according to Requirement 1 and 2.

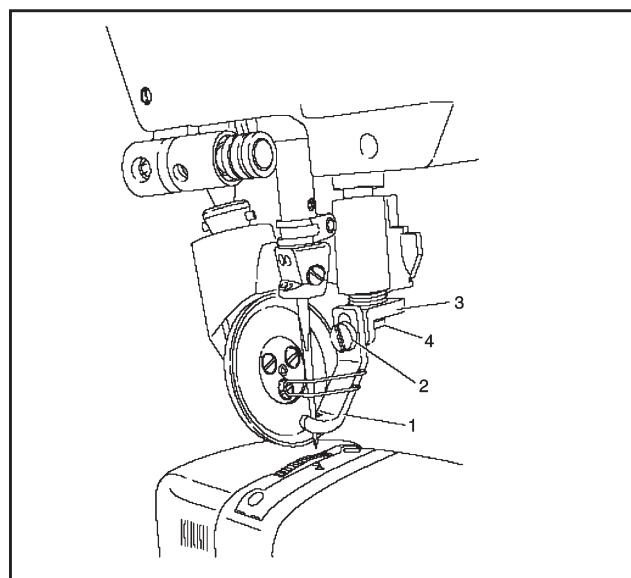

调整 Adjustment

9.03.20

膝提杆

Knee lever

规则


1. 在滚轮压脚抬起前，膝提杆必须有一个微小的空程。
2. 当膝提杆被挤压到最远端时，滚轮压脚扳手必须自动地落下。
3. 膝提杆组件的杆件5必须与底板成大约75° 角。

Requirement

1. before the roller presser rises, the knee lever must still have a slight play.
2. when the knee lever is raised as far as possible, the lever for the roller presser must drop automatically.
3. knee lever bar 5 must be at an angle of approx. 75° to the bedplate.



- 按照第3条规则调整螺栓1（螺母2）。
- 按照第2条规则调整螺栓3（螺母4）。
- 按照第3条规则调整杆件5（螺栓6）。
- Adjust screw 1 (nut 2) according to Requirement 3.
- Adjust screw 3 (nut 4) according to Requirement 2.
- Set bar 5 (screws 6) according to Requirement 3.

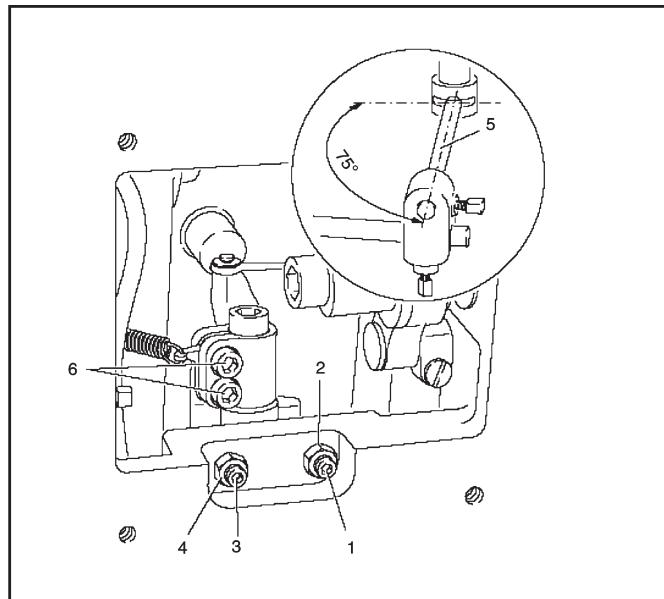

调整 Adjustment

9.03.21 针线松线调整 Needle thread tension release

规则


1. 当压脚扳手抬起时，夹线板3应该被挤开最少0.5 mm。
2. 当滚轮压脚下降时，夹线器必须完全地起功能作用。

Requirement

1. when the presser bar lifter is raised, the tension discs 3 should be pressed at least 0.5 mm apart.
2. When the roller presser is lowered, the tension must be fully effective.



- 按照规则校正、调整夹线器安装板1和压力板2。
- Align tension mounting plate 1 and pressure plate 2 according to Requirement.

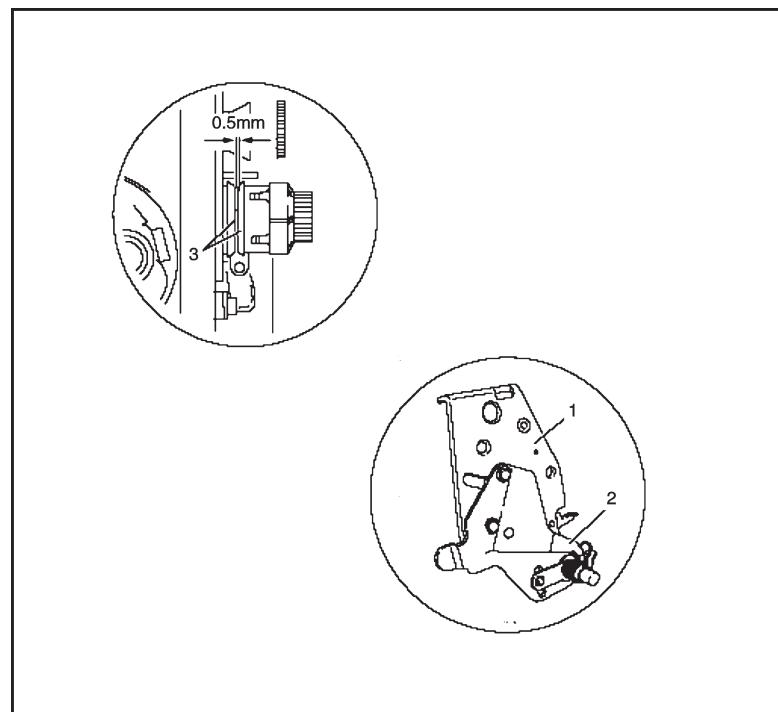

调整 Adjustment

9.03.22 挑线簧调整(9610机型) Thread check spring (9610 model)

规则

- 当针尖穿刺缝料时,挑线簧7应完成运动动作 (弹簧行程大约7 mm)。
- 在针线绕着旋梭形成最大线环时, 挑线簧7应从其支承件上轻微地上升。

Requirement

- the movement of thread check spring 7 should be completed when the needle point penetrate the fabric (spring stroke approx. 7 mm).
- when the largest thread loop is formed while the thread is passed around the hook, the thread check spring 7 should rise slightly from its support.




- 按照第1条规则调节支承件1 (螺钉2)。
- 转动螺钉3 (螺钉4) 以调整弹簧张力。
- 按照第2条规则调整导线钩5 (螺钉6)。
- Adjust support 1 (screw 2) according to Requirement 1.
- Adjust the spring tension by turning screw 3 (screw 4).
- Adjust the thread regulator 5 (screw 6) according to Requirement 2.



由于技术原因, 可能有必要改变弹簧行程和压力使其偏离指定值。向“+”方

向移动导线钩5 (螺钉6) (供线量增多); 或向“-”方向移动 (供线量减少)。

For technical reasons it may be necessary to deviate from the specified
spring stroke or spring tension. Move the thread regulator 5 (screw 6) towards
“+” (= more thread) or “-” (= less thread).

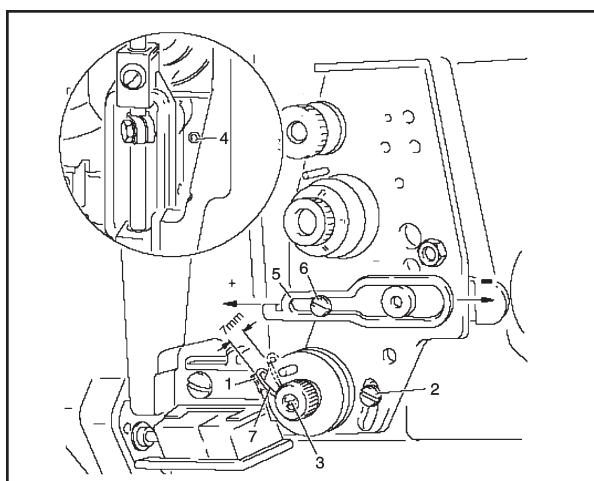

调整 Adjustment

9.03.23

挑线簧调整(9620机型)


Thread check springs (9620 model)

规则

1. 当针尖穿刺缝料时,挑线簧3和6应完成其运动动作(弹簧行程大约7 mm)。
2. 在针线绕着旋梭形成最大线环时, 挑线簧3和6应从其支承件1和9上轻微地上升。

Requirement

1. The movement of thread check springs 3 and 6 should be completed when the needle points penetrate the fabric (spring stroke approx. 7 mm).
2. when the largest thread loop is formed while the thread is passed around the hook, the thread check springs 3 and 6 should rise slightly from supports 1 and 9.

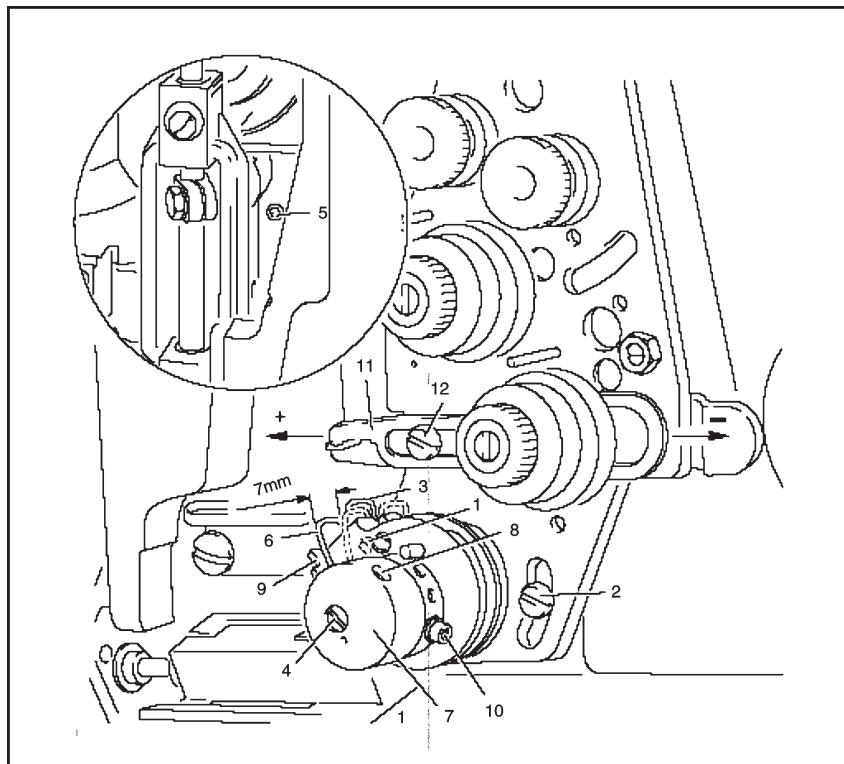

调整 Adjustment



- 按照第1条规则调节支承件1（螺钉2）。
- 转动螺钉4（螺钉5）以调整挑线簧3的张力。
- 转动套筒7（螺钉8）以调整挑线簧6的张力。
- 按照第1条规则调节支承件9（螺钉2）。（如果调整范围太低，支承件9可以换一个螺钉孔安装。）
- 按照第2条规则调整导线钩11（螺钉12）。
- Adjust support 1 (screw 2) according to Requirement 1.
- Adjust the spring tension of thread check spring 3 by turning screw 4 (screw 5).
- Adjust the spring tension of thread by checking spring 6 and 7 (screw 8).
- Adjust support 9 (screw 10) according to Requirement 1. (If the adjustment range is too low, support 9 can be screwed into another hole).
- Adjust the thread regulator 11 (screw 12) according to Requirement 2.



由于技术原因，可能有必要改变弹簧行程和压力使其偏离指定值。
向“+”方向移动调线器11（螺钉12）（供线量增加）；或向“-”方向移动（供线量减少）。

For technical reasons it may be necessary to deviate from the specified spring stroke or spring tension.

Move the thread regulator 11 (screw 12) towards “+”
(=more thread) or “-” (= less thread).

调整 Adjustment

9.03.24

绕线器 Bobbin winder

规则


- 当绕线器处于啮合状态时，绕轴必须可靠地被驱动。当绕线器处于脱离状态时，驱动轮1应不能造成摩擦轮5运动。
- 当在梭心上所绕的线距离梭心边缘1 mm时，绕线器应自动停止转动。

Requirement

- when the bobbin winder is engaged, the winding spindle must be driven reliably. When the bobbin winder is disengaged, the friction wheel 5 must not be moved by drive wheel 1.
- the bobbin winder must switch itself off, when the filled thread is about 1 mm from the edge of the bobbin.



- 按照第1条规则调整驱动轮1的位置（螺钉2）。
- 按照第2条规则调整销栓3的位置（螺钉4）。
- Position drive wheel 1 (screws 2) according to Requirement 1.
- Position bolt 3 (screw 4) according to Requirement 2.

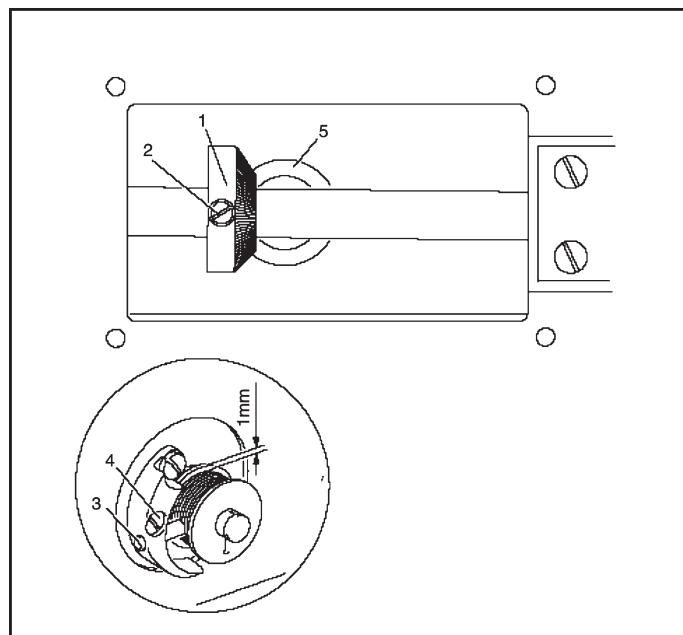

调整 Adjustment

9.03.25 滚轮压脚的压力调整 Pressure of roller presser

规则


缝料必须平稳地进给。在缝料上不应有可见压痕。

Requirement

The material must be fed smoothly. No pressure marks should be visible on the material.



- 按照规则通过螺钉1来调整滚轮压脚的压力。
- Adjust roller pressure with screw 1 according to the Requirement.

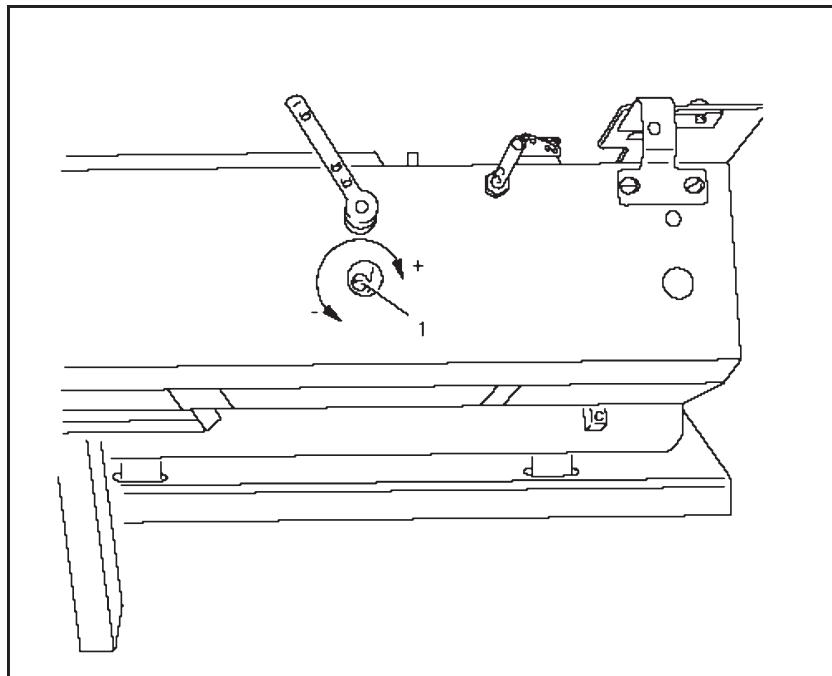

9.03.26

润滑
Lubrication


规则

在运行**10**秒钟后，在紧挨着旋梭的纸条上形成一条细线形油迹。

Requirement

After a running time of **10 seconds** a fine line of oil should form on a strip of paper held next to the hook.

- 检查是否加了油及是否油线中有空气。
- 让机器运转**2至3分钟**。
- Check whether oil has been filled in and that there is no air in the oil lines.
- Let the machine run for **2-3 min..**

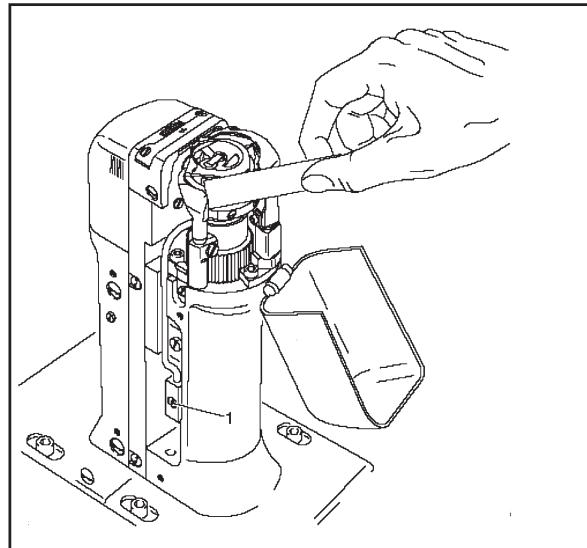

调整 Adjustment

9.03.27 安全联轴器复位

Re-engage safety coupling




安全联轴器1是由机器制造商安置的。当发生线缠结时，安全联轴器1脱开以避免损坏旋梭。

下面说明如何使安全联轴器重新复位啮合。

The coupling 1 is set by the manufacturer. When the thread jams, the coupling 1 disengages in order to avoid damage to the hooks.
A description of how to engage the coupling follows.



- 去除缠结的线。
- 用螺钉2固定住安全联轴器1，转动手轮直到感觉到安全联轴器1突然恢复进入原位。
- Remove jammed thread.
- Hold coupling 1 with screw 2 and turn the balance wheel, until you feel coupling 1 snap back into place again.

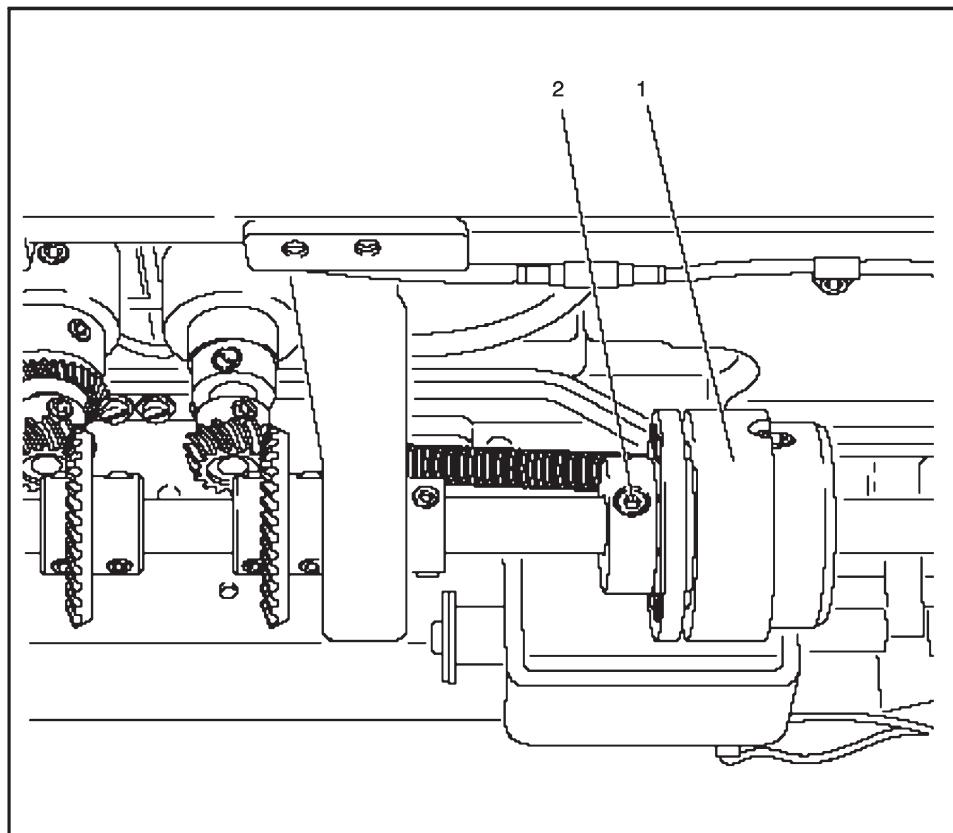

调整 Adjustment

9.04 剪线器-D的调整

Adjusting the thread trimmer -D

9.04.01 滚子杠杆的静止位置/控制凸轮的径向位置调整

Resting position of the roller lever/ radial position of the control cam

规则


1. 当剪线器在静止位置时，杠杆5应与活塞6相接触，而且滚轮杠杆的滚轮与控制凸轮3之间有0.3 mm的距离。
2. 当挑线杆在上死点时，控制凸轮3应该正好使滚轮杠杆7处于静止位置。

Requirement

1. when the thread trimmer is in resting positon, lever 5 should be touching piston 6 and the roller of roller lever 7 should be 0.3 mm away from control cam 3.
2. when the take-up lever is at top dead centre, control cam 3 should just have placed roller lever 7 in its resting position.



- 当确信活塞6定位在左止点时，按照第1条规则调整电磁铁1（两个螺钉）。
- 按照第2条规则调整控制凸轮3（螺钉4）。
- Having made sure that piston 6 is positioned against the left stop, adjust magnet 1 (2 screws) in accordance with Requirement 1.
- Adjust control cam 3 (screw 4) in accordance with Requirement 2.

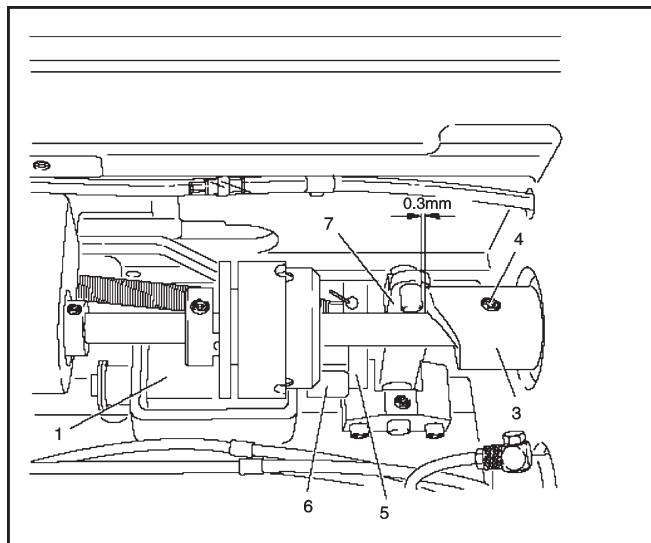

调整 Adjustment

9.04.02 捕线器架的位置调整 Position of the thread catcher holder

规则

1. 在齿轮3和齿弧段零件4之间，应有一最小的间隙使其运动自如。
2. 在捕线器的空挡位置和最初位置，在齿弧段零件4和捕线器架1的外边缘之间的距离都应该是相同的（参见箭头）。

Requirement

1. there should be a minimum amount of play between toothed wheel 3 and toothed segment 4.
2. both in the neutral position and the foremost position of the catcher, the distance between the toothed segment 4 and the outer edge of the thread catcher holder 1 should be the same (see arrow).




- 按照规则调整捕线器架1（螺钉2）。
- Adjust the thread catcher holder 1 (screws 2) according to Requirements.



如果调整不能达到第2条规则的要求，拧松螺钉2并将齿弧段零件4移动一个齿啮合。

If Requirement 2 cannot be fulfilled, loosen screw 2 and move the toothed segment 4 by one tooth.

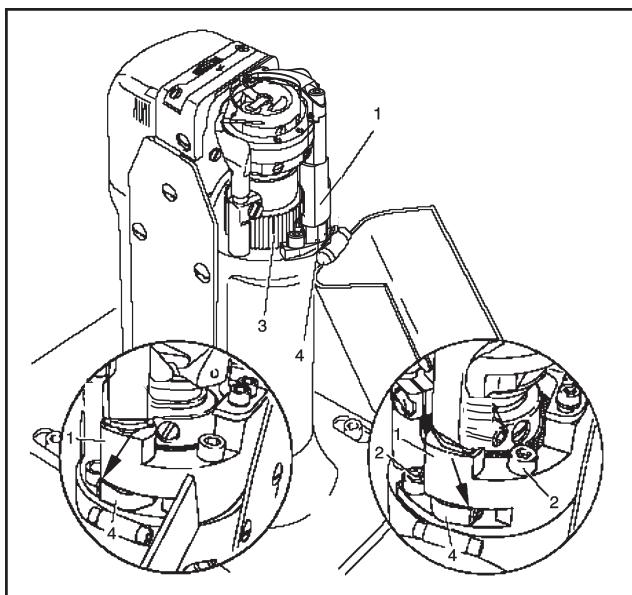

调整 Adjustment

9.04.03 捕线器与针板间的距离

Distance between thread catcher and needle plate

规则


在其摆动运动过程中，捕线器1不应越过针板的边缘（参见箭头）。

Requirement

During its swivel movement thread catcher 1 should not pass the edge of the needle plate (see arrow).



- 按照规则移动捕线器1（螺钉2，两个螺钉），使与捕线器架平行。
- Move thread catcher 1 (screws 2, two screws) parallel to the thread catcher holder in accordance with the Requirement.

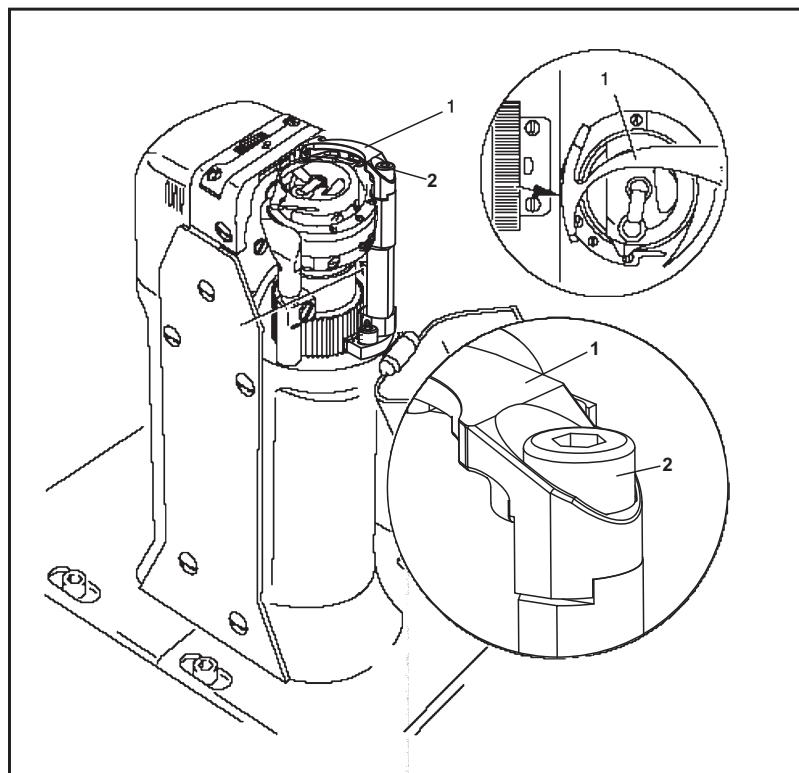

调整 Adjustment

9.04.04

捕线器位置调整

Position of the thread catcher

规则

- 在捕线器1的底边与梭壳定位指5之间应有0.1 mm的距离。
- 当剪线器处于空挡位置时，捕线器的后边缘应定位在刀刃后面大约2.5~3 mm。

Requirement

- the bottom edge of the thread catcher 1 should be at a distance of 0.1 mm from the positioning finger of the bobbin case 5.
- when the thread trimmer is in its neutral position, the rear edge of thread cather should be positioned approx. 2.5~3 mm behind the edge of the knife.




- 按照第1条规则移动捕线器1（螺钉2，两个螺钉）。
- 按照第2条规则转动捕线器1（螺钉3）。
- Move thread catcher 1 (screw 2, two screws) in accordance with Requirement 1.
- Turn thread cather 1 (screw 3) in accordance with Requirement 2.



捕线器1必须与捕线器架4的表面平行。

Thread catcher 1 must be parallel to the surface of the thread catcher holder 4.

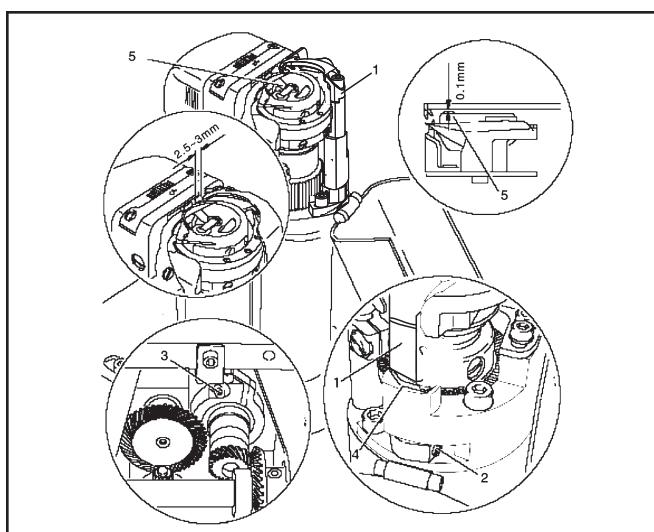

调整 Adjustment

9.04.05

切刀位置和切刀压力

Knife position and knife pressure

规则


1. 切刀1应与针板接触。
2. 应设置尽可能低的切刀压力，但剪线功能要可靠地完成。

Requirement

1. the knife 1 should be touching the needle plate.
2. the knife pressure should be set as low as possible but the cutting operation should still be carried out reliably.



- 按照第1条规则移动切刀1（螺钉2），或者按照第2条规则摆动切刀1来调整。
- Move knife 1 (screw 2) in accordance with Requirement 1 or swivel it in accordance with Requirement 2.

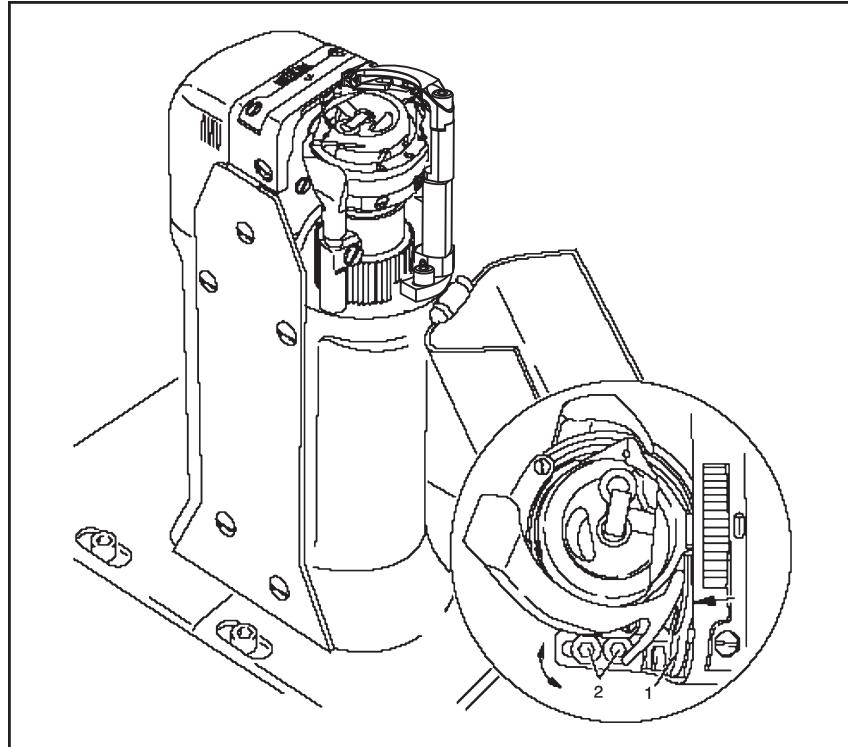

调整 Adjustment

9.04.06 梭心线夹持弹簧


Bobbin thread retaining spring

规则

1. 梭心线夹持簧应在捕线器3的线槽中可靠地导向。
2. 梭心线夹持簧的压力应尽可能低，但在剪线动作后梭心线应可靠地被夹持住

Requirement

1. the bobbin thread clamp spring should be guided reliably in the thread groove of the thread catcher 3.
2. the tension of the bobbin thread spring clamp should be as low as possible, but the bobbin thread should be reliably after the cutting operation.

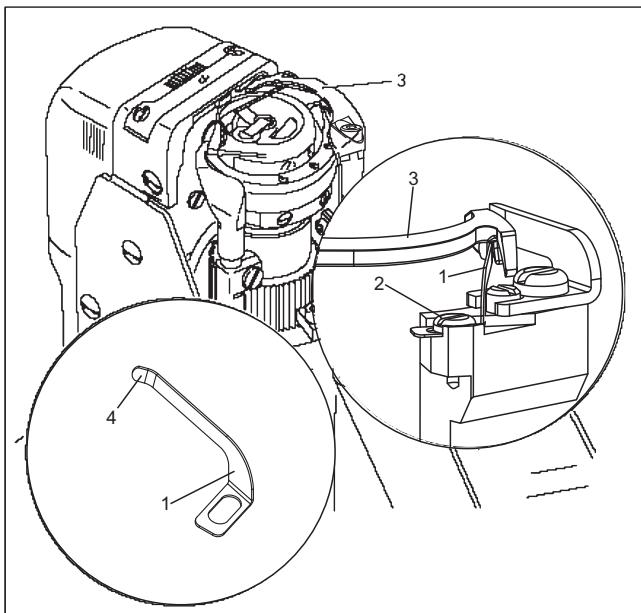

- 按照第1条规则调整梭心线夹持簧1（螺钉2）。
- 按照第2条规则，通过扳梭心线夹持簧1的侧边4来调整其压力。
- Adjust bobbin thread clamp spring 1 (screw 2) in accordance with Requirement 1.
- Adjust the tension in accordance with Requirement 2 by bending side 4 of the bobbin thread clamp spring 1.

按第1条规则调节

- 关闭机器并使挑线杆位于下死点。
- 手动使捕线器3进入和脱离工作位置，并按第1条规则检查。如有必要做重新调整。

Control requirement 1

- Switch off the machine and bring the take-up lever to its bottom dead centre.
- Engage and disengage the thread catcher 3 by hand and check

Requirement 1. Adjust if necessary.

按第2条规则调节

- 在剪线后，通过转动手轮缝纫几个线迹，检查在第1个和第3个线迹之间是否梭心线被从夹持簧拉出，如有必要改进持紧簧压力。

Control requirement 2

- After the thread has been cut, sew a few stitches by turning the balance wheel, checking whether the bobbin thread is drawn out of the bobbin thread clamp spring between the 1st and 3rd stitched, if necessary, correct the tension.

调整 Adjustment

9.04.07


手动剪线试验 Manual cutting test

规则

1. 当捕线器1在其向前的行程时，它不能带着梭心线3也向前。
2. 当捕线器1在其前端位置时，钩件4必须可靠地保住梭心线3。
3. 在剪线动作后，针线和梭心线都必须被完全剪断，并将梭心线3夹持住。

Requirement

1. when thread catcher 1 is on its forward stroke, it must not carry bobbin thread 3 forward too.
2. when thread catcher 1 is in its front position, bobbin thread 3 must be held reliably by hook 4.
3. After the trimming action, both the needle thread and the bobbin thread must be perfectly cut and bobbin thread 3 retained.

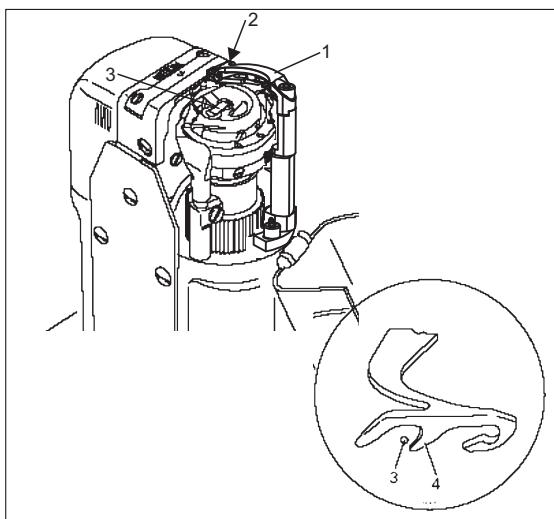

- 缝纫几个线迹。
- 关闭总电源开关。
- 手动完成剪线操作。
- 按第1和第2条规则检查，如果有必要可按照**9.04.05节**捕线器位置调整重新调整捕线器1。
- 按第3条规则检查，如果有必要可按照**第9.04.06节**梭心线夹持弹簧重新调整梭心线夹持弹簧2。

- Sew a few stiches.
- Turn off the on/off switch.
- Carry out the cutting operation manually.
- Check **Requirement 1 and 2**, and if necessary readjust thread catcher 1 in accordance with **Chapter 9.04.05 Position of the thread catcher**.
- Check **Requirement 3**, and if necessary readjust the bobbin thread retaining spring 2 in accordance with **Chapter 9.04.06 Bobbin thread retaining spring**.

调整 Adjustment

9.04.08

夹线器松线


Releasing the tension

规规则

1. 当电磁铁通电时，夹线板3应该被挤开最少0.5 mm。

Requirement

When the magnet is activated, tension discs 3 must be at least 0.5 mm apart.

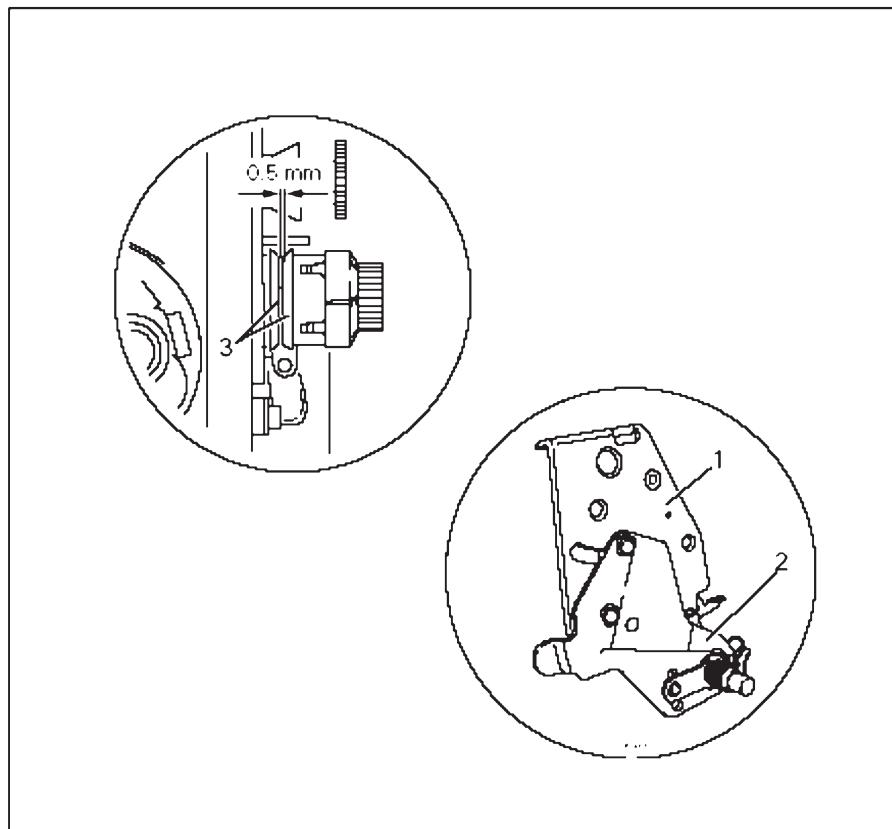

- 接通电磁铁。
- 按照规则拆开夹线器支承板1并调整压力板2。
- Activate the magnet.
- Detach the tension bearing plate 1 and adjust pressure plate 2.

调整 Adjustment


9.04.09 联动杆调整(仅 9620机型有) Linkage rod (only for the 9620)

规则

当剪线器处于静止位置时，其驱动杠杆1之间必须是平行的。

Requirement

When the thread trimmer is in its resting position, the drive levers 1 must be parallel.

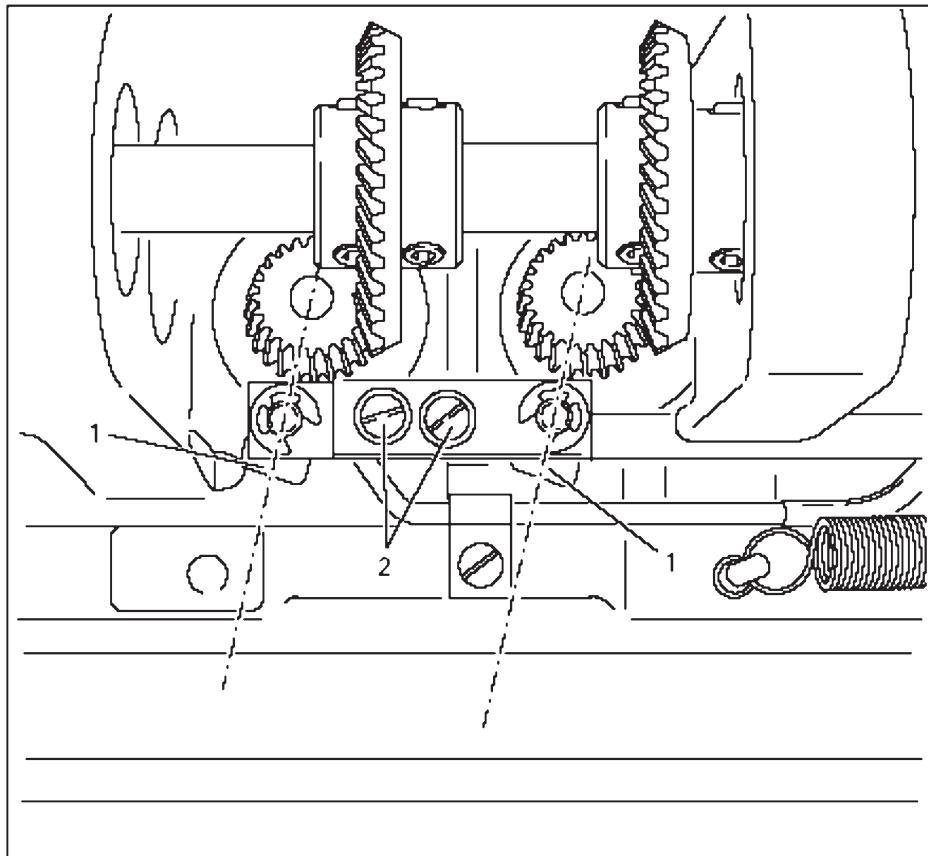

- 按照规则调整杠杆1（螺钉2）。
- Adjust drive levers 1 (screw 2) in accordance with the Requirement.

调整 Adjustment

9.05 调整倒缝机构--D3

Adjusting backtacking mechanism --D3

9.05.01 机针在针孔中的位置（仅对于 9625 和 9610机型）


Needle in needle hole (only for 9625 and 9610)

规则

当设置最大线迹长度时，在顺缝和倒缝线迹情况下，机针在针孔中到针孔内边缘的距离必须是相同的。

Requirement

When the maximum stitch length is set, the needle must be the same distance from the inside edge of the needle hole, both for forward and reverse stitch.

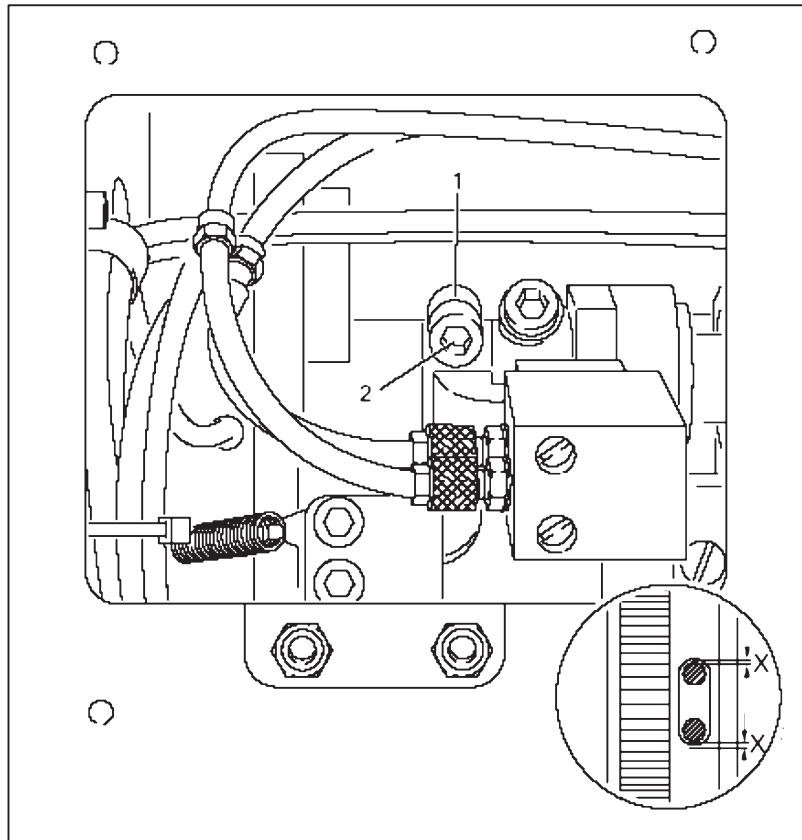

- 按照规则转动曲柄1（螺钉2）来调整。
- Turn crank 1 (screw 2) according to the Requirement,

调整 Adjustment


9.05.02 滚轮压脚驱动装置的联接器调整 Coupling for roller presser drive

规则

在半联接器1和驱动装置的锁定圆片3之间必须有3 mm 的距离。

Requirement

There must be a distance of 3 mm between coupling half 1 and locking disc 3 of the drive mechanism.

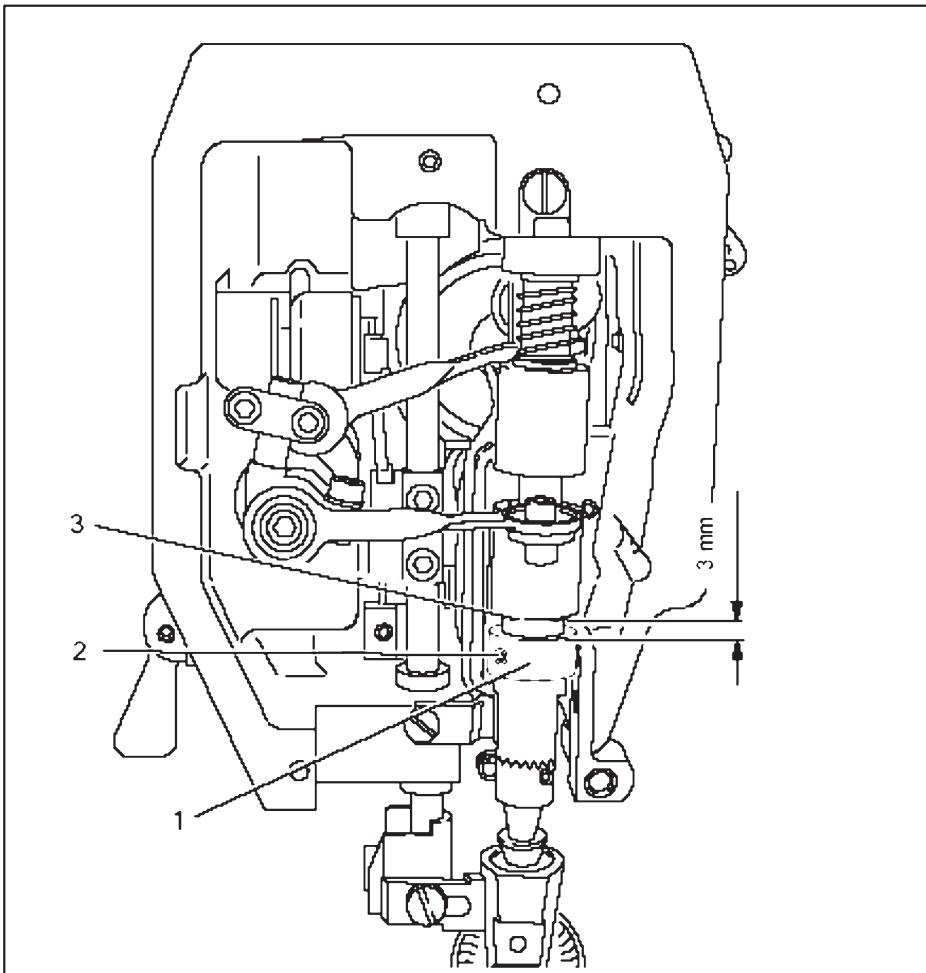

- 按照规则调整半联接器1（螺钉2）。
- Adjust coupling half 1 (screw 2) according to the Requirement.

调整 Adjustment

9.05.03 进给轮驱动装置的伞齿轮(在 9620机型上)


Bevel gears for feed wheel drive (on the 9620)

规则

1. 伞齿3必须正确地安装在左边。
2. 在伞齿轮3和伞齿轮5之间必须有14 mm 的距离。

Requirement

1. bevel gear 3 must fit well on the left side.
2. there must be a distance of 14 mm between bevel gear 3 and bevel gear 5.

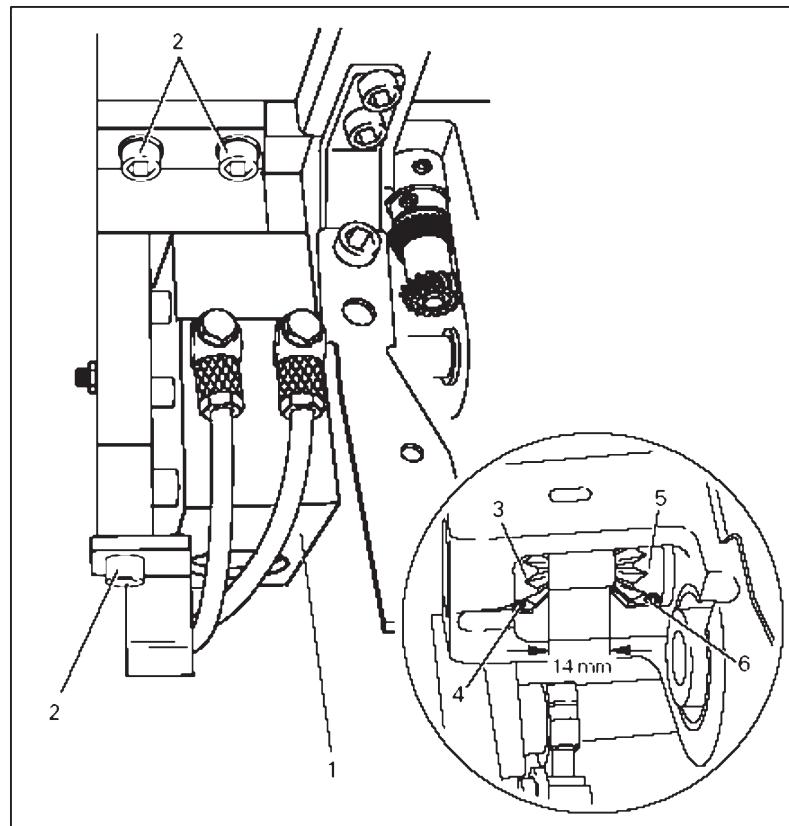

- 移动控制单元1（螺钉2）。
- 按照第1条规则调整伞齿轮3（螺钉4）。
- 按照第2条规则调整伞齿轮5（螺钉6）。
- Remove control unit 1 (screws 2).
- Adjust bevel gear 3 (screw 4) according to Requirement 1.
- Adjust bevel gear 5 (screw 6) according to Requirement 2.

调整 Adjustment

9.05.04 伞齿轮 间隙调整 (在9620机型上)


Bevel gear play (on the 9620)

规则

1. 当顺缝时，在伞齿轮 6和7之间必须有微小的间隙。
2. 当倒缝时，在伞齿轮 6和8之间必须有微小的间隙。

Requirement

1. when sewing forwards, there must be a slight play between bevel gears 6 and 7.
2. When sewing backwards, there must be a slight play between bevel gears 6 and 8.

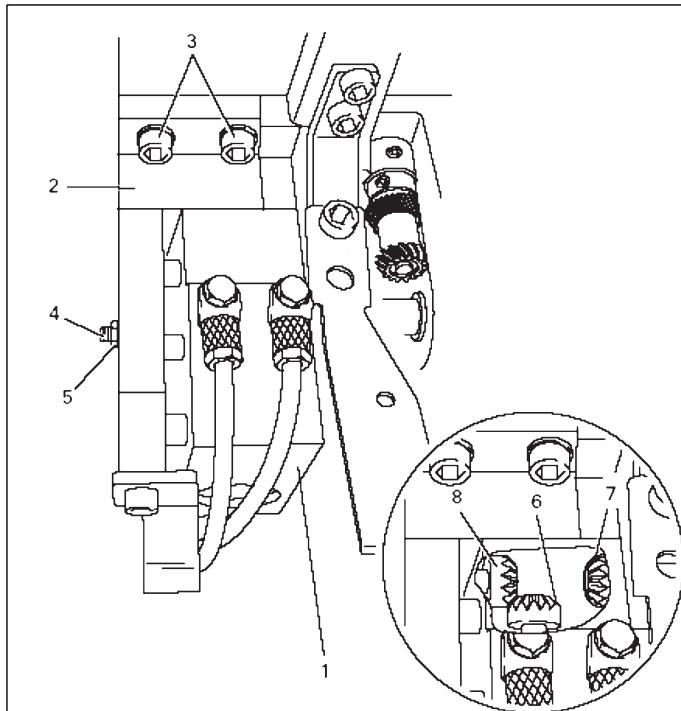

- 从空气滤清器/润滑器上断开压缩空气供应。
- 用手将单元1尽可能地向右移动。
- 按照第1条规则调整支架2（螺钉3）。
- 用手将单元1尽可能地向左移动。
- 按照第2条规则调整螺钉2（螺母5）。
- Disconnect air supply of the air filter/ lubricator.
- Move unit 1 by hand as far as possible to the right.
- Adjust bracket 2 (screws 3) according to Requirement 1.
- Move unit 1 by hand as far as possible to the left.
- Adjust screw 4 (nut 5) according to Requirement 2.

调整 Adjustment


9.05.05 进给轮驱动装置的伞齿轮调整(在 9610、9610S机型上) Bevel gears for feed wheel drive (on the 9610 and 9610S)

规则

1. 伞齿轮1的右端面必须与其驱动轴的端面平齐（见箭头所示）。
2. 在伞齿轮3和伞齿轮1之间必须有13 mm 的距离。

Requirement

1. the right side of bevel gear 1 must be flush with its drive shaft (see arrow).
2. there must be a distance of 13 mm between bevel gear 3 and bevel gear 1.

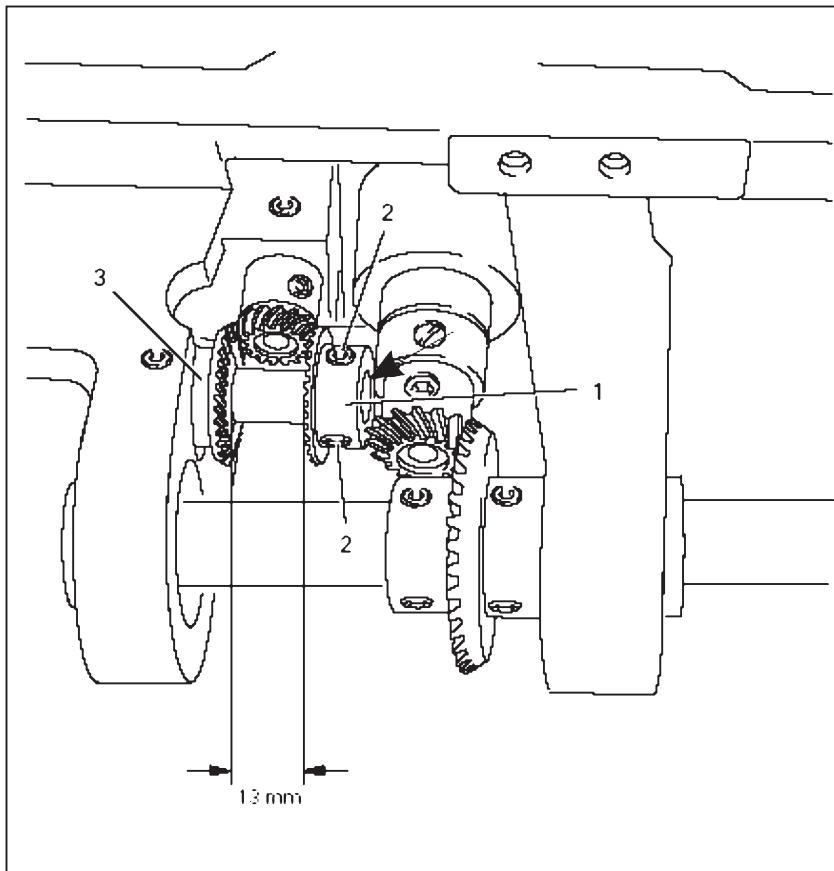

- 按照第1条规则调整伞齿轮1（螺钉2）。
- 按照第2条规则调整伞齿轮3（螺钉4）。
- Adjust bevel gear 1 (screws 2) according to Requirement 1.
- Adjust bevel gear 3 (screws 4) according to Requirement 2.

调整 Adjustment


9.05.06 伞齿轮 间隙调整（在9610、9610S机型上） Bevel gear play (on the 9610, 9610S)

规则

1. 当顺缝时，在伞齿轮 6和7之间必须有微小的间隙。
2. 当倒缝时，在伞齿轮 6和8之间必须有微小的间隙。

Requirement

1. when sewing forwards, there must be a slight play between bevel gear 6 and 7.
2. When sewing backwards, there must be a slight play between bevel gear 6 and 8.

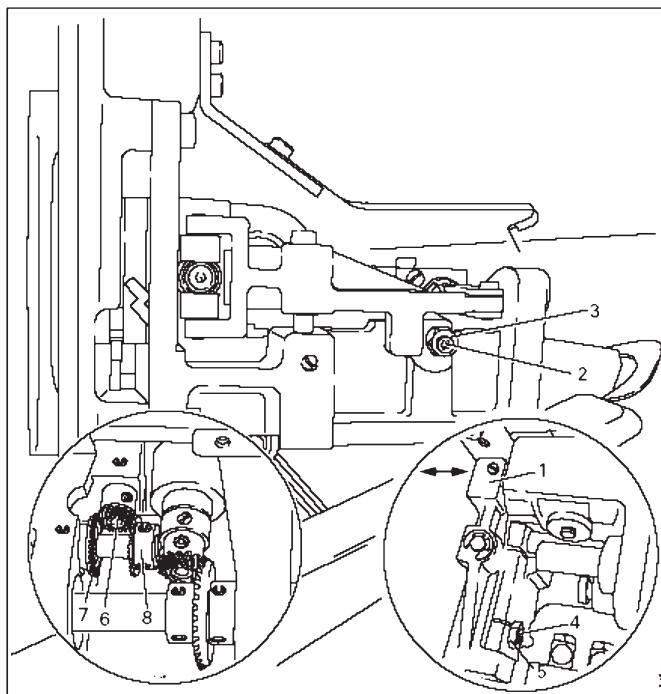

- 从空气滤清器/润滑器上断开压缩空气供应
- 用手将单元1尽可能地向右移动（参见箭头所示）
- 按照第1条规则调整螺钉2（螺母3）。
- 用手将单元1尽可能地向左移动（参见箭头所示）。
- 按照第2条规则调整螺钉4（螺母5）。
- Disconnect air supply of the air filter/lubricator.
- Move unit 1 by hand as far as possible to the right (see arrow).
- Adjust screw 2 (nut 3) according to Requirement 1.
- Move unit 1 by hand as far as possible to the left (see arrow).
- Adjust screw 4 (nut 5) according to Requirement 2.

调整 Adjustment


9.05.07 伞齿轮 间隙调整 (在9610SA、9620SA机型上) Bevel gear play (on the 9610SA, 9620SA)

规则

1. 缝纫时，在伞齿轮 1和3之间必须有微小的间隙，
同时在伞齿轮 2和3之间也必须有微小的间隙。

Requirement


1. when sewing , there must be a slight play between bevel gear 1 and 3.
at the same time, there must be a slight play between bevel gear 2 and 3.

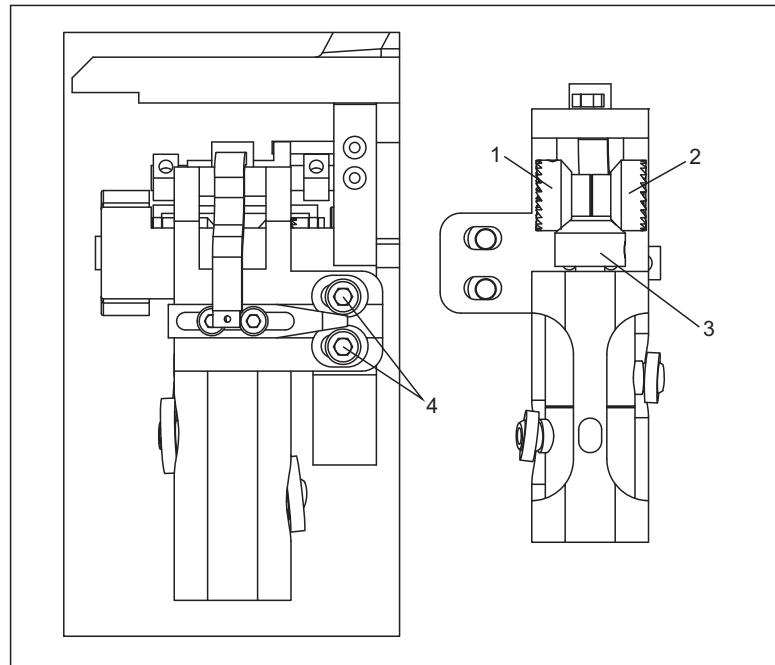

- 按照第1条规则调整螺钉4
- Adjust screw 4 according to Requirement 1

零件手册
PARTS BOOK

1. 机身部件 Housing sections

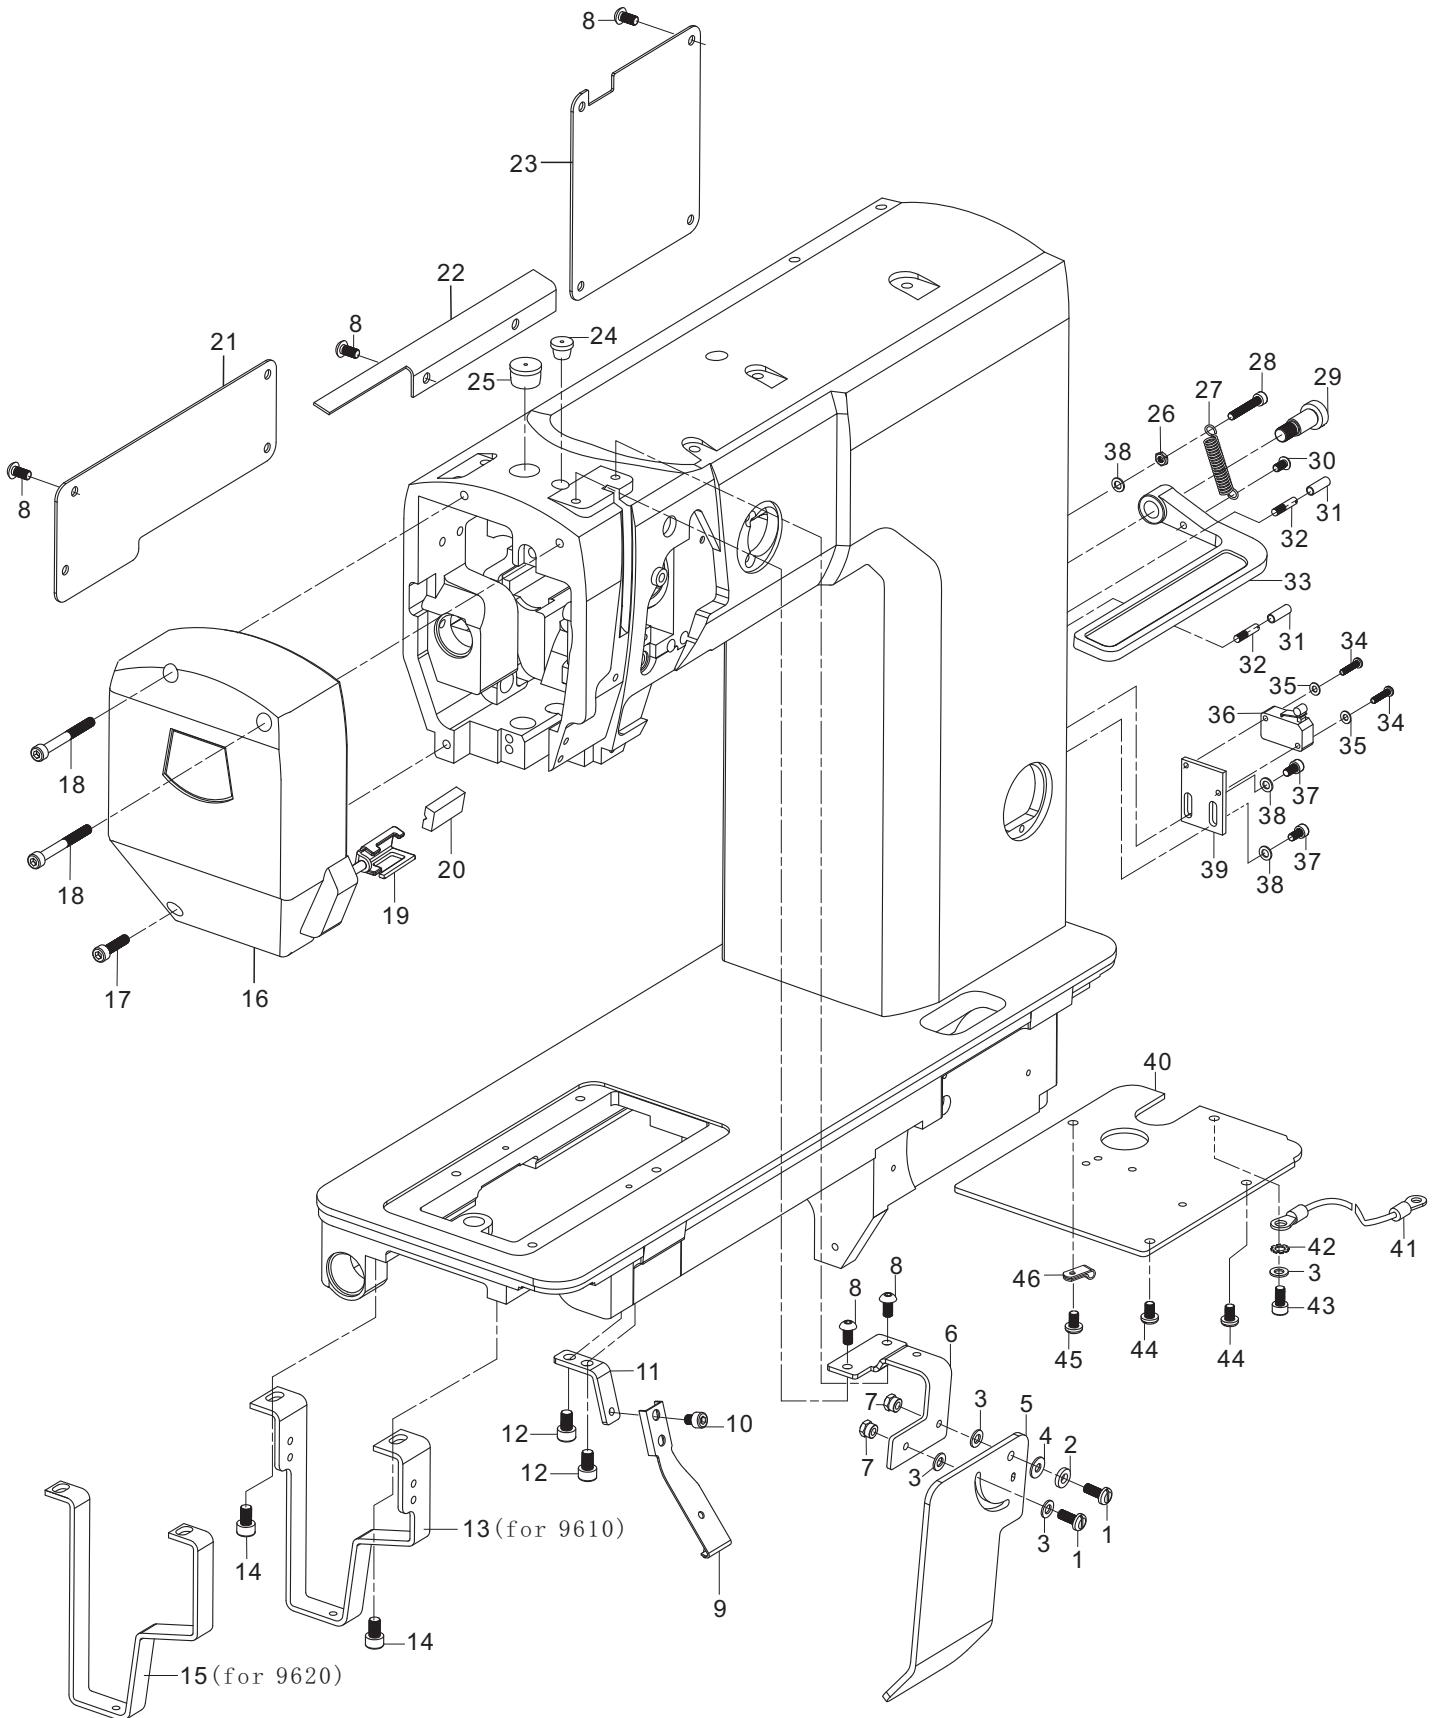


1. 机身部件

Housing sections

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10005271	螺钉 M5×12	Screw M5×12	2
2	10003235	垫圈 Φ5	Washer Φ5	1
3	10005016	垫圈 Φ5	Washer Φ5	4
4	10001413	垫圈 Φ5	Washer Φ5	1
5	10001607	防护板	Protection apron	1
6	20003964	防护板支架	Protection apron bracket	1
7	10003021	螺母 M5	NUT M5	2
8	10007096	螺钉 M5×10	Screw M5×10	12
9	10005187	安全板	Safety plate	1
10	10005539	螺钉 M5×6	Screw M5×6	1
11	10005008	支板	Trestle board	1
12	10005122	螺钉 M6×10	Screw M6×10	2
13	10005426	支脚 (9610专用)	Bracket (For 9610)	1
14	10004974	螺钉 M6×10	Screw M6×10	2
15	10042081	支脚 (9620专用)	Bracket (For 9620)	1
16	10041427	一体机面板☆	Panel	1
17	10003141	螺钉 M5×20	Screw M5×20	1
18	10023952	螺钉 M5×45	Screw M5×45	2
19	10001410	面板过线柱	Thread crossing column	1
20	10001606	面板过线板毡	Panel felt	1
21	20003398	后盖前板	Back cover board painting	1
22	20003397	折板	Zone plate	1
23	20014552	后盖板	Back cover board	1
24	10005124	油塞	Oil dam	1
25	10005501	油塞	Oil dam	1
26	10003027	螺母 M4	NUT M4	1
27	10005446	脚杆动轴曲柄拉簧	Spring	1
28	10001608	螺钉 M4×25	Screw M4×25	1
29	10036441	轴位螺钉	Screw M5×12	1
30	10005107	螺钉 M4×6	Screw M4×6	1
31	10007800	油管 Φ3×Φ5	Oil pipe Φ3×Φ5	2
32	10036440	限位螺钉 M4×8	Screw M4×8	2
33	20014397	倒缝扳手	Spanner of reversal stitch	1
34	10001368	螺钉 M3×14	Screw M3×14	2
35	10002068	垫圈 Φ3	Washer Φ3	2
36	10035679	倒缝点动开关	Power switch	1
37	10005350	螺钉 M4×8	Screw M4×8	2
38	10005260	垫圈 Φ4	Washer Φ4	3
39	20012263	开关调节板	Adjustment plate	1
40	10041476	底板盖板	Bottom cover	1
41	10005458	接地线组件	Ground lead	1
42	10005425	外齿锁紧垫圈 Φ5	Washer Φ5	1
43	10005322	螺钉 M5×10	Screw M5×10	1
44	10005003	螺钉 M5×8	Screw M5×8	2
45	10005513	螺钉 M4×8	Screw M4×8	1
46	10008228	SN-3A夹头	Clamp	1

2. 机头零件(1)

Needle head parts (1)

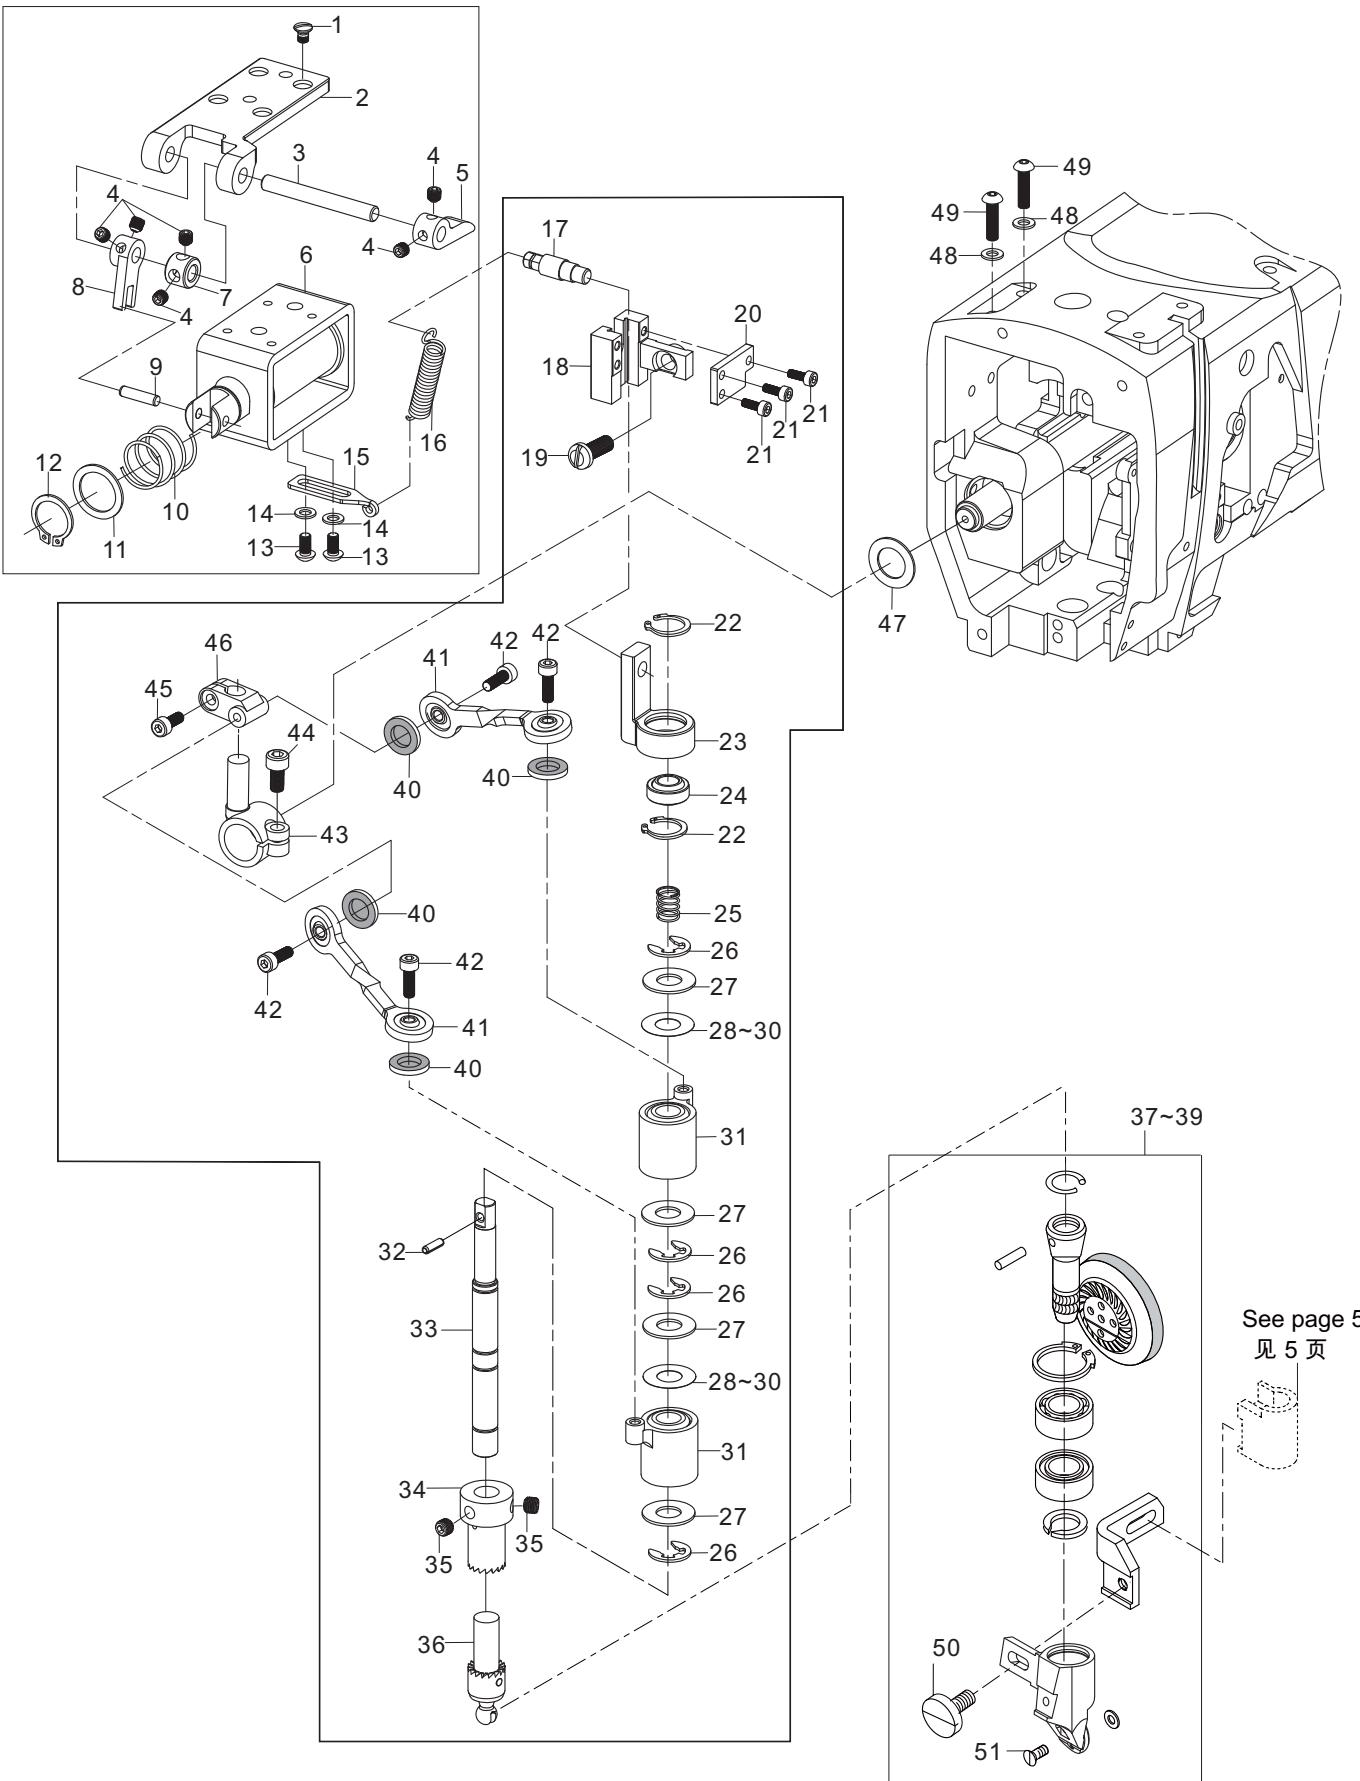


2. 机头零件 (1)

Needle head parts (1)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10005309	螺钉 M4×6	Screw M4×6	4
2	10041433	电磁铁安装板	Electromagnet plate	1
3	10041495	平头滚针	Needle roller	1
4	10003152	螺钉 M5×5	Screw M5×5	6
5	10041437	曲柄	Crank	1
6	10041428	一体机滚轮联接电磁铁	Bobbin join electromagnet	1
7	10041435	挡圈	Thrust collar	1
8	10041432	主曲柄	Crank	1
9	10002251	连杆轴销 4×18	Pin 4×18	1
10	10041430	缓冲弹簧	Pressure spring	1
11	10002254	16.4垫片	Washer	1
12	10003234	卡圈	Collar	1
13	10005107	螺钉 M4×6	Screw M4×6	2
14	10002954	垫圈 Φ4	Washer Φ4	2
15	10041431	复位弹簧钩	Spring locating plate	1
16	10041442	复位弹簧	Offsetting spring	1
17	10041438	销轴	Pin	1
18	10041439	滚轮联接导轨座	Linear guideway	1
19	10005372	螺钉 M6×16	Screw M6×16	1
20	10041441	导向盖板	Pressure plate	1
21	10009553	螺钉 M3×8	Screw M3×8	3
22	10005487	挡圈	Retaining ring	2
23	10041440	宛形曲柄	Crank	1
24	10005073	宛形曲柄轴承	Crank bearing	1
25	10001949	滚轮联接轴压簧	Pressure spring	1
26	10005377	卡圈	Collar	4
27	10005465	轴承座垫片	Washer	4
28	10024475	调整垫片A	Adjusting washer A	4
29	10024476	调整垫片B	Adjusting washer B	(4)
30	10024477	调整垫片C	Adjusting washer C	(4)
31	20000472	轴承座组件	bearing seat asm	2
32	10002772	销 3×10	Pin 3×10	1
33	10002143	滚轮联接上节轴	Roller wheel coupling spindle	1
34	10001405	联接轴上节齿轮	Wheel Gear	1
35	10005549	螺钉 M6×5	Screw M6×5	2
36	10001408	滚轮下节轴组件	Lower segement	1
37	10004082	Φ26 滚轮压脚组件	Φ26 Idler wheel foot asm	(1)
38	10005048	Φ30 滚轮压脚组件	Φ30 Idler wheel foot asm	1
39	10004101	Φ36 滚轮压脚组件	Φ36 Idler wheel foot asm	(1)
40	10005343	油毡垫片	Felt	4
41	10005179	球连杆组件	Ball connecting rod	2
42	10005366	螺钉 M4×12	Screw M4×12	4
43	10005212	万向联接头	Union	1
44	10010953	螺钉 M5×10	Screw M5×10	1
45	10012752	螺钉 M4×10	Screw M4×10	1
46	10005043	万向联接座	Base frame	1
47	10005194	垫片 15.1×24.5×1.5	Washer 15.1×24.5×1.5	1
48	10005016	垫片 5.3×10×1	Washer 5.3×10×1	2
49	10041434	螺钉 M5×18	Screw M5×18	2
50	10005243	螺钉 M4×8	Screw M4×8	1
51	10005070	螺钉 M2.5×6	Screw M2.5×6	1

3. 机头零件(2) Needle head parts (2)

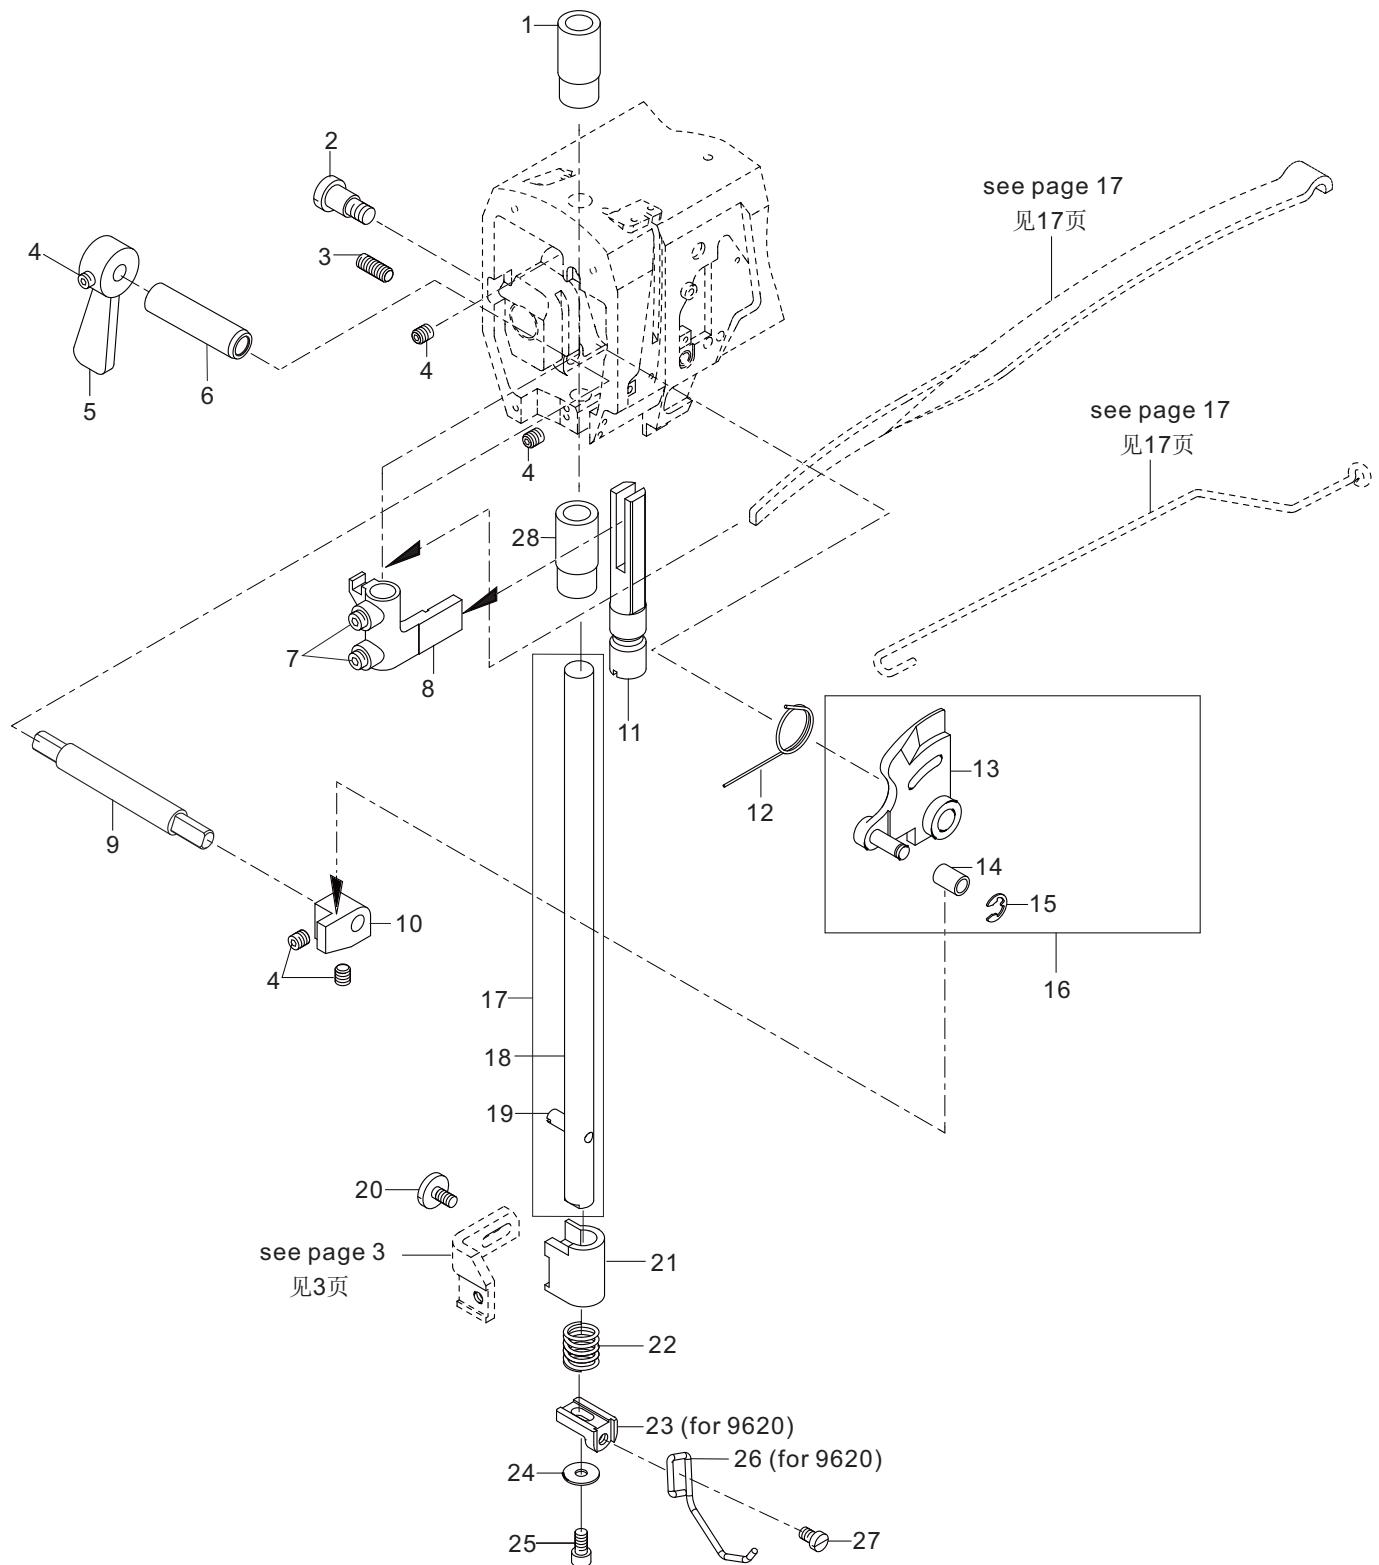


3. 机头零件 (2)

Needle head parts (2)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10005546	压杆轴套	Strut bar bearing	1
2	10005312	螺钉 M6×8	Screw M6×8	1
3	10009187	螺钉 M6×8	Screw M6×8	1
4	10012162	螺钉 M5×5	Screw M5×5	5
5	20003486	压脚扳手	Presserfoot spanner	1
6	10005412	抬压脚手柄轴套	Presser feet handle bushing	1
7	10005549	螺钉 M6×5	Screw M6×5	2
8	10005208	压杆滑块	Strut bar slides	1
9	10005011	抬压脚轴	Presser foot lift axle	1
10	10005543	抬压脚凸块	Presser foot lift bump	1
11	10005192	压杆滑块导杆	Strut bar slides guide bar	1
12	10005418	松线复位簧	Replacement spring	1
13	10005239	抬压脚前杠杆焊接件	Presser foot lift jointing	1
14	10005406	抬压脚前杠杆销套	Presser foot lift pin	1
15	10005078	挡圈	Collar	1
16	10039313	抬压脚前杠杆组件	Presser foot lift asm	1
17	10005178	压脚杆组件	Presser feet assembly	1
18	10005247	压脚杆	Presser feet	1
19	10005422	下节销螺钉 M4×5.2	Screw M4×5.2	1
20	10005243	螺钉 M4×8	Screw M4×8	1
21	10005068	压脚柄	Presser feet handle	1
22	10005460	压簧	Pressure spring	1
23	10001442	压料器定位座 (for 9620)	Eccentric swage locating seat (for 9620)	1
24	10005415	垫圈 Φ4	Washer Φ4	1
25	10005350	螺钉 M4×8	Screw M4×8	1
26	10030364	压料簧 (for 9620)	Eccentric swage spring (for 9620)	1
27	10005204	螺钉 M4×6	Screw M4×6	1
28	10050196	压杆下轴套	Strut bar bearing	1

4. 机头零件(3)

Needle head parts (3)

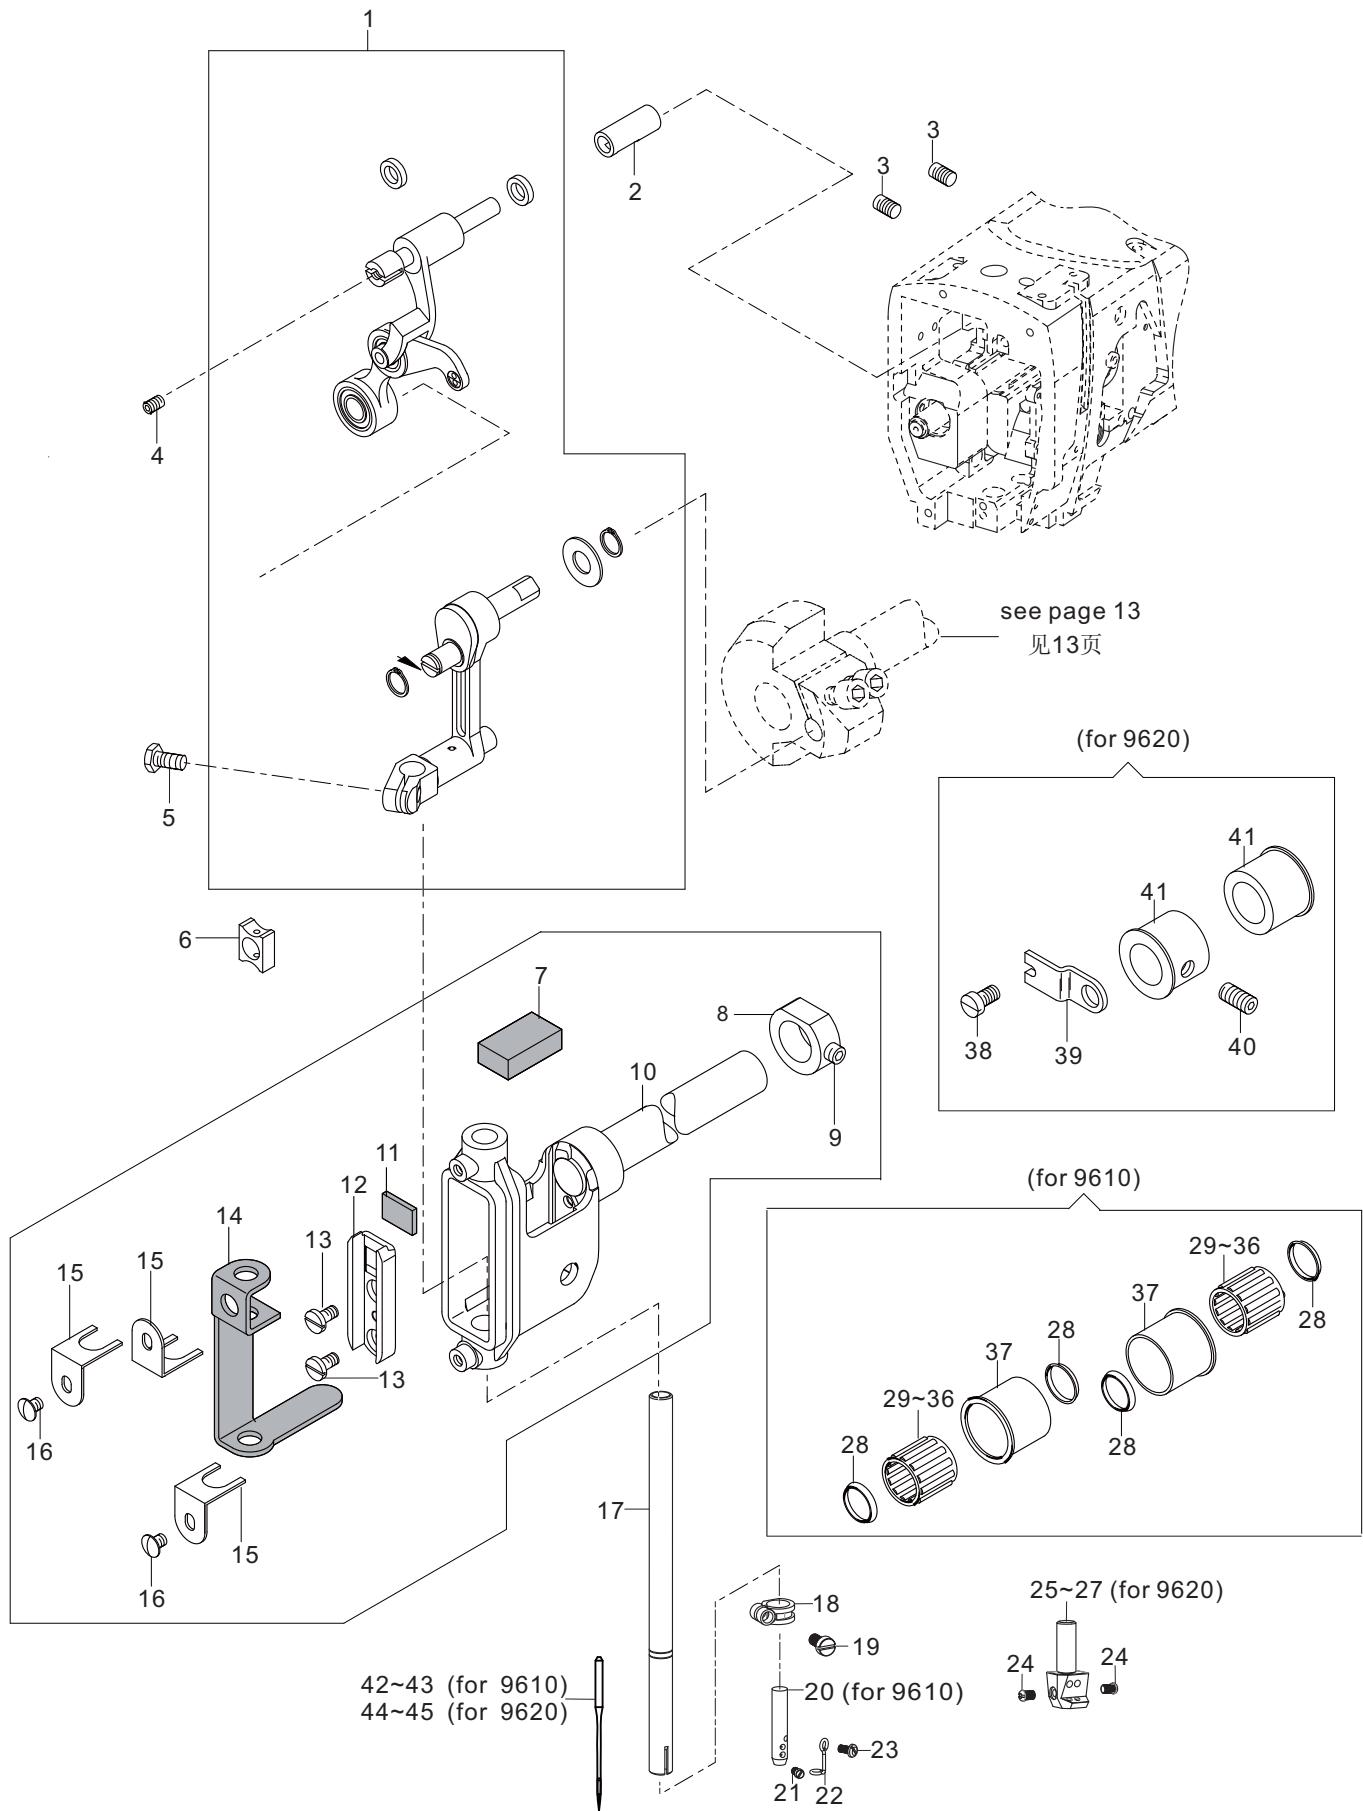


4. 机头零件 (3)

Needle head parts (3)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10005207	挑线杆组件	Takeuplever assembly	1
2	10005267	挑线连杆销衬套	Takeuplever pin bushing	1
3	10004949	螺钉 M5×8	Screw M5×8	2
4	10005295	螺钉 M4×5	Screw M4×5	1
5	10005314	螺栓 M5×10	Screw M5×10	1
6	10005326	针杆连接柱滑块	Needle joining slider	1
7	10005275	油毡	Felt	1
8	10040233	针杆架轴挡圈	Upper check ring	1
9	10005258	螺钉 M6×0.75×5	Screw M6×0.75×5	1
10	10005397	针杆架件	Needle bar assembly	1
11	10005188	油毡	Felt	1
12	10005263	针杆滑块槽	Needle slider groove	1
13	10005379	螺钉 M4×4.5	Screw M4×4.5	2
14	10004947	油毡	Felt	1
15	10005197	油毡压板	Linoleum clamp	3
16	10005050	螺钉 M4×4	Screw M4×4.5	1
17	10005491	针杆上节	Needle bar uper	1
18	10005181	针杆锁紧圈	Needle bar clamp ring	1
19	10005209	螺钉 M4×8	Screw M4×8	1
20	10005214	针杆下节 (For 9610)	Pin chuck (for 9610)	1
21	10005478	机针锁紧螺钉 M4×8	Screw M4×8	1
22	10004943	下过线钩	Arm thread guide	1
23	10005547	螺钉 M3×6	Screw M3×6	1
24	10001578	螺钉 M3×3.2	Screw M3×3.2	2
25	10001494	3.2针夹头 (For 9620)	Pin chuck 3.2 (For 9620)	(1)
26	10002199	2.8针夹头 (For 9620)	Pin chuck 2.8 (For 9620)	(1)
27	10001421	2.4针夹头 (For 9620)	Pin chuck 2.4 (For 9620)	(1)
28	10005031	内卡圈	Inner retainer ring	4
29	10005408	滚针轴承	Needle bearing	(2)
30	10007188	滚针轴承	Needle bearing	(2)
31	10007189	滚针轴承	Needle bearing	(2)
32	10007190	滚针轴承	Needle bearing	(2)
33	10007191	滚针轴承	Needle bearing	(2)
34	10007192	滚针轴承	Needle bearing	(2)
35	10007193	滚针轴承	Needle bearing	2
36	10007194	滚针轴承	Needle bearing	(2)
37	10004952	上边轴轴承套	Bearing bush	2
38	10001493	螺钉 M5×6	Screw M5×6	2
39	10008050	定位板	Guide plate	1
40	10002163	螺钉 M6×14	Screw M6×14	1
41	10008049	针杆架轴套	Needle bar bush	2
42	10006103	机针134PCL90/14 (for 9610-M)	Needle 134PCL 90/14 (for 9610-M)	1
43	10004103	机针134PC120/19 (for 9610-H)	Needle 134PCL 120/19 (for 9610-H)	(1)
44	10001375	机针134-35 90/14 (for 9620-M)	Needle 134-35 90/14 (for 9620-M)	2
45	10030202	机针134-35120/19 (for 9620-H)	Needle 134-35 120/19 (for 9620-H)	(2)

5. 机头零件(4) Needle head parts (4)

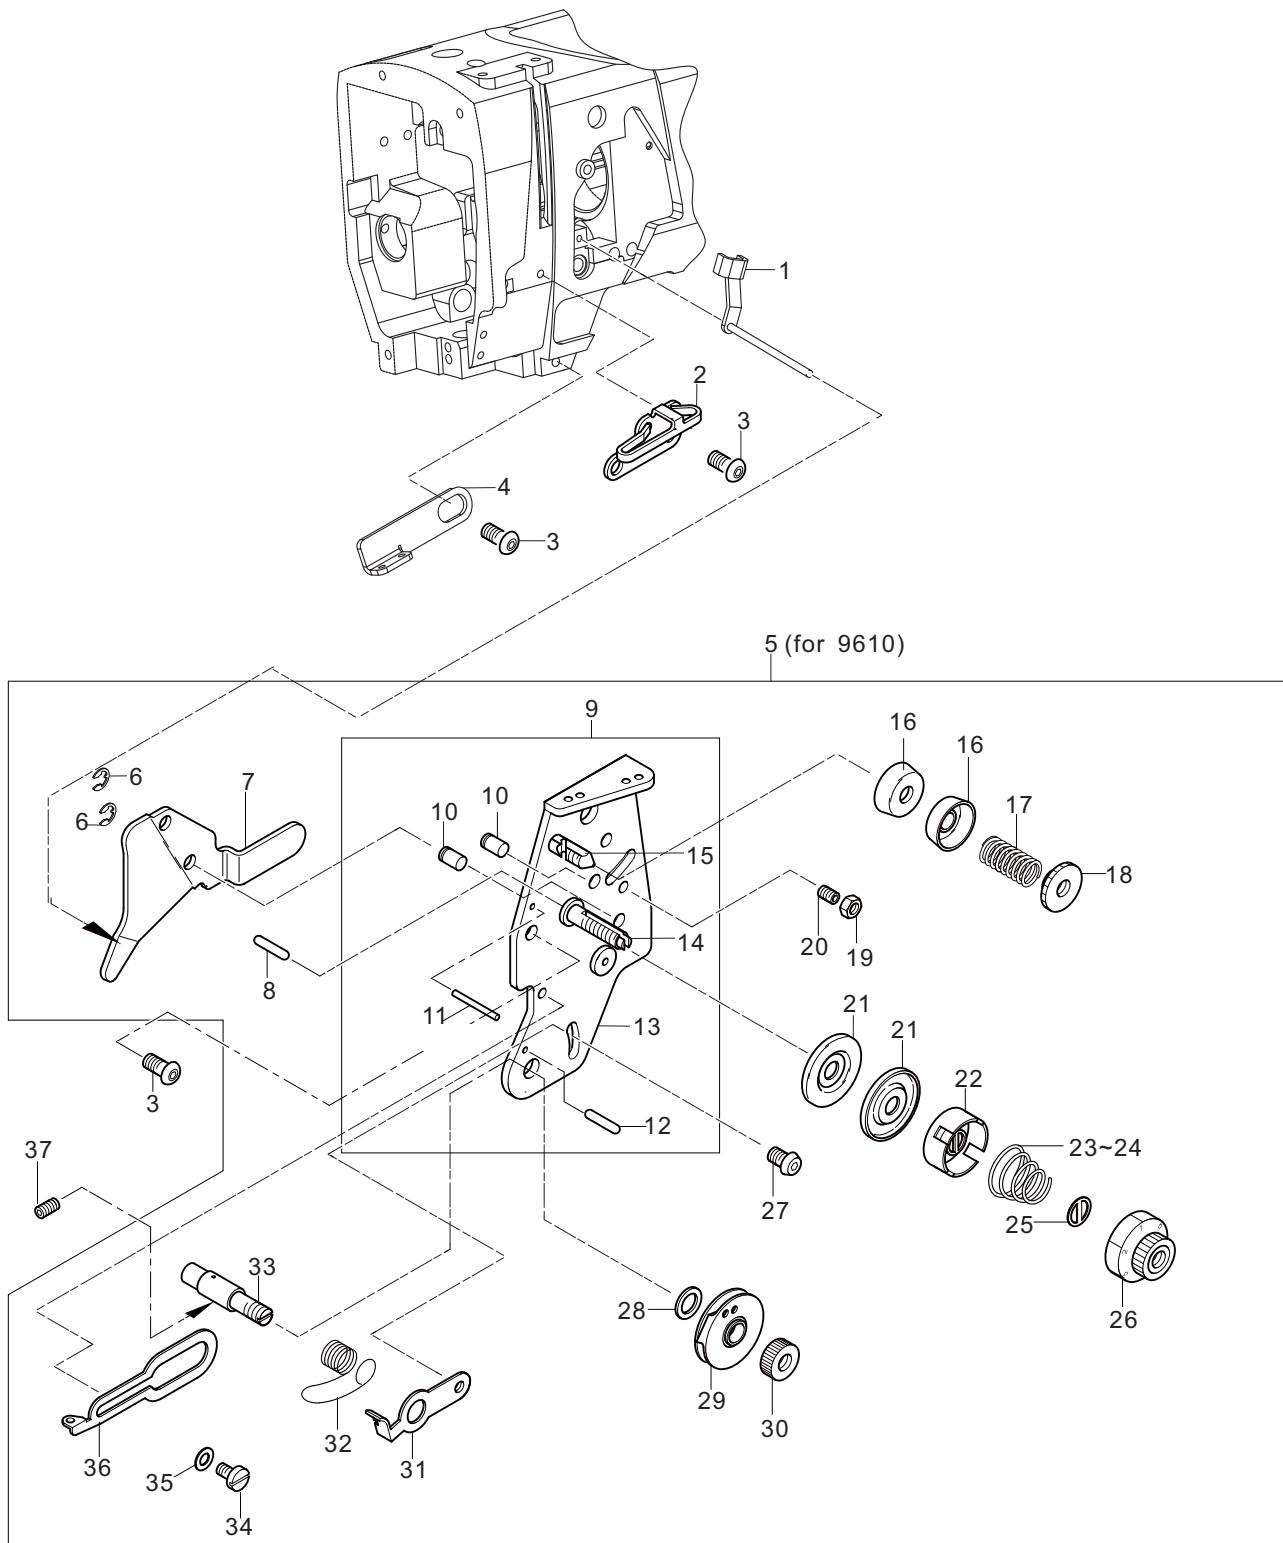


5. 机头零件 (4)

Needle head parts (4)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10001657	电磁铁挺线钉	Tension release crank	1
2	10005118	左右过线勾	Left and right wire hook	1
3	10007096	螺钉 M5×10	Screw M5×10	3
4	10041831	过线板	Thread guide plate	1
5	10005112	夹线器 (9610专用)	Conductor holder (for 9610)	1
6	10009669	卡圈	Collar	2
7	10004977	挑线簧限位板	Spring guard	1
8	10005252	过线钉	Pin	1
9	10005302	夹线大板组件	Bobbin winder tension disc asm	1
10	10005032	销钉 5×8	Screw pin 5×8	2
11	10005289	防转长销钉 2×20	Screw pin 2×20	1
12	10005316	防转销钉 2×8	Screw pin 2×8	1
13	10004941	夹线大板	Bobbin winder tension disc	1
14	10005554	螺钉	Screw	1
15	10005548	夹线调压螺钉	Screw	1
16	10005019	调节簧座	Thred tension disk	2
17	10005241	夹线调节弹簧	Spring	1
18	10005190	夹线调节螺母 M6	Screw M6	1
19	10005328	挺线电磁铁调节螺母 M4	Screw M4	1
20	10003147	螺钉 M4×8	Screw M4×8	1
21	10005489	过线板	Thread guide plate	2
22	10005210	夹线簧座	Split line spring plate	1
23	10005014	夹线簧-薄料 (—M机型)	Split line spring (for —M Model)	1
24	10005347	夹线簧-厚料 (—H机型)	Split line spring (for —H Model)	(1)
25	10005317	压簧板	Spring plate	1
26	10005304	夹线螺母	NUT	1
27	10005107	螺钉 M4×6	Screw M4×6	1
28	10005056	垫片 Φ7.3	Washer Φ7.3	1
29	10005329	挑线过线焊件	Balance thread guide	1
30	10005538	挑线簧组件螺母 M6×0.75	NUT M6×0.75	1
31	10005417	挡簧块	E-ring	1
32	10005067	挑线簧	Spring	1
33	10005505	夹线过线轴	Thread guide spindle	1
34	10005299	螺钉 M4×5	Screw M4×5	1
35	10003122	垫圈 Φ4	Washer Φ4	1
36	10005429	过线调节板	Thread guide plate	1
37	10004949	螺钉 M5×8	Screw M5×8	1

6. 机头零件(5) Needle head parts (5)

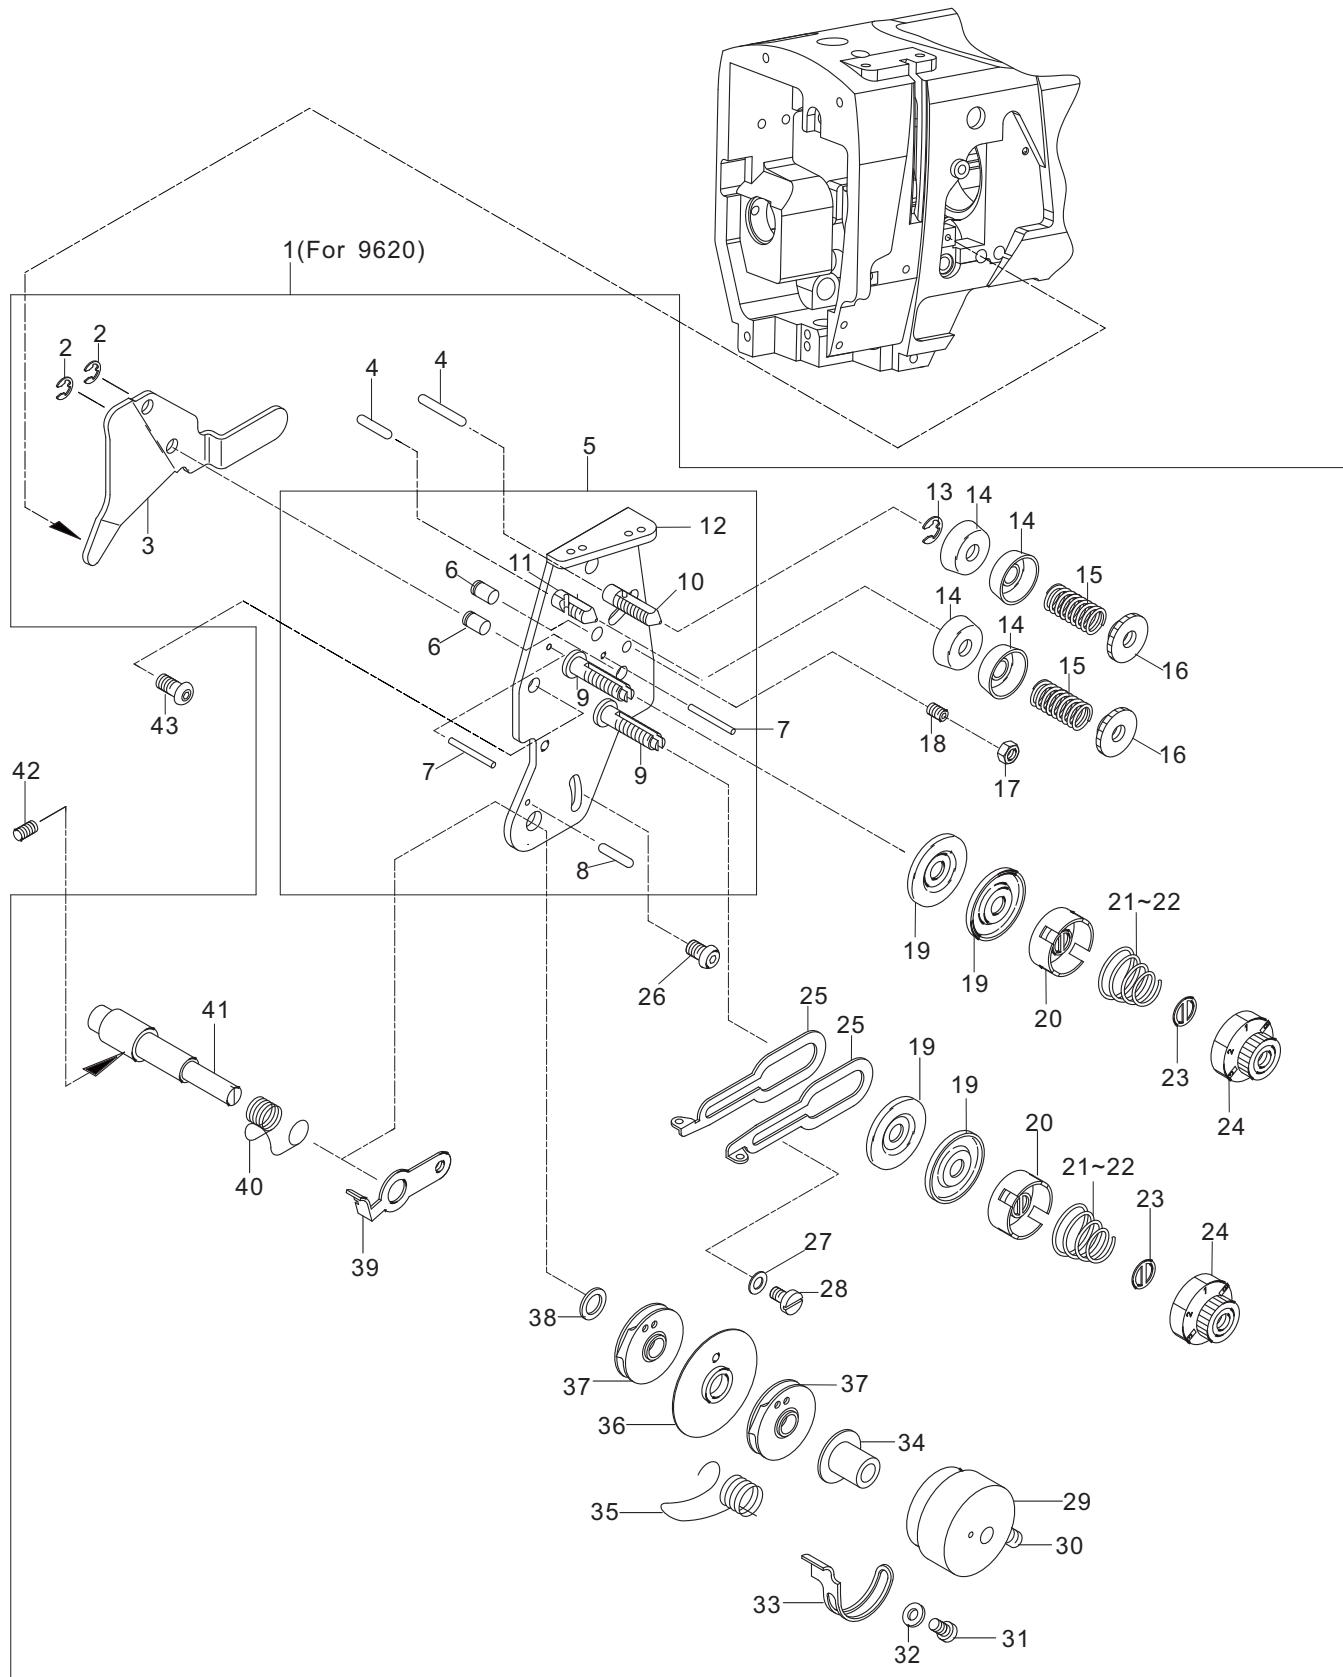


6. 机头零件 (5)

Needle head parts (5)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10014515	夹线器 (9620专用)	Conductor holder (for 9620)	1
2	10009669	卡圈	Collar	2
3	10004977	挑线簧限位板	Spring guard	1
4	10005252	过线钉	Pin	1
5	10002149	夹线板大组件	Bobbin winder tension disc asm	1
6	10005032	销钉 5×8	Screw pin 5×8	2
7	10005289	防转长销钉 2×20	Screw pin 2×20	2
8	10005316	防转销钉 2×8	Screw pin 2×8	1
9	10005554	螺钉	Screw	2
10	10001534	夹线调压螺钉 I	Screw	1
11	10005548	夹线调压螺钉	Screw	1
12	10004941	夹线大板	Bobbin winder tension disc	1
13	10005078	卡圈	Collar	1
14	10005019	调节簧座	Thred tension disk	4
15	10005241	夹线调节弹簧	Spring	2
16	10005190	夹线调节螺母 M6	Nut M6	2
17	10005328	挺线电磁铁调节螺母 M4	Nut M4	1
18	10003147	螺钉 M4×8	Screw M4×8	1
19	10005489	过线板	Thread guide plate	4
20	10005210	夹线簧座	Split line spring plate	2
21	10005014	夹线簧-薄料 (-M机型)	Split line spring (for -M Model)	2
22	10005347	夹线簧-厚料 (-H机型)	Split line spring (for -H Model)	(2)
23	10005317	压簧板	Spring plate	2
24	10005304	夹线螺母	Nut	2
25	10005429	过线调节板	Thread guide plate	2
26	10005107	螺钉 M4×6	Screw M4×6	1
27	10003122	垫圈 Φ4	Washer Φ4	1
28	10005299	螺钉 M4×5	Screw M4×5	1
29	10001495	挑线簧调节转动套筒	Sleeve	1
30	10002856	螺钉 M4×4	Screw M4×4	1
31	10003034	螺钉 M3×5	Screw M3×5	1
32	10003071	垫圈 Φ3	Washer Φ3	1
33	10002009	挡簧块 I	E-ring I	1
34	10001496	套环	Pipe casing	1
35	10002404	挑线簧 I	Spring I	1
36	10001532	挑线簧隔板	Partition board	1
37	10005329	挑线过线焊件	Balance thread guide	2
38	10005056	垫片 Φ7.3	Washer Φ7.3	1
39	10005417	挡簧块	E-ring	1
40	10005067	挑线簧	Spring	1
41	10001531	挑线簧调节轴	Adjustment axle	1
42	10004949	螺钉 M5×8	Screw M5×8	1
43	10007096	螺钉 M5×10	Screw M5×10	1

7. 机臂零件(1) Arm parts (1)

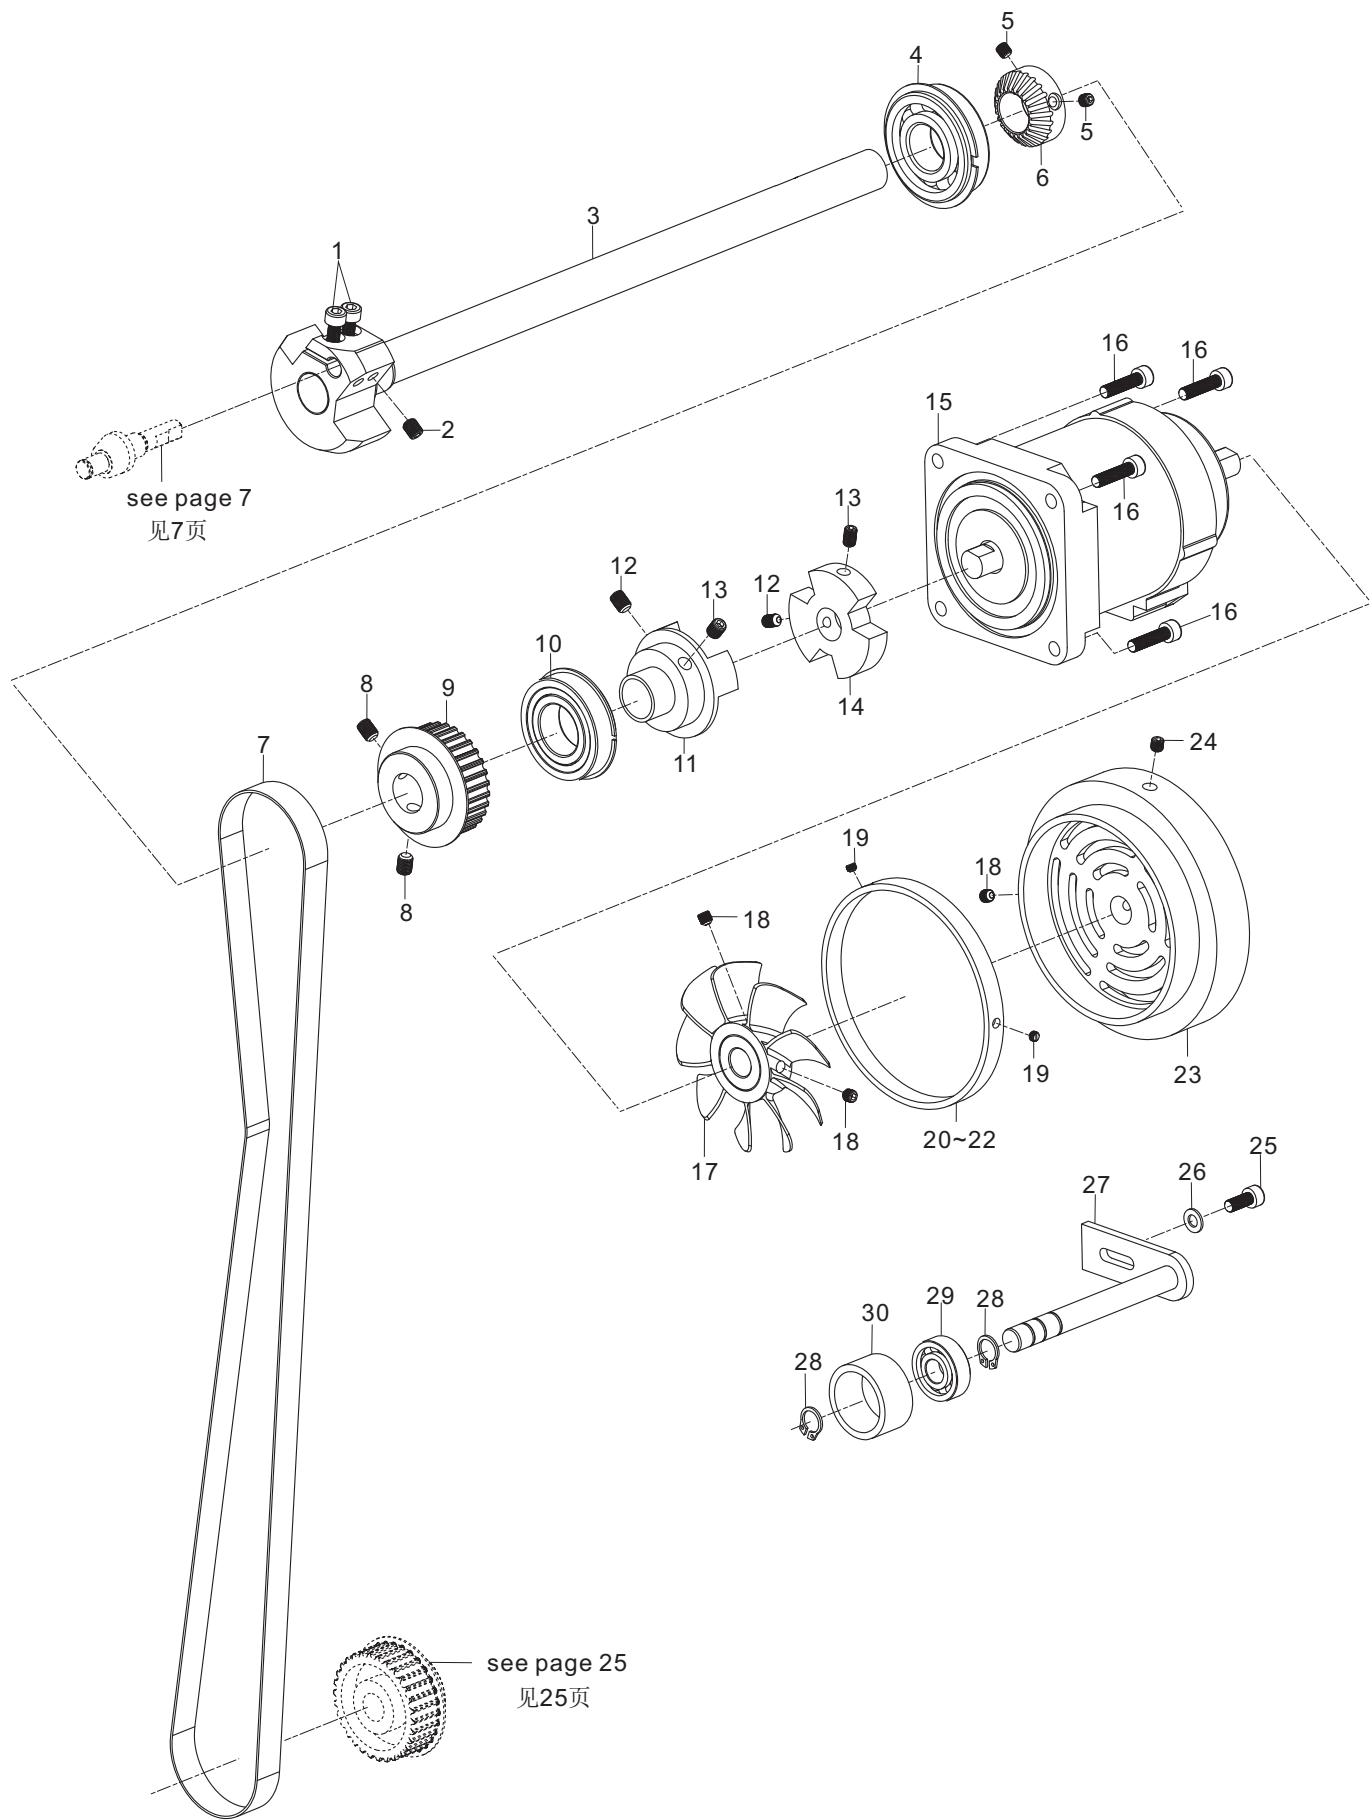


7. 机臂零件 (1)

Arm parts (1)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10010953	螺钉 M5×10	Screw M5×10	2
2	10005466	螺钉 M6×0.75×7	Screw M6×0.75×7	1
3	10041482	曲柄主轴组件	Counter weight assy	1
4	10003578	主轴前轴承 6204ZZNR	Bearing 6204ZZNR	1
5	10012162	螺钉 M5×5	Screw M5×5	2
6	10005327	绕线主动轮	Pulley	1
7	10041479	一体机同步带	Synchronous belt	1
8	10009187	螺钉 M6×8	Screw M6×8	2
9	10041636	主轴宽带轮	Spindle Pulley	1
10	10041481	轴承NSK 60/22ZZNR	Bearing 60/22ZZNR NSK	1
11	10041480	主轴联轴器	Coupling	1
12	10005300	螺钉 M6×0.75×8	Screw M6×0.75×8	2
13	10004938	螺钉 M6×0.75×8	Screw M6×0.75×8	2
14	10042979	电机联轴器组件	Coupling rubber	1
15	10051487	WR58L-01-01电机	Electric machinery	1
16	10000157	螺钉 M5×18.5	Screw M5×18.5	4
17	10041729	一体机风扇	Fan	1
18	10003152	螺钉 M5×5	Screw M5×5	3
19	10006279	螺钉 M4×2.8	Screw M4×2.8	2
20	10049908	3.6调整圈	Adjusting ring 3.6	1
21	10041728	4.5调整圈	Adjusting ring 4.5	(1)
22	10051039	7.0调整圈	Adjusting ring 7.0	1
23	20018197	一体机手轮喷漆件	Upper wheel	1
24	10012162	螺钉 M5×5	Screw M5×5	1
25	10005139	螺钉 M5×12	Screw M5×12	1
26	10005016	垫圈 Φ5	Washer Φ5	1
27	10041473	同步带压紧焊接件	Seal part	1
28	10004945	挡圈	Collar	2
29	10003576	轴承 6000ZZ	Bearing 6000ZZ	1
30	10005396	皮带压紧器轴承套	Bearing bush	1

8. 机臂零件(2) Arm parts (2)

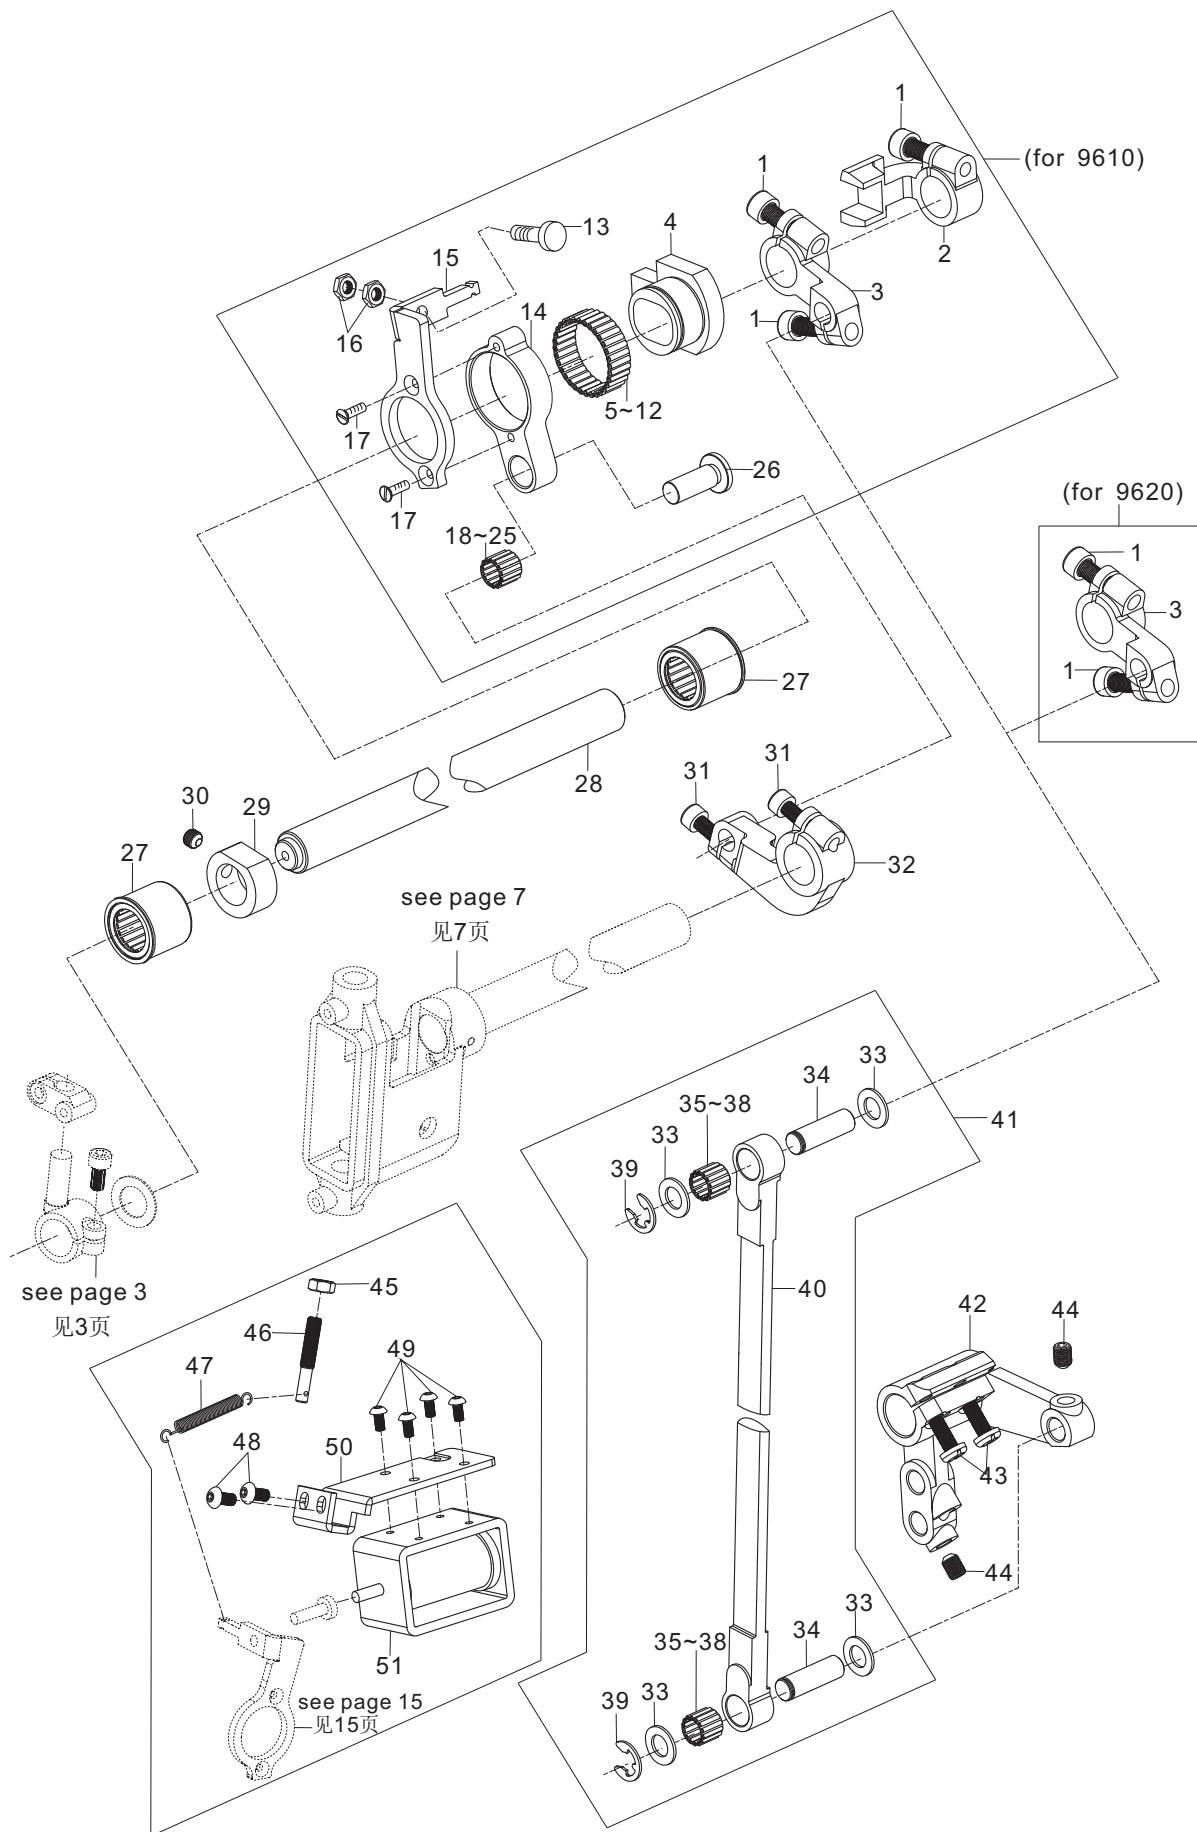


8. 机臂零件 (2)

Arm parts (1)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10009008	螺钉 M6×16	Screw M6 ×16	3
2	10041469	摆动架滑块槽	Crank slider groove	1
3	10001459	上边轴曲柄	Crank	1
4	10041468	摆动架滑块	Crank slider	1
5	10005255	滚针轴承	Needle bearing	(1)
6	10007324	滚针轴承	Needle bearing	(1)
7	10007325	滚针轴承	Needle bearing	(1)
8	10007270	滚针轴承	Needle bearing	(1)
9	10007271	滚针轴承	Needle bearing	(1)
10	10007326	滚针轴承	Needle bearing	(1)
11	10007327	滚针轴承	Needle bearing	(1)
12	10007272	滚针轴承	Needle bearing	1
13	10043257	摆动杆螺钉	Screw	1
14	10001974	曲柄连杆	Reciprocation rod	1
15	10002301	摆动杆	Oscillating rod	1
16	10001146	螺母 M5	Nut M5	2
17	10005451	开槽沉头螺钉 M3×10	Screw M3×10	1
18	10005035	滚针轴承	Needle bearing	(1)
19	10007195	滚针轴承	Needle bearing	(1)
20	10007196	滚针轴承	Needle bearing	(1)
21	10007197	滚针轴承	Needle bearing	(1)
22	10007198	滚针轴承	Needle bearing	(1)
23	10007199	滚针轴承	Needle bearing	(1)
24	10007367	滚针轴承	Needle bearing	(1)
25	10007368	滚针轴承	Needle bearing	1
26	10005047	针距调节连杆销	Feed regulator connecting rod pin	1
27	20000485	针杆架轴套组件	Needle bar rock shaft bush	2
28	10005111	上边轴组件	Upper shaft assy	1
29	10040233	针杆架轴挡圈	Thrust collar	1
30	10005258	螺钉 M6×0.75×5	Screw M6×0.75×5	1
31	10005139	螺钉 M5×12	Screw M5×12	2
32	10005481	曲柄	Crank	1
33	10005510	垫圈 Φ8	Washer Φ8	4
34	10005368	销轴	Shaft	2
35	10007198	滚针轴承	Needle bearing	(2)
36	10007199	滚针轴承	Needle bearing	(2)
37	10007367	滚针轴承	Needle bearing	2
38	10007368	滚针轴承	Needle bearing	(2)
39	10005473	挡圈	Thrust collar	2
40	10005416	竖边轴	Link shaft	1
41	10004980	竖边轴组件	Link shaft assy	1
42	10041475	连杆支臂	Link	1
43	10005271	螺钉 M5×12	Screw M5×12	2
44	10005258	螺钉 M6×0.75×5	Screw M6×0.75×5	2
45	10002096	螺母 M6	Nut M6	1
46	10041443	弹簧销	Spring pin	1
47	10002550	摆动架倒缝复位弹簧	Spring	1
48	10007096	螺钉 M5×10	Screw M5×10	2
49	10005107	螺钉 M4×6	Screw M4×6	4
50	20003978	摆动架电磁铁安装板喷漆	Plate	1
51	10001926	摆动架电磁铁	Swing span electromagnet	1

9. 机臂零件(3) Arm parts (3)

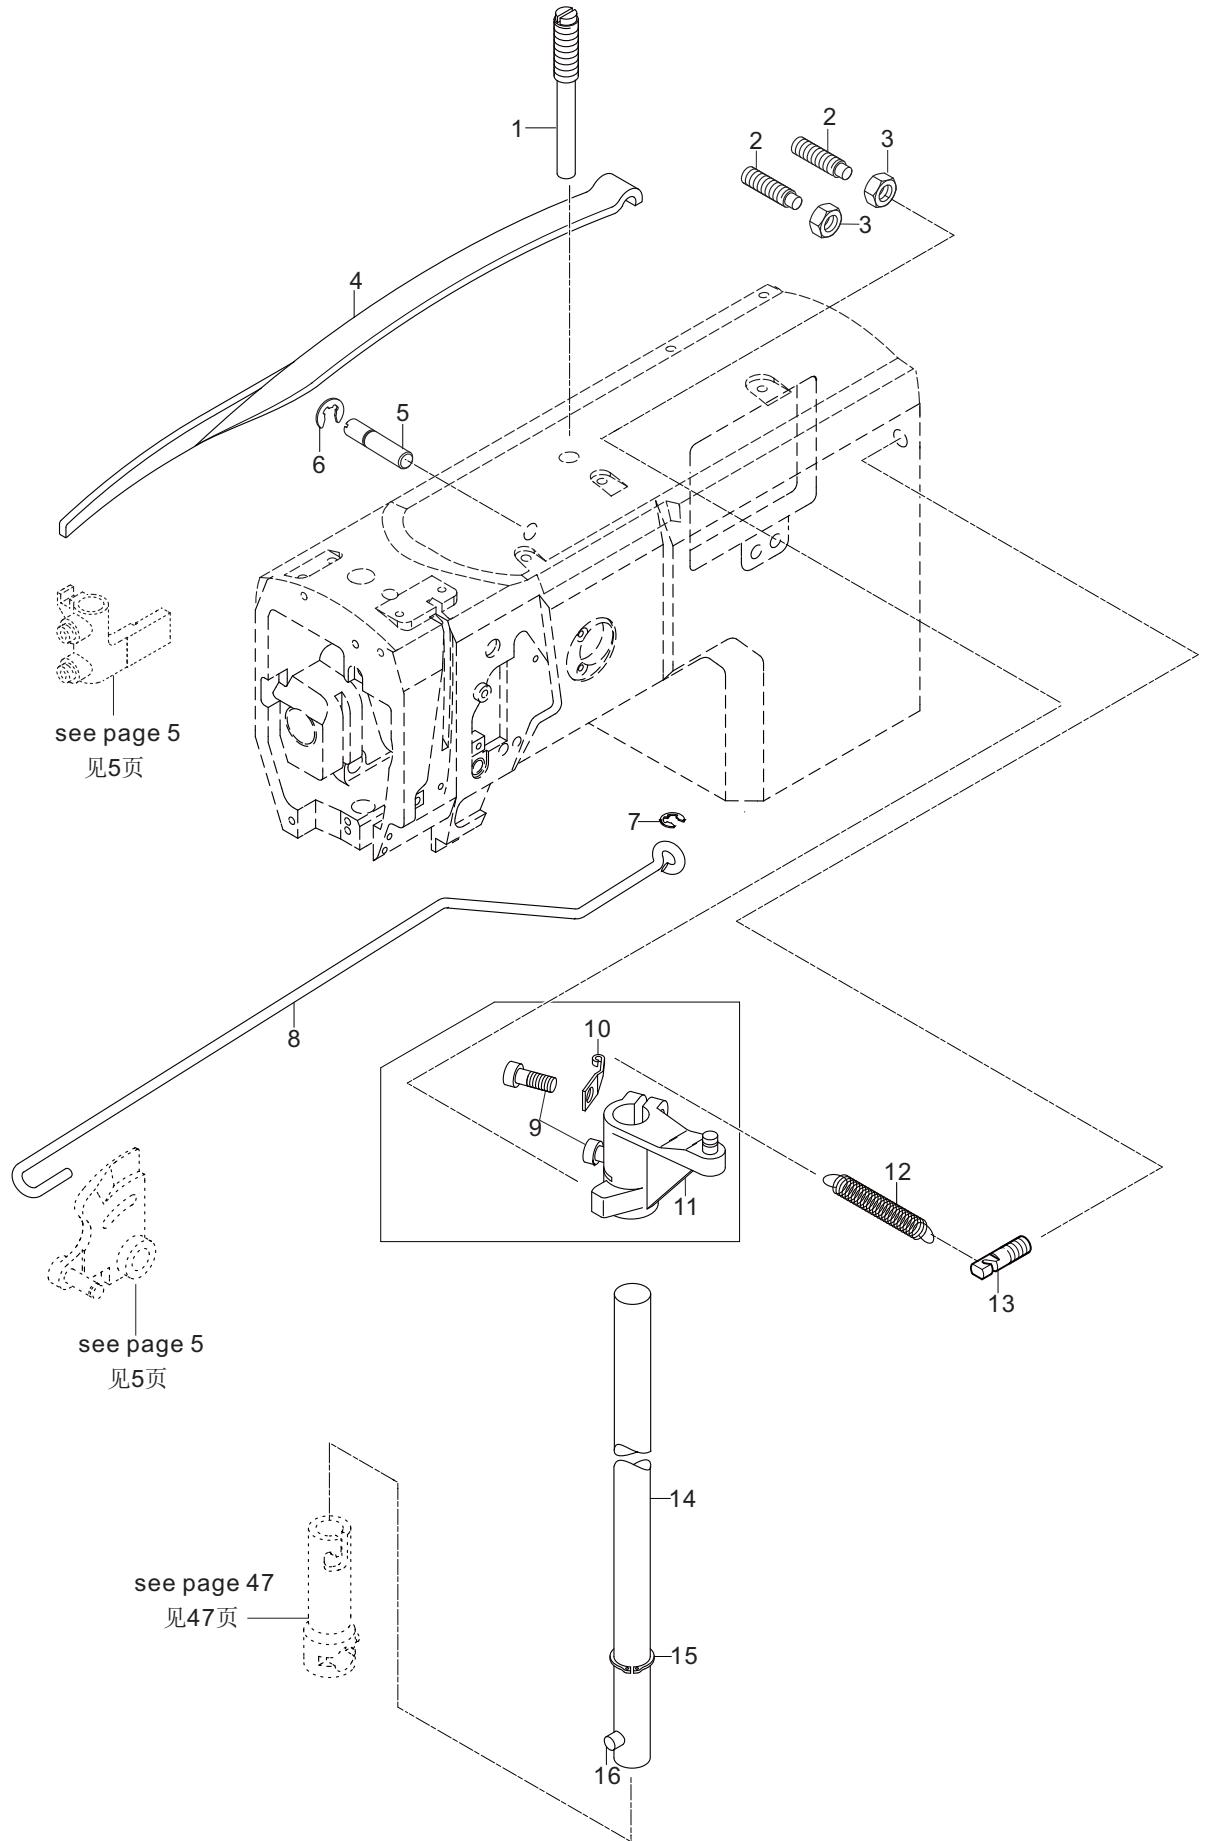


9. 机臂零件 (3)

Arm parts (3)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10005509	弹簧螺钉	Spring Screw	1
2	10005001	螺钉 M6×30	Screw M6×30	2
3	10005504	调节螺母 M6	Nut M6	2
4	10004998	压紧杠杆	compress lever	1
5	10005145	螺钉 M6×7.2	Screw M6×7.2	1
6	10001947	卡圈	collar	1
7	10005078	卡圈	collar	1
8	10041478	压脚拉杆	Connecting rod	1
9	10005139	螺钉 M5×12	Screw M5×12	2
10	10005287	弹簧固定板	Spring Board	1
11	10005233	脚杆动轴曲柄组件	Crank	1
12	10041445	脚杆动轴拉簧	Spring	1
13	10005318	螺钉 M6×8	Screw M6×8	1
14	10006434	脚杆动轴组件	Moving axis assm	1
15	10005345	卡圈	Collar	1
16	10002867	销 5×14	Pin 5×14	1

10. 机臂零件(4)

Arm parts (4)

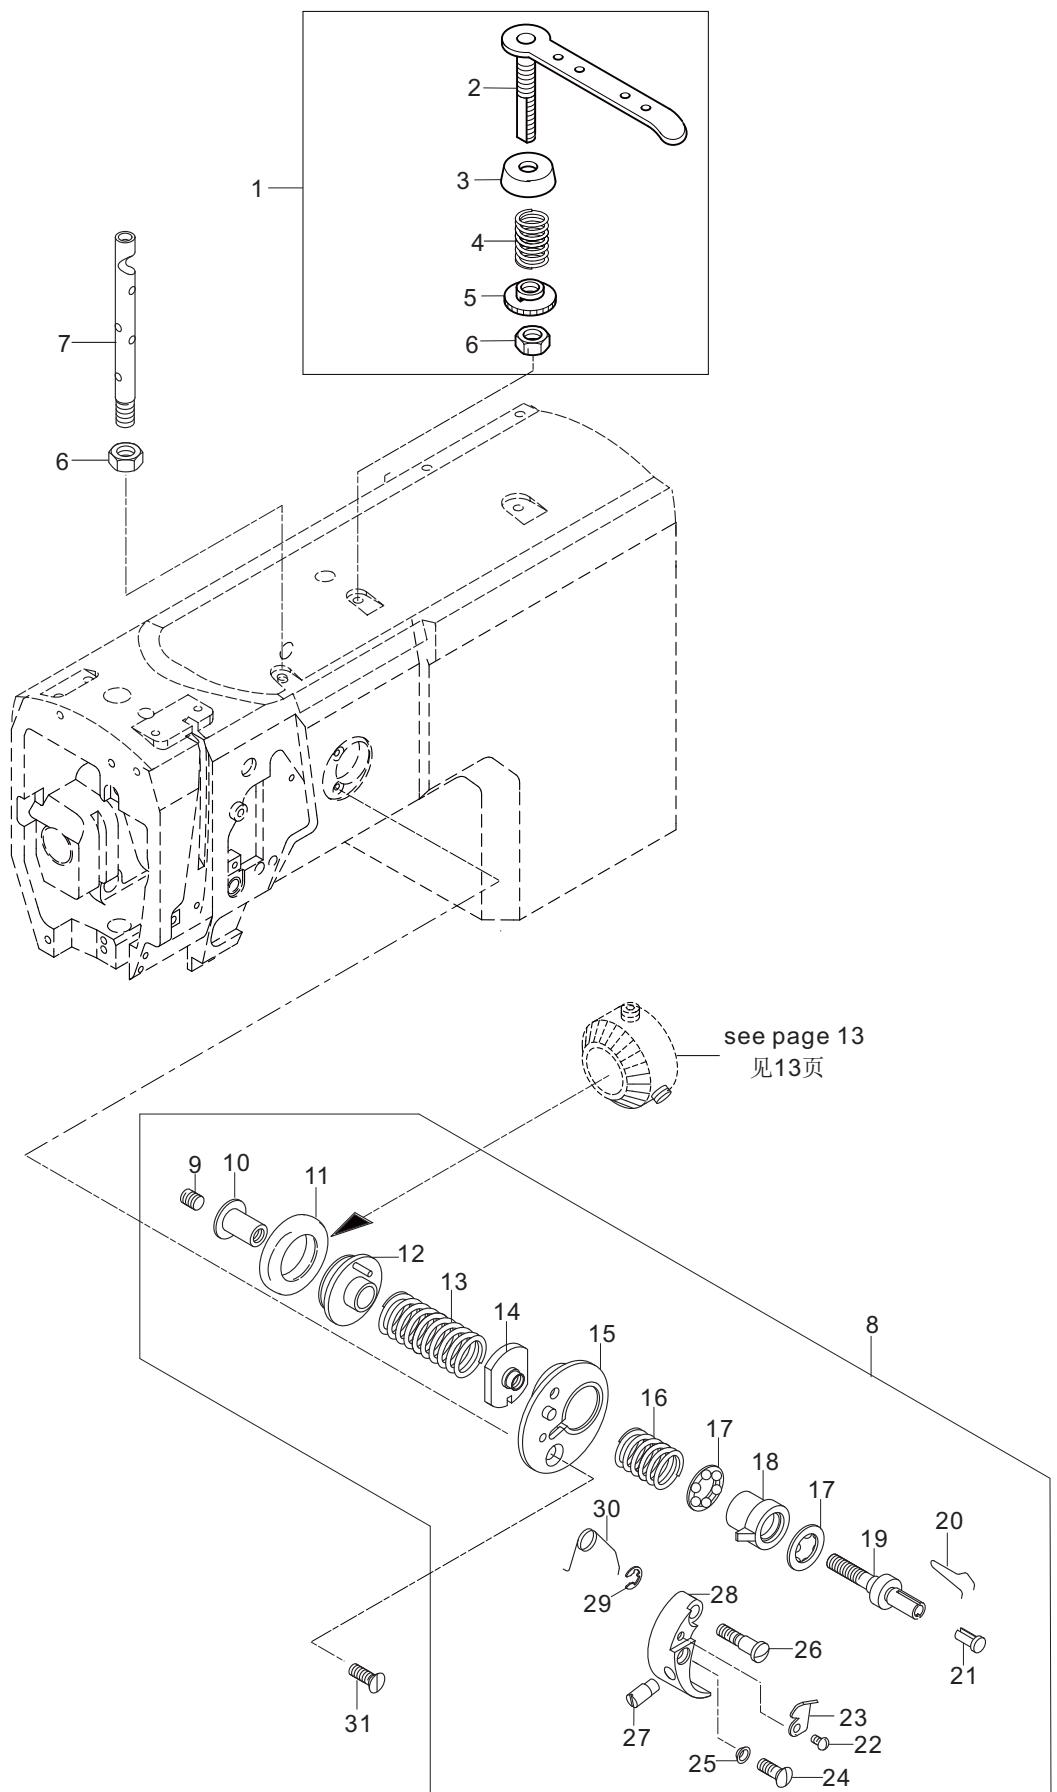


10. 机臂零件 (4)

Arm parts (4)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10005108	过线器	Thread guide	1
2	10004976	过线杆组件	Thread crossing column assy	1
3	10005359	调节簧座	Thred tension disk	1
4	10005069	过线器压簧	Spring	1
5	10005520	夹线调节螺母 M6	Nut M6	1
6	10004970	六角螺母 M6	Nut M6	2
7	10005384	过线柱	Thread crossing column	1
8	10005149	绕线器	Bobbin winder unit	1
9	10012162	螺钉 M5×5	Screw M5×5	1
10	10004954	螺杆座	Screw plate	1
11	10005545	橡胶轮	Ring	1
12	10005261	绕线轮座组件	Bobbin winder shaft compl.	1
13	10005404	下压簧	Compression spring	1
14	10005075	压簧座	Compression spring seat	1
15	10005120	线圈板组件	Retaining ring assy	1
16	10005516	上压簧	Comressing spring	1
17	10005324	端面轴承	Edge bearing	2
18	10005235	芯轴衬套	Shaft bush	1
19	10005110	芯轴	Shaft	1
20	10005319	梭芯簧	Shuttle spring	1
21	10004986	梭芯衬套	Shuttle bush	1
22	10008017	切刀定位螺钉	Screw	1
23	10008016	剪刀	Knife	1
24	10005355	挡块销紧定螺钉 M3×8	Screw M3×3	1
25	10005313	挡块螺钉垫	Washer	1
26	10005033	转动螺钉 M4×4	Screw M4×4	1
27	10005553	挡块销	Pin	1
28	10005475	挡块	Plate	1
29	10003248	挡圈 Φ8	Collar	1
30	10005375	扭簧	Spring	1
31	10005459	螺钉 M4×8	Screw M4×8	1

11. 底板零件(1) Bedplate psrts (1)

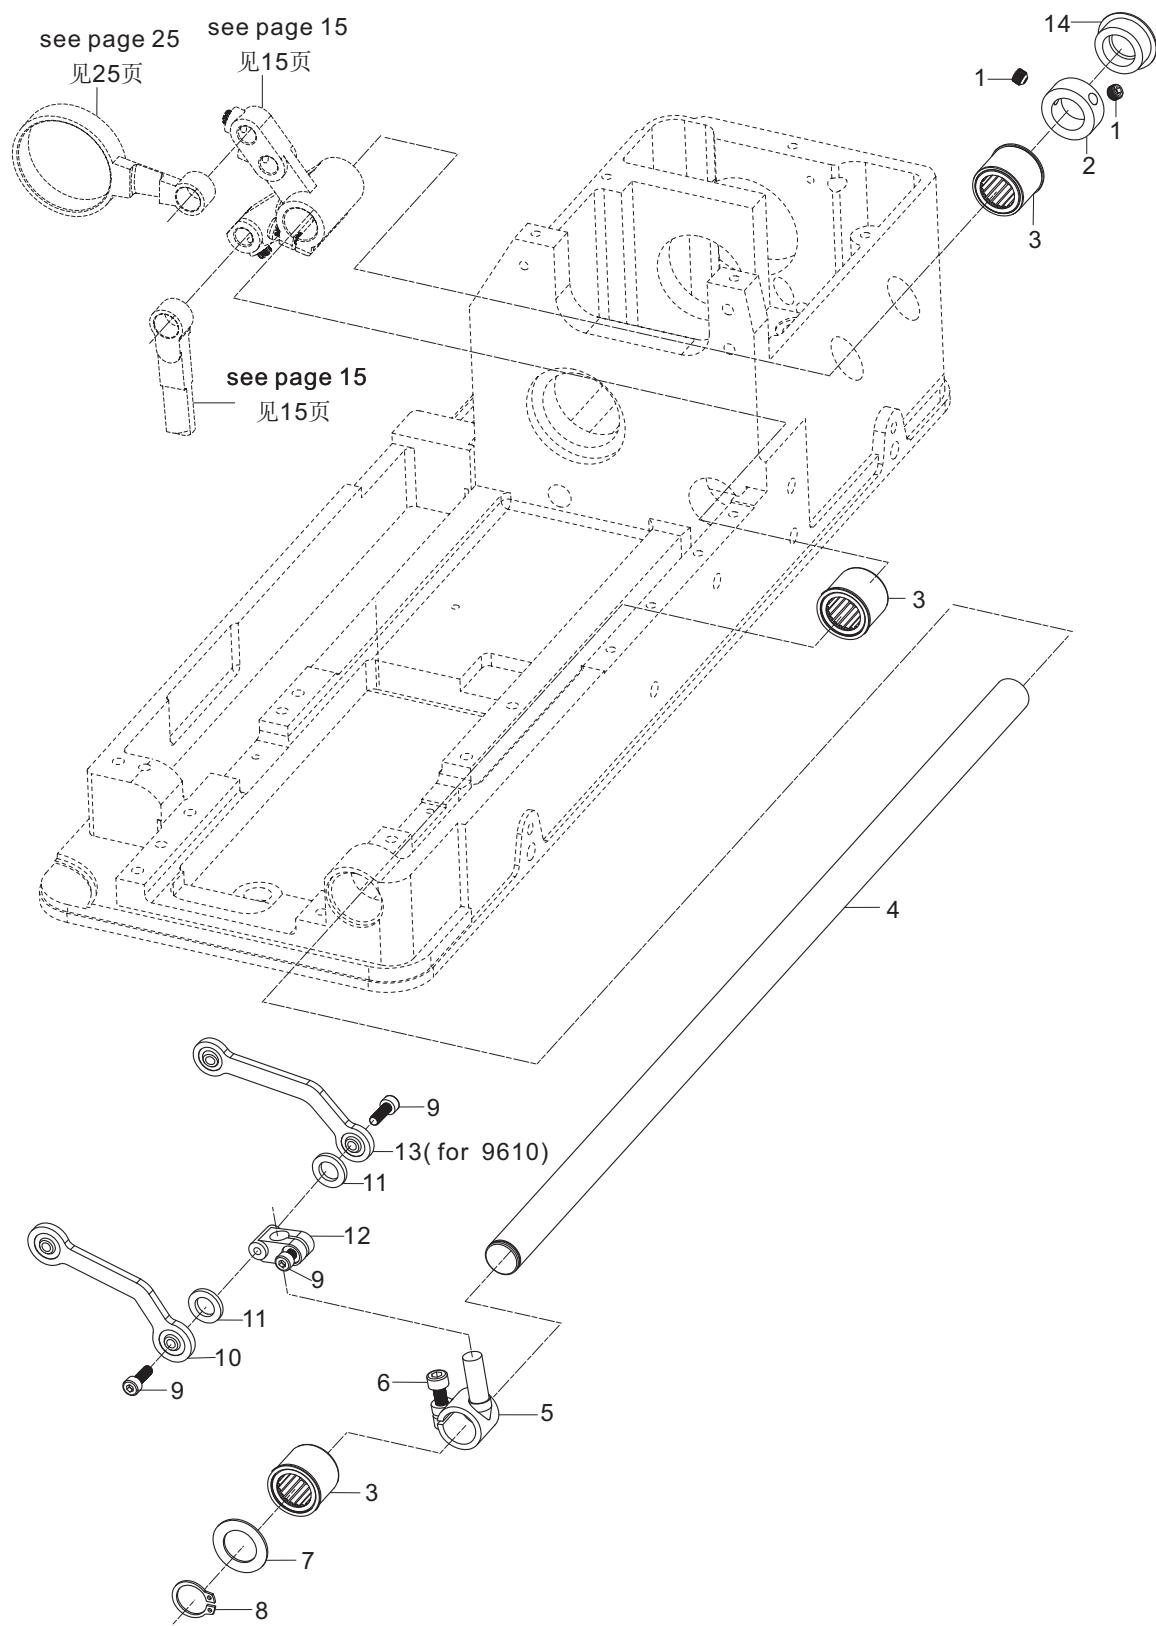


11. 底板零件 (1)

Bedplate parts (1)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10005258	螺钉 M6×0.75×5	Screw M6×0.75×5	2
2	10005477	15输送主轴挡圈	Shaft collar	1
3	20000485	针杆架轴套组件	Bearing bush assy	3
4	10041425	一体输送主轴	Transport major axis	1
5	10005212	万向联接头	Universal coupling head	1
6	10010953	螺钉 M5×10	Screw M5×10	1
7	10005194	15输送主轴挡圈垫片	Washer	1
8	10010090	卡圈	Collar	1
9	10012752	螺钉 M4×10	Screw M4×10	3
10	10001432	574球连杆组件	574 ball connecting rod component	1
11	10005343	油毡垫片	Oil reservoir gasket	2
12	10005043	万向联接座	Base frame	1
13	10038321	球连杆组件	Ball connecting rod component	1
14	10041484	输送主轴胶塞	Rubber plug	1

12. 底板零件(2) Bedplate psrts (2)

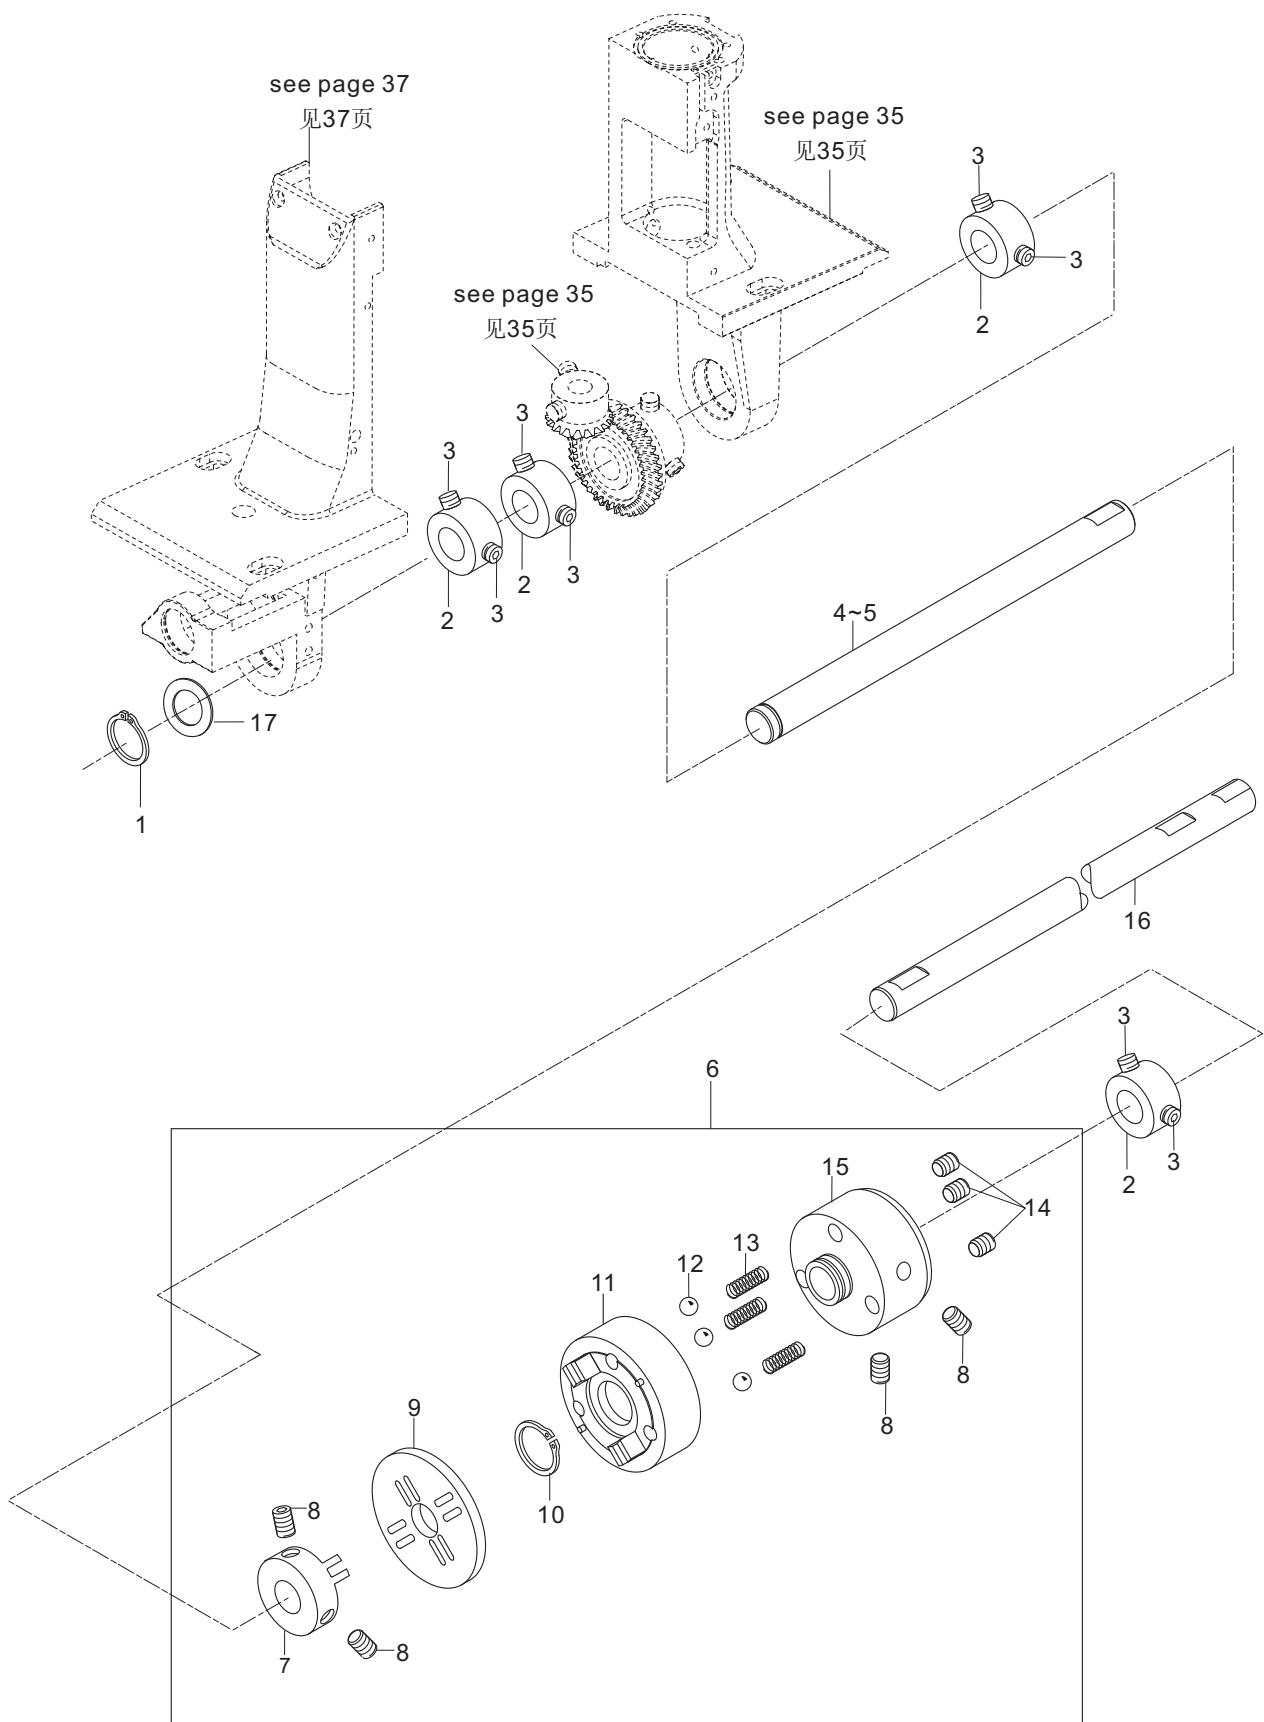


12. 底板零件 (2)

Bedplate parts (2)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10005345	卡圈	Collar	1
2	10005409	12万向联接轴挡圈	shaft collar	4
3	10012162	螺钉 M5×5	Screw M5×5	8
4	10038490	万向联接轴A (for 9610)	Universal coupling spindle A (for 9610)	1
5	10042082	双针万向联接轴 (for 9620)	Universal coupling spindle (for 9620)	1
6	10005250	离合器	Clutch	1
7	10004969	离合器小连接	Clutch minor connector	1
8	10005300	螺钉 M6×0.75×8	Screw M6×0.75×8	4
9	10005364	离合器连接板	Clutch gusset	1
10	10005147	卡圈	Collar	1
11	10005189	离合器连接组件	Clutch connector	1
12	10013306	钢珠球	Steel ball	3
13	10004948	离合器小弹簧	spring	3
14	10005119	螺钉 M6×0.75×6	Screw M6×0.75×6	3
15	10005486	离合器连接座	Clutch frame	1
16	10041426	一体下轴	Lower shaft	1
17	10003068	垫片 Φ12	Washer	1

13. 底板零件(3)

Bedplate psrts (3)

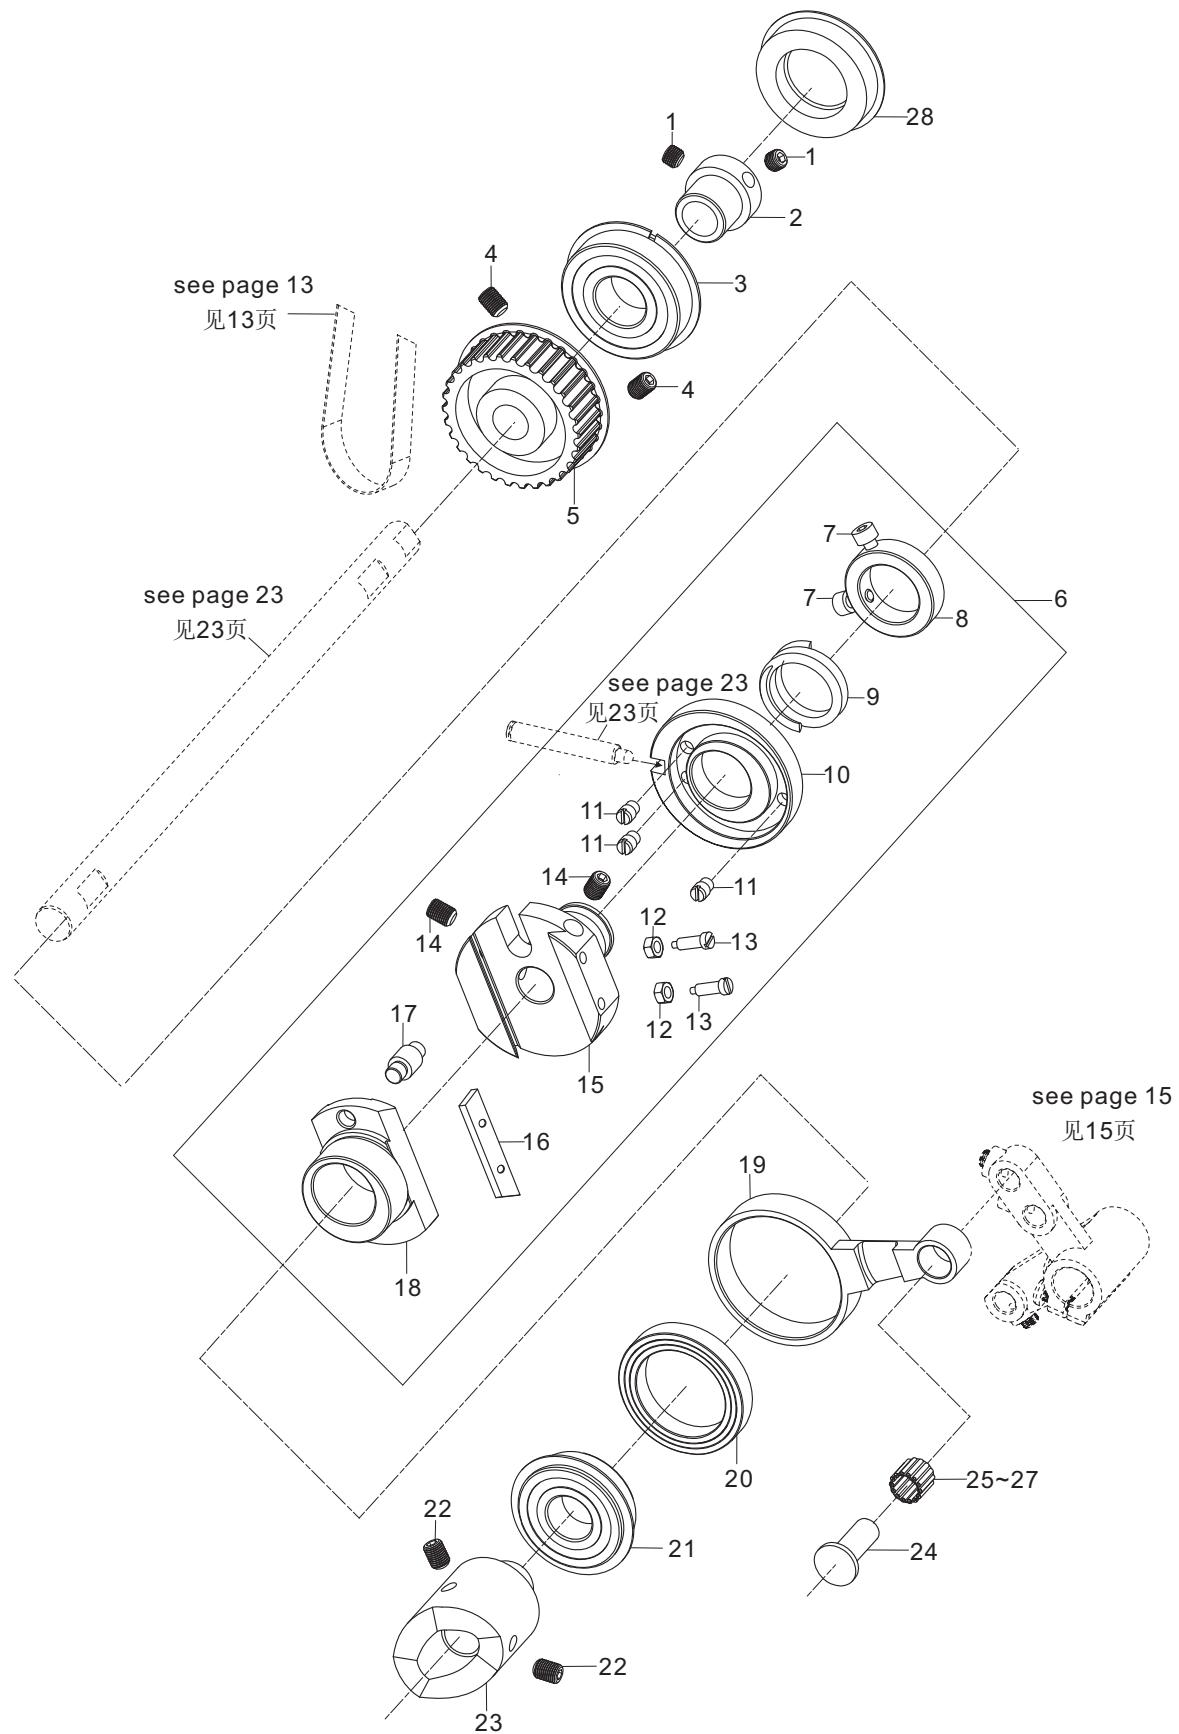


13. 底板零件 (3)

Bedplate parts (3)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10005549	螺钉 M6×5	Screw M6×5	2
2	10005142	下轴轴承套	Lower shaft rear bush	1
3	10007152	轴承	Bearing	1
4	10009187	螺钉 M6×8	Screw M6×8	2
5	10041637	下轴宽带轮	Lower shaft sprocket	1
6	10024829	针距调节器部件	Guage regulator component	1
7	10005350	螺钉 M4×8	Screw M4×8	2
8	10027709	挡圈	Collar	1
9	10027708	压簧	compression spring	1
10	10027707	偏心调整轮	Adjustment wheel	1
11	10027706	螺钉	Screw	3
12	10027715	螺母	Nut	2
13	10027714	螺钉	Screw	2
14	10009187	螺钉 M6×8	Screw M6×8	2
15	10027711	针距调节器滑块槽	Slider groove	1
16	10027713	调整垫	Adjustment plate	1
17	10027712	销	Pin	1
18	10027710	针距调节器滑块	Slider	1
19	10005511	针距调节传动连杆	Connecting rod	1
20	10008113	轴承	Bearing	1
21	10009787	轴承	Bearing	1
22	10004938	螺钉 M6×0.75×8	Screw M6×0.75×8	2
23	10001509	下轴剪线凸轮	Thread trimming cam	1
24	10005047	针距调节连杆销	Connecting pin	1
25	10007368	滚针轴承	Needle bearing	1
26	10007199	滚针轴承	Needle bearing	(1)
27	10007197	滚针轴承	Needle bearing	(1)
28	10041424	下轴胶塞	Rubber plug	1

14. 底板零件(4)

Bedplate psrts (4)

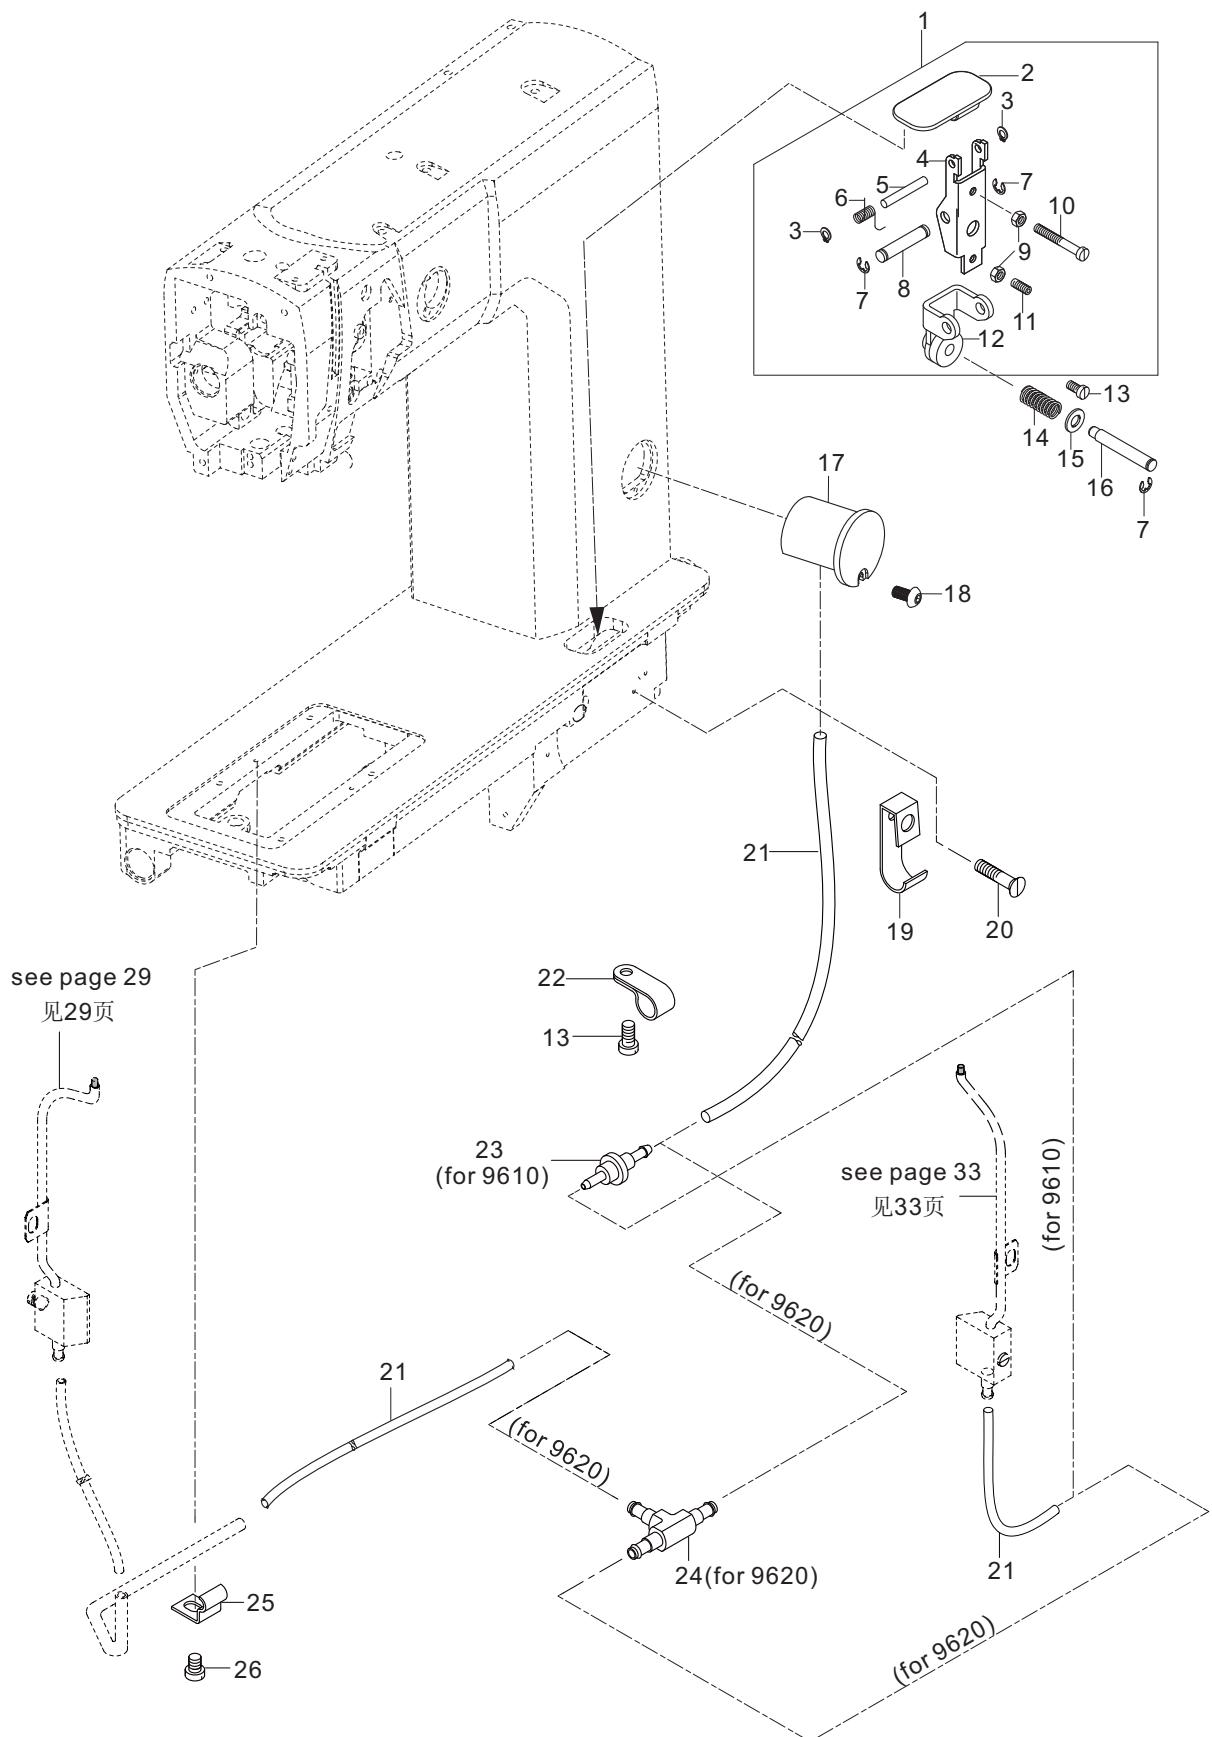


14. 底板零件 (4)

Bedplate parts (4)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10005507	针脚调节装置	Stitch adjusting assembly	1
2	10005420	调节器摆动板焊接件	Adjusting plate	1
3	10005238	针距调节装置轴卡圈	Ccollar	2
4	10005080	调节器角钢	Angle adjustment	1
5	10002788	销 4×30	Pin 4×30	1
6	10005457	转动扭簧	Spring	1
7	10005078	卡圈	Collar	3
8	10005266	摆动轴	Shaft	1
9	10003027	螺母 M4	Nut M4	2
10	10005351	螺钉 M4×32	Screw M4×32	1
11	10003149	螺钉 M4×10	Screw M4×10	1
12	10004939	调节器轴承座	Adjusting plate	1
13	10005513	螺钉 M4×8	Screw M4×8	1
14	10005251	摆动压簧	Compress spring	1
15	10004979	垫圈 Φ6	Washer Φ6	1
16	10025663	调节器体销轴	Adjusting pin	1
17	10041464	油窗组件	Oil tank assy	1
18	10005107	螺钉 M4×6	Screw M4×6	1
19	10004973	油管夹	Oil pipe clip	1
20	10041018	沉头螺钉 M4×14	Screw M4×14	1
21	10007800	油管	Oil tube	2
22	10008228	油管夹	Oil pipe clip	1
23	10005311	油管接头	Terminall	1
24	10001535	T形接头	Terminall	1
25	10002150	油管夹板	Oil tube support	1
26	10005076	螺钉 M4×5	Screw M4×5	1

15. 旋梭左支座(1)

Hook post , left(1)

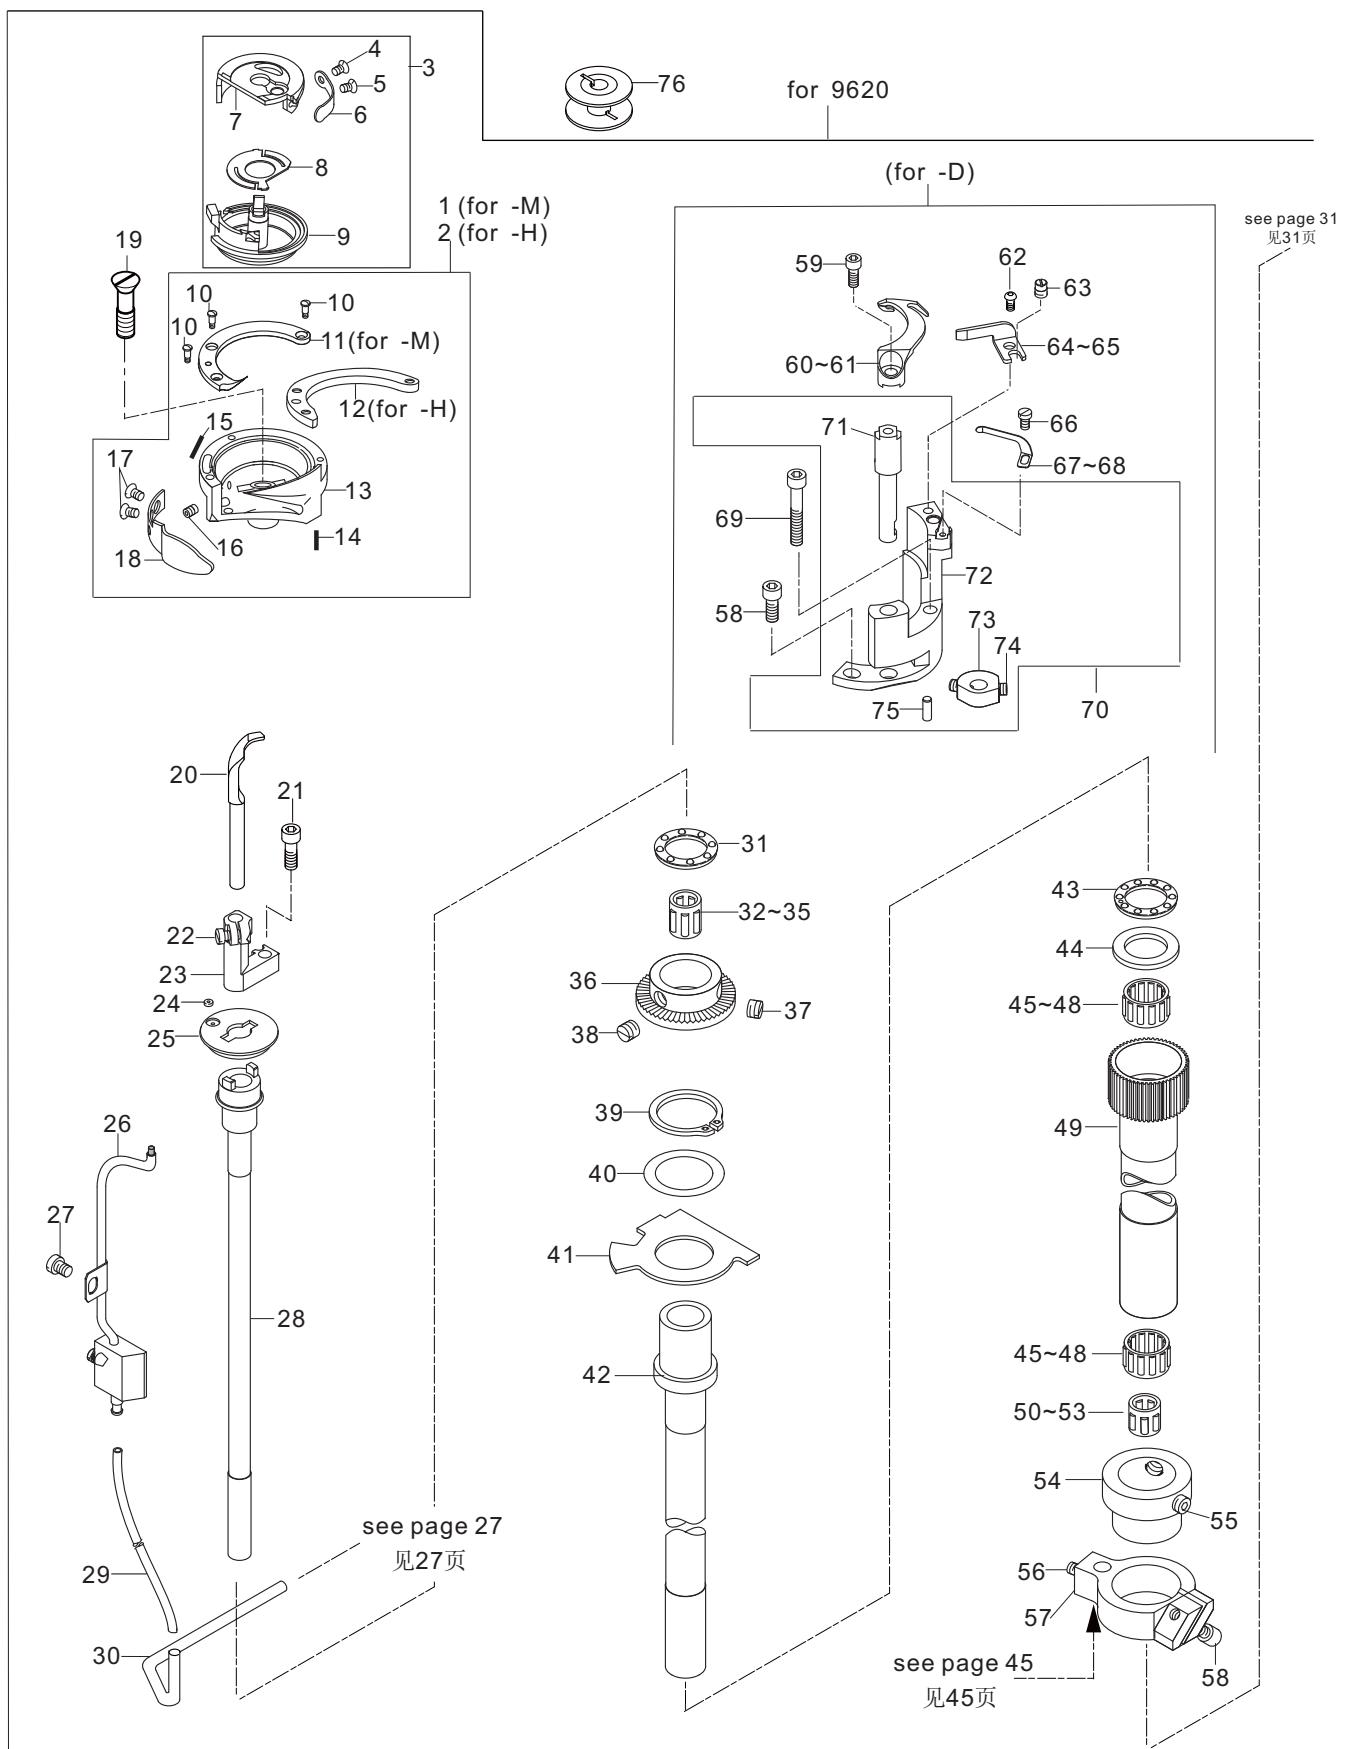


15. 旋梭左支座 (1)

Hook post, left (1)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10005378	薄料旋梭 (for -M)	Hook-thin (for -M)	1
2	10004081	厚料旋梭 (for -H)	Hook-thickness (for -H)	1
3	10005393	梭壳组件	Bobbin case asm	1
4	10004944	板式弹簧螺钉 I	Screw	1
5	10005206	板式弹簧螺钉 II	Screw	1
6	10005488	板式弹簧	Spring plate	1
7	10005555	梭头体	Hook-top	1
8	10005066	弹簧片	Spring	1
9	10005518	梭宛	Shuttle wan	1
10	10005541	螺钉	Screw	3
11	10005203	内梭头舌-薄料 (for -M)	Shuttle' tongue (for -M)	1
12	10005308	内梭头舌-厚料 (for -H)	Shuttle' tongue (for -H)	1
13	10005452	梭壳	Bobbin case	1
14	10005184	注塞	Wick	1
15	10005353	油毡注塞	Oil felt wick	1
16	10005354	螺钉 M3×4	Screw M3×4	1
17	10005106	螺钉 M2.6×4	M2.6×4	2
18	10005315	护针板	Needle protected plate	1
19	10004984	螺钉 M5×20	Screw M5×20	1
20	10005182	旋梭定位勾	Positioning finger	1
21	10005366	螺钉 M4×12	Screw M4×12	1
22	10005204	螺钉 M4×6	Screw M4×6	1
23	10005154	旋梭定位勾座	Positioning finger plate	1
24	10004937	O形圈	O ring	1
25	10005360	旋梭端盖	hook lid	1
26	10005394	油量调节组成	Rubber assy	1
27	10005076	螺钉 M4×5	Screw M4×5	1
28	10005245	旋梭传动芯轴	Hook transmission mandrel	1
29	10007800	油管	Oil felt	1
30	10002151	铜油管	Copper tubing	1
31	10005346	小端面轴承	Small end bearing	1
32	10007373	滚针轴承	Needle bearing	(1)
33	10007404	滚针轴承	Needle bearing	(1)
34	10007405	滚针轴承	Needle bearing	(1)
35	10007374	滚针轴承	Needle bearing	1
36	10001555	送料转盘	Feeding wheel	1
37	10001538	送料转盘螺钉I M6×0.75×3	Screw M6×0.75×3	1
38	10001559	送料转盘螺钉 M6×0.75×5	Screw M6×0.75×3	1
39	10001416	20旋梭护片卡圈	Collar	1
40	10001425	20旋梭护片垫圈	Collar	1
41	10001611	旋梭护片	Armor pieces	1
42	10001558	574送料传动轴	574 feeding drive shaft	1
43	10001556	574端面轴承	574 end bearing	1
44	10001560	端面轴承承垫圈	Washer	1
45	10007759	滚针轴承	Needle bearing	2
46	10007758	滚针轴承	Needle bearing	(2)
47	10007757	滚针轴承	Needle bearing	(2)
48	10008054	滚针轴承	Needle bearing	(2)
49	10008234	574旋梭传动轴 I	574 hook shaft	1
50	10007368	滚针轴承	Needle bearing	(1)
51	10007367	滚针轴承	Needle bearing	1
52	10007199	滚针轴承	Needle bearing	1
53	10007198	滚针轴承	Needle bearing	1
54	10001887	20旋梭传动轴挡圈	Retainging ring	1
55	10005549	螺钉 M6×0.75×5	Screw M6×0.75×5	2
56	10012162	螺钉 M5×5	Screw M5×5	1
57	10001426	574旋梭传动曲柄	Crank	1
58	10005322	螺钉 M5×10	Screw M5×10	2
59	10052010	螺钉 M4×10	Screw M4×10	1
60	10039485	动刀 (台湾)	Movable knife (Made in Taiwan)	1
61	10038408	动刀 (国产)	Movable knife (Made in Chian)	(1)
62	10005107	螺钉 M4×6	Screw M4×6	1
63	10038411	偏心销	Eccentric pin	1
64	10039486	定刀 (台湾)	Fixed knife (Made in Taiwan)	1
65	10038410	定刀 (国产)	Fixed knife (Made in Chian)	1
66	10001512	螺钉 M2.5×3	Screw M2.5×3	1
67	10039487	线夹 (台湾)	Wire clip (Made in Taiwan)	1
68	10038412	线夹 (国产)	Wire clip (Made in Chian)	(1)
69	10001608	螺钉 M4×25	Screw M4×25	1
70	10038405	定刀支架部件	Moveble knife lever	1
71	10038407	勾线板支架A	Knife holder	1
72	10038406	定刀支架	Fixed knife bracket seat	1
73	10001517	传动齿轮	Transmission gear	1
74	10001514	螺钉 M4×4	Screw M4×4	2
75	10002069	定位销 3×10	Pin 3×10	1
76	10005461	梭心	Bobbin	1

16. 旋梭左支座(2)

Hook post , left(2)

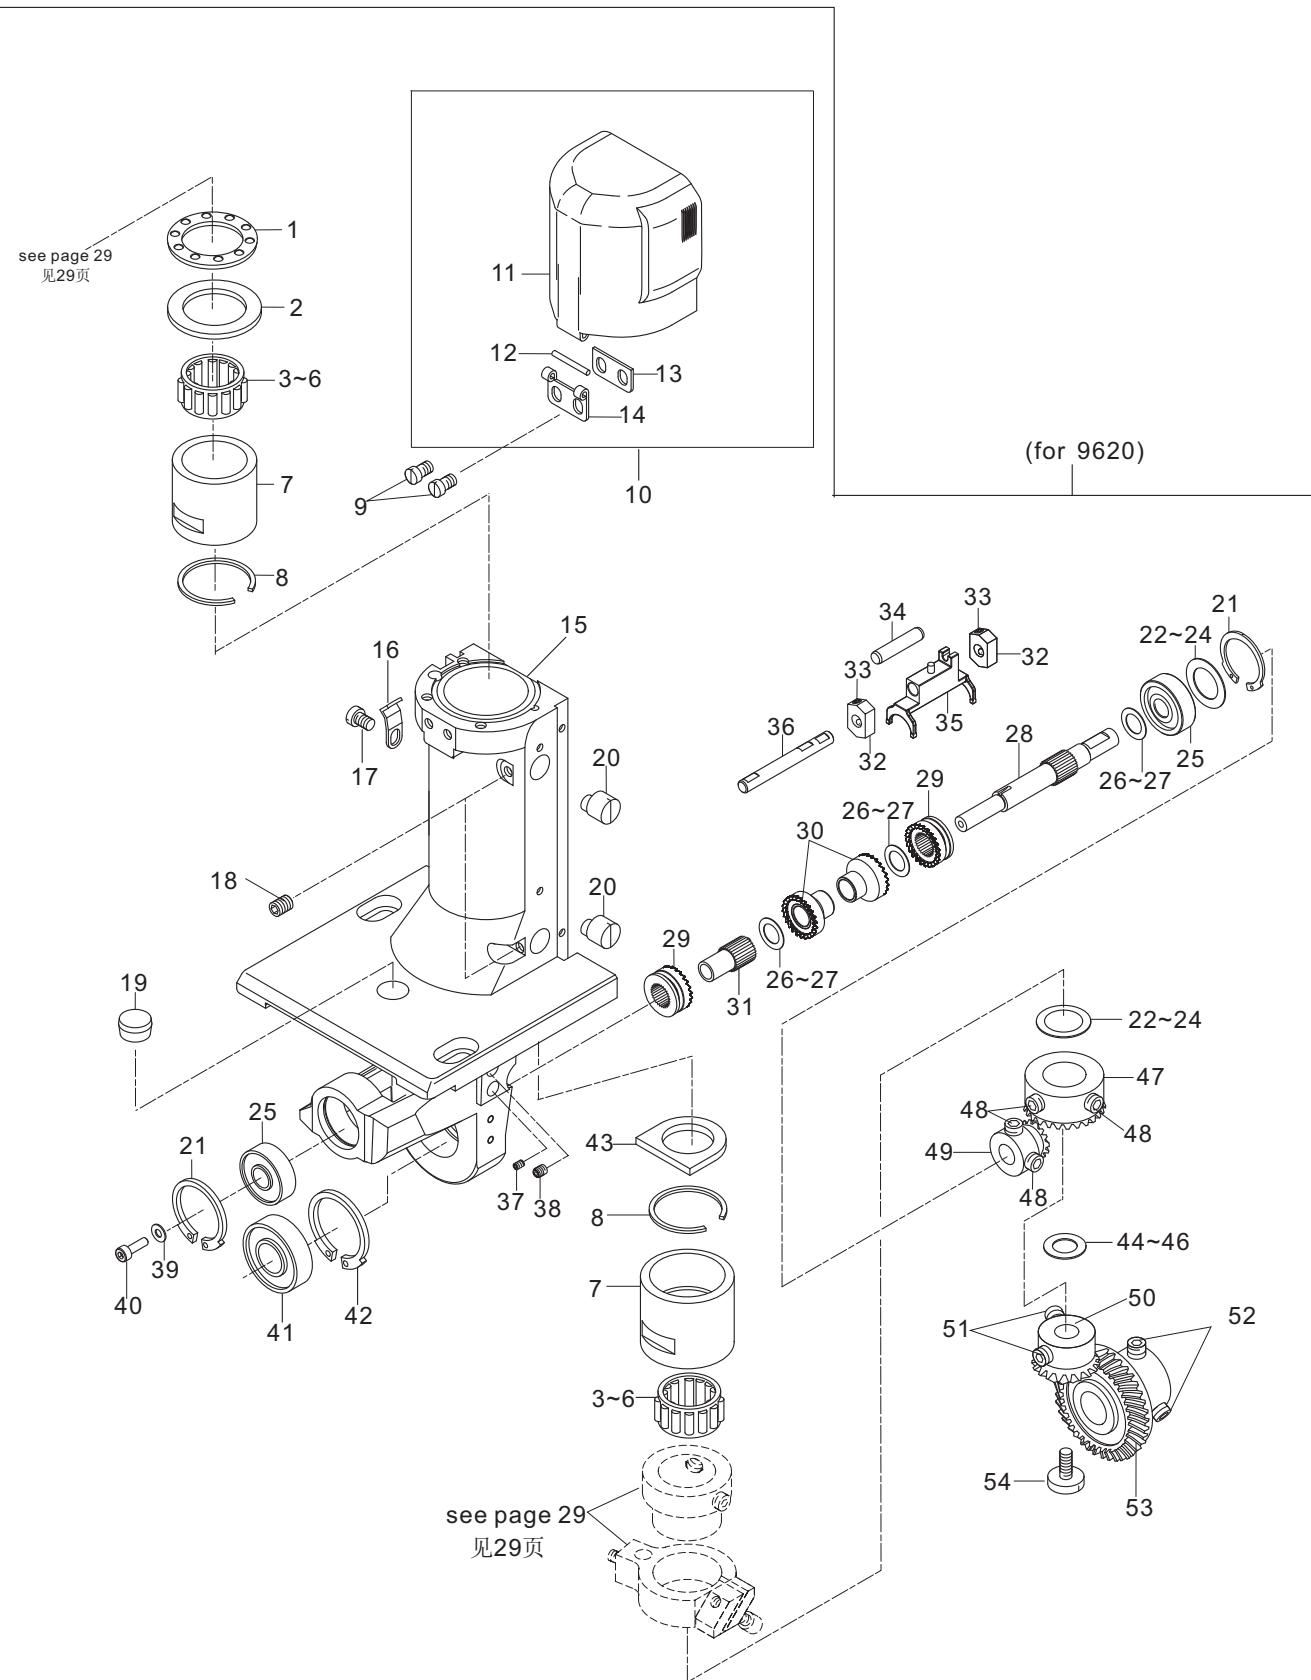


16. 旋梭左支座 (2)

Hook post, left (2)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10005398	端面轴承	End bearing	1
2	10005052	垫圈	Washer	1
3	10007377	滚针轴承	Needle bearing	2
4	10007376	滚针轴承	Needle bearing	(2)
5	10007275	滚针轴承	Needle bearing	(2)
6	10007274	滚针轴承	Needle bearing	(2)
7	10005259	旋梭传动轴轴套	Hook shaft sleeve	2
8	10005383	挡圈	Collar	2
9	10005186	螺钉 M4×8	Screw M4×8	2
10	10038399	旋梭防护罩组件	Hook shield components	1
11	10038400	旋梭防护罩	Hook shield	1
12	10038404	销	Pin	1
13	10038403	垫片	Washer	1
14	10038402	护罩转动座	Shield driving seat	1
15	20013285	旋梭左支座D喷漆	Hook the left bearing	1
16	10004999	弹簧板	Spring plate	1
17	10005309	螺钉 M4×6	Screw M4×6	1
18	10009741	螺钉 M4×6	Screw M4×6	2
19	10005407	油塞	Oil plug	1
20	10005215	偏心销	Eccentric pin	2
21	10005432	22挡圈	Collar	2
22	10001564	垫片	Washer	(3)
23	10007788	垫片	Washer	3
24	10007789	垫片	Washer	(3)
25	10003586	608ZZ轴承	Bearing	2
26	10038304	垫片	washer	6
27	10038303	垫片	washer	(6)
28	10038305	送料主动轴	Feeding drive shaft	1
29	10049853	滑动离合器	Slip clutch	2
30	10049850	传动齿轮组件	Drive gear components	2
31	10038310	短花键轴	Spline shaft	1
32	10038313	挡块	Collar	2
33	10009741	螺钉 M4×6	Screw M4×6	4
34	10038311	限位轴	Limit shaft	1
35	10038312	切换滑座	The switch slide	1
36	10038314	导向轴	Guide shaft	1
37	10002853	螺钉 M3×4	Screw M3×4	1
38	10012162	螺钉 M5×5	Screw M5×5	1
39	10002068	垫圈 Φ3	Washer Φ3	1
40	10009553	螺钉 M3×8	Screw M3×8	1
41	10007200	轴承 6001ZZ	Bearing	1
42	10005029	28挡圈	Collar	1
43	10005177	油毡	Oil felt	1
44	10002011	垫片	Washer	3
45	10007754	垫片	Washer	(3)
46	10007755	垫片	Washer	(3)
47	10008115	574送料齿轮II组件	574 feeding drive gear components II	1
48	10005549	螺钉 M6×0.75×5	Screw M6×0.75×5	4
49	10007973	574送料齿轮 I	574 feeding drive gear I	1
50	10006298	传动旋梭齿轮 II	The hook driving gear II	1
51	10005258	螺钉 M6×0.75×5	Screw M6×0.75×5	2
52	10005119	螺钉 M6×0.75×6	Screw M6×0.75×6	2
53	10006297	传动旋梭齿轮 I 组件	The hook driving gear components II	1
54	10001562	螺钉 M4×10	Screw M4×10	1

17. 旋梭右支座(1)

Hook post , right(1)

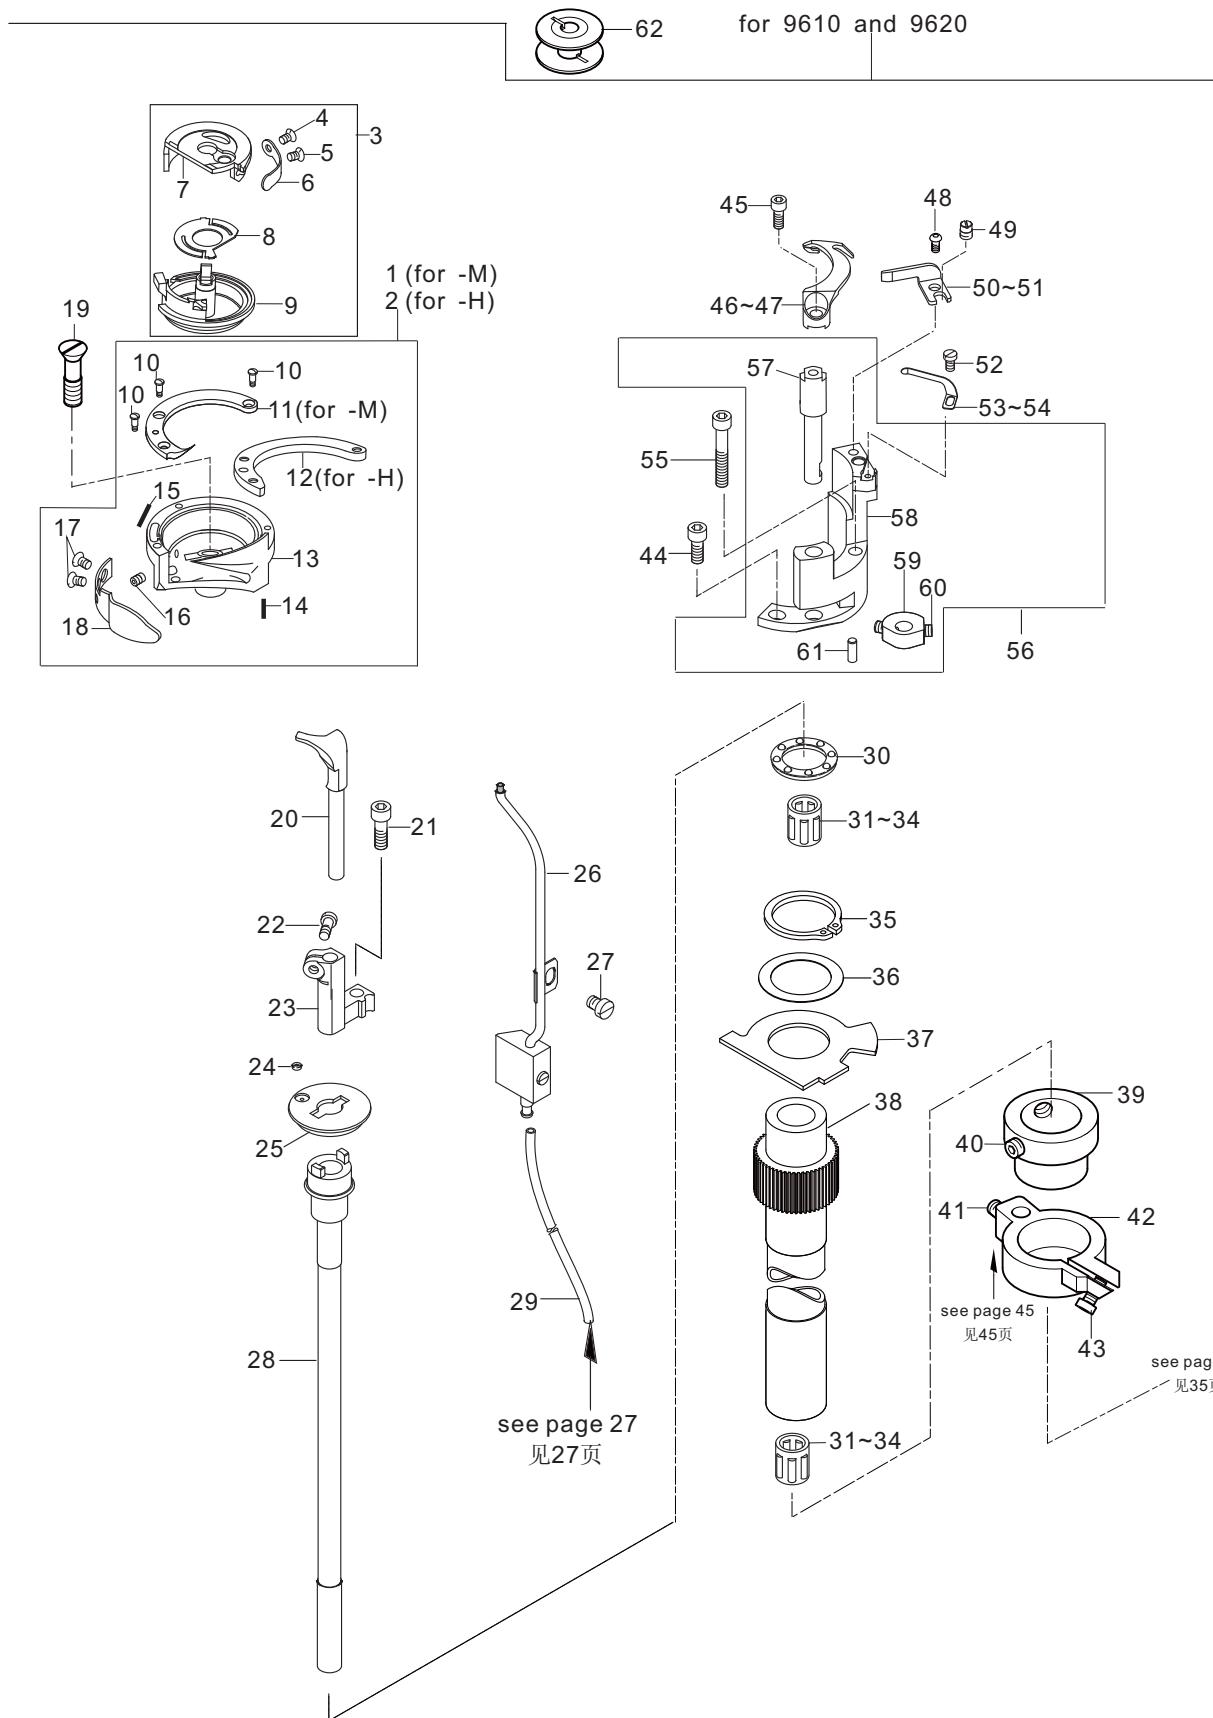


17. 旋梭右支座 (1)

Hook post, right (1)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10005378	薄料旋梭 (for -M)	Hook-thin (for -M)	1
2	10004081	厚料旋梭 (for -H)	Hook-thickness (for -H)	1
3	10005393	梭壳组件	Bobbin case asm	1
4	10004944	板式弹簧螺钉 I	Screw	1
5	10005206	板式弹簧螺钉 II	Screw	1
6	10005488	板式弹簧	Spring plate	1
7	10005555	梭头体	Hook-top	1
8	10005066	弹簧片	Spring	1
9	10005518	梭宛	Shuttle wan	1
10	10005541	螺钉	Screw	3
11	10005203	内梭头舌-薄料 (for -M)	Shuttle' tongue (for -M)	1
12	10005308	内梭头舌-厚料 (for -H)	Shuttle' tongue (for -H)	1
13	10005452	梭壳	Bobbin case	1
14	10005184	注塞	Wick	1
15	10005353	油毡注塞	Oil felt wick	1
16	10005354	螺钉 M3×4	Screw M3×4	1
17	10005106	螺钉 M2.6×4	M2.6×4	1
18	10005315	护针板	Needle protected plate	1
19	10004984	螺钉 M5×20	Screw M5×20	1
20	10005182	旋梭定位勾	Positioning finger	1
21	10005366	螺钉 M4×12	Screw M4×12	1
22	10005204	螺钉 M4×6	Screw M4×6	1
23	10005154	旋梭定位勾座	Positioning finger plate	1
24	10004937	O形圈	O ring	1
25	10005360	旋梭端盖	hook lid	1
26	10005394	油量调节组成	Rubber assy	1
27	10005076	螺钉 M4×5	Screw M4×5	1
28	10005245	旋梭传动芯轴	Hook transmission mandrel	1
29	10007800	油管	Oil felt	1
30	10005346	小端面轴承	End bearing	1
31	10007374	滚针轴承	Needle bearing	(2)
32	10007405	滚针轴承	Needle bearing	(2)
33	10007404	滚针轴承	Needle bearing	2
34	10007373	滚针轴承	Needle bearing	(2)
35	10003346	轴用挡圈	Collar	1
36	10001425	20旋梭护片垫圈	Washer	1
37	10001611	旋梭护片	Armor pieces	1
38	10001418	旋梭传动轴	hook shaft	1
39	10001887	20旋梭传动轴挡圈	Collar	1
40	10005549	螺钉 M6×0.75×5	Screw M6×0.75×5	2
41	10012162	螺钉 M5×5	Screw M5×5	1
42	10002106	旋梭传动曲柄	Crank	1
43	10005322	螺钉 M5×10	Screw M5×10	1
44	10005201	螺钉 M4×10	Screw M4×10	2
45	10005201	螺钉 M4×10	Screw M4×10	1
46	10039485	动刀 (台湾)	Movable knife (Made in Taiwan)	1
47	10038408	动刀 (国产)	Movable knife (Made in Chian)	(1)
48	10005107	螺钉 M4×6	Screw M4×6	1
49	10038411	偏心销	Eccentric pin	1
50	10039486	定刀 (台湾)	Fixed knife (Made in Taiwan)	1
51	10038410	定刀 (国产)	Fixed knife (Made in Chian)	1
52	10001512	螺钉 M2.5×3	Screw M2.5×3	1
53	10039487	线夹 (台湾)	Wire clip (Made in Taiwan)	1
54	10038412	线夹 (国产)	Wire clip (Made in Chian)	(1)
55	10001608	螺钉 M4×25	Screw M4×25	1
56	10038405	定刀支架部件	Moveble knife lever	1
57	10038407	勾线板支架A	Knife holder	1
58	10038406	定刀支架	Fixed knife bracket seat	1
59	10001517	传动齿轮	Transmission gear	1
60	10001514	螺钉 M4×4	Screw M4×4	2
61	10002069	定位销 3×10	Pin 3×10	1
62	10005461	梭心	Bobbin	1

18. 旋梭右支座(2)

Hook post , right(2)

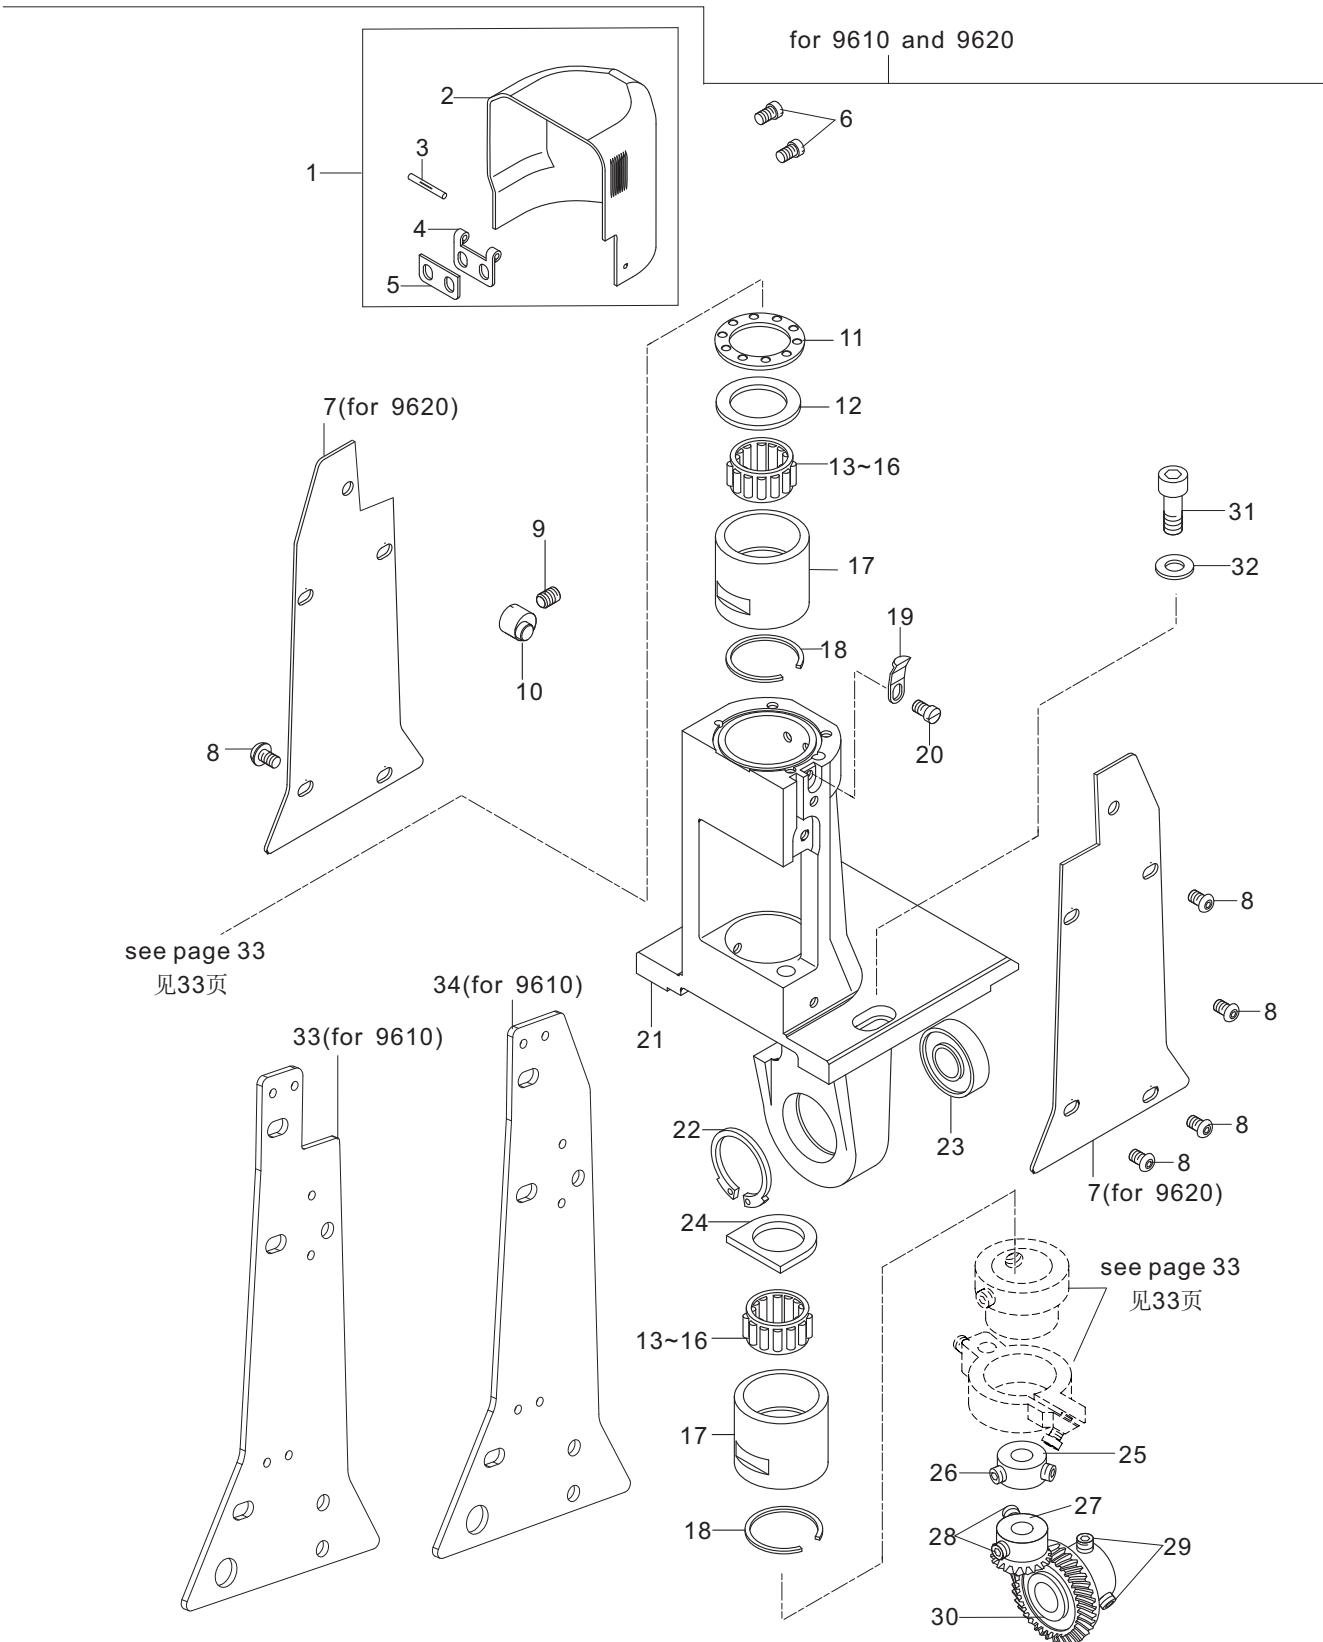


18. 旋梭右支座 (2)

Hook post, right (2)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10038399	旋梭防护罩组件	Hook shield components	1
2	10038400	旋梭防护罩	Hook shield	1
3	10038404	销	Pin	1
4	10038402	护罩转动座	Shield driving seat	1
5	10038403	垫片	Washer	1
6	10005186	螺钉 M4×8	Screw M4×8	2
7	20013284	双针侧盖板喷漆 (for 9620)	Double needle plate measuring (for 9620)	2
8	10005107	螺钉 M4×6	Screw M4×6	10
9	10009741	螺钉 M4×6	Screw M4×6	2
10	10005215	偏心销	Eccentric pin	2
11	10005398	端面轴承	End bearing	1
12	10005052	21垫圈	Washer	1
13	10007377	滚针轴承	Needle bearing	2
14	10007376	滚针轴承	Needle bearing	(2)
15	10007275	滚针轴承	Needle bearing	(2)
16	10007274	滚针轴承	Needle bearing	(2)
17	10005259	旋梭传动轴轴套	Hook shaft sleeve	2
18	10005383	挡圈	Collar	2
19	10004999	弹簧板	Spring plate	1
20	10005309	螺钉 M4×6	Screw M4×6	1
21	20003491	旋梭支座喷漆	Hook the right bearing	1
22	10005029	28挡圈	Collar	1
23	10007200	轴承 6001ZZ	Bearing 6001ZZ	1
24	10005177	油毡	Oil felt	1
25	10005413	8旋梭传动芯轴挡圈	Collar	1
26	10005549	螺钉 M6×0.75×5	Screw M6×0.75×5	2
27	10006298	旋梭传动齿轮 II	The hook driving gear II	1
28	10005258	螺钉 M6×0.75×5	Screw M6×0.75×5	2
29	10005119	螺钉 M6×0.75×6	Screw M6×0.75×6	2
30	10006297	旋梭传动齿轮 I	The hook driving gear I	1
31	10009008	螺钉 M6×16	Screw M6×16	4
32	10005550	垫圈 Φ6	Washer Φ6	4
33	20013282	单针侧盖板A喷漆 (for 9610)	One needle plate measuring (for 9610)	1
34	20003490	侧盖板I (for 9610)	Plate measuring	1

19. 送料支座

Feed wheel post , left

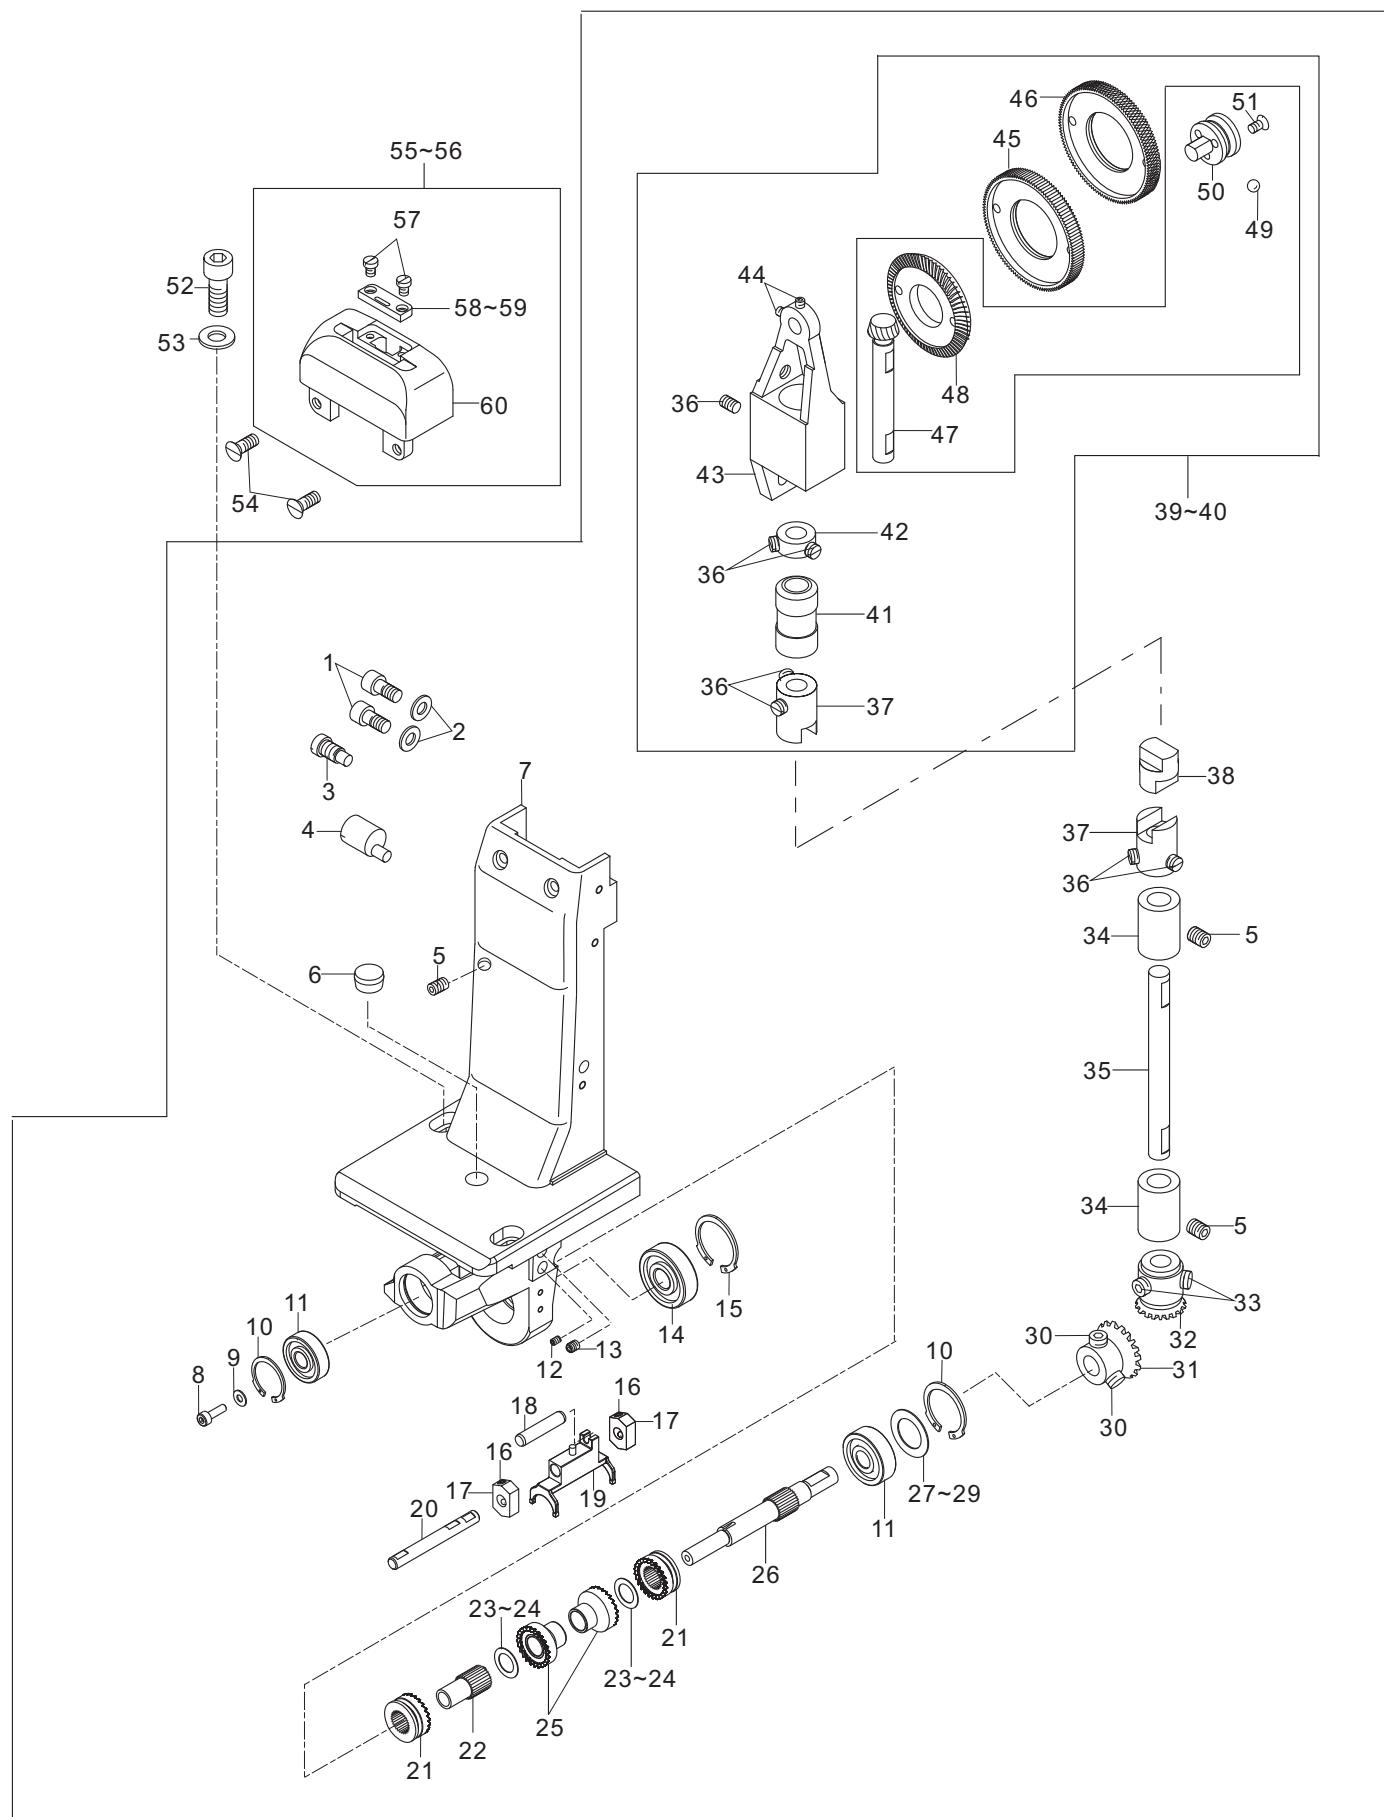


19. 送料支座

Feed wheel post , left

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10005139	螺钉 M5×12	Screw M5×12	2
2	10005016	垫圈 Φ5	Washer Φ5	2
3	10004978	螺钉 M6×8	Screw M6×8	1
4	10005257	偏心销	Pin	1
5	10009741	螺钉 M4×6	Screw M4×6	1
6	10005407	油塞	Oil wick	1
7	20013283	送料支座D喷漆	Feeding support D paint	1
8	10009533	螺钉 M3×8	Screw M3×8	1
9	10002068	垫圈 Φ3	Washer Φ3	1
10	10005432	22挡圈	Collar	2
11	10003586	轴承 608ZZ	Bearing 608ZZ	2
12	10002853	螺钉 M3×4	Screw M3×4	1
13	10012162	螺钉 M5×5	Screw M5×5	1
14	10007200	轴承 6001ZZ	Bearing 6001ZZ	1
15	10005029	28挡圈	Colar	1
16	10009741	螺钉 M4×6	Screw M4×6	4
17	10038313	挡块	Block	2
18	10038311	限位轴	Limit shaft	1
19	10038312	切换滑座	The switch slide	1
20	10038314	导向轴	Guide shaft	1
21	10049853	滑动离合器	Slip clutch	2
22	10038310	短花键轴	Spline shaft	1
23	10038304	垫片	Washer	6
24	10038303	垫片	Washer	(6)
25	10049850	传动齿轮组件	Drive gear components	2
26	10038305	送料主动轴	Feeding drive shaft	1
27	10001564	垫片	Washer	(3)
28	10007788	垫片	Washer	3
29	10007789	垫片	Washer	(3)
30	10005119	螺钉 M6×0.75×6	Screw M6×0.75×6	2
31	10007879	送料机构齿轮 I	Feeding mechanism of gear I	1
32	10007907	送料机构齿轮 II	Feeding mechanism of gear II	1
33	10005549	螺钉 M6×0.75×5	Screw M6×0.75×5	2
34	10005431	套	Axle sleeve	2
35	10005402	送料传动轴	Feeding transmission shaft	1
36	10012162	螺钉 M5×5	Screw M5×5	7
37	10005236	联接衬套	Coupling bushing	2
38	10005084	联接块	Connecting block	1
39	10005376	送料机构 (直齿送料轮)	Straight tooth feeding mechanism	1
40	10043255	滚花送料机构 (滚花送料轮)	Knurling tooth feeding mechanism	(1)
41	10005082	送料机构座前轴套	Axle sleeve	1
42	10005310	送料传动锥齿轮挡圈	Collar	1
43	10005185	送料机构座	Feeding mechanism of bearing	1
44	10005354	螺钉 M3×4	Screw M3×4	2
45	10005037	送料盘 (直齿送料轮)	Feeding straight tooth	1
46	10043256	滚花送料盘 (滚花送料轮)	Knurling tooth feed tray	(1)
47	10005071	送料传动锥齿轮 I	The feed driving bevel gear I	1
48	10005117	送料传动锥齿轮 II	The feed driving bevel gear II	1
49	10006178	钢球 Φ2	Steel ball Φ2	23
50	10028364	送料齿联接块组件	The Connecting block assembly	1
51	10005348	螺钉 M2.5×4	Screw M2.5×4	3
52	10009008	螺钉 M6×16	Screw M6×16	2
53	10005550	垫圈 Φ6	Washer Φ6	2
54	10005459	螺钉 M4×8	Screw M4×8	2
55	10050837	单针针板组件 (-M)	Single needle plate assembly (-M)	1
56	10050838	单针针板组件 (-H)	Single needle plate assembly (-H)	(1)
57	10003903	针板螺钉 M2×3	Screw M2×3	2
58	10050839	小针板-薄料 (for -M)	Small needle plate -thin (for -M)	1
59	10050840	小针板-厚料 (for -H)	Small needle plate -thick (for -H)	(1)
60	10039090	针板罩S	needle plate seat	1

20. 送料轮托盘

Feed wheel mounting plate

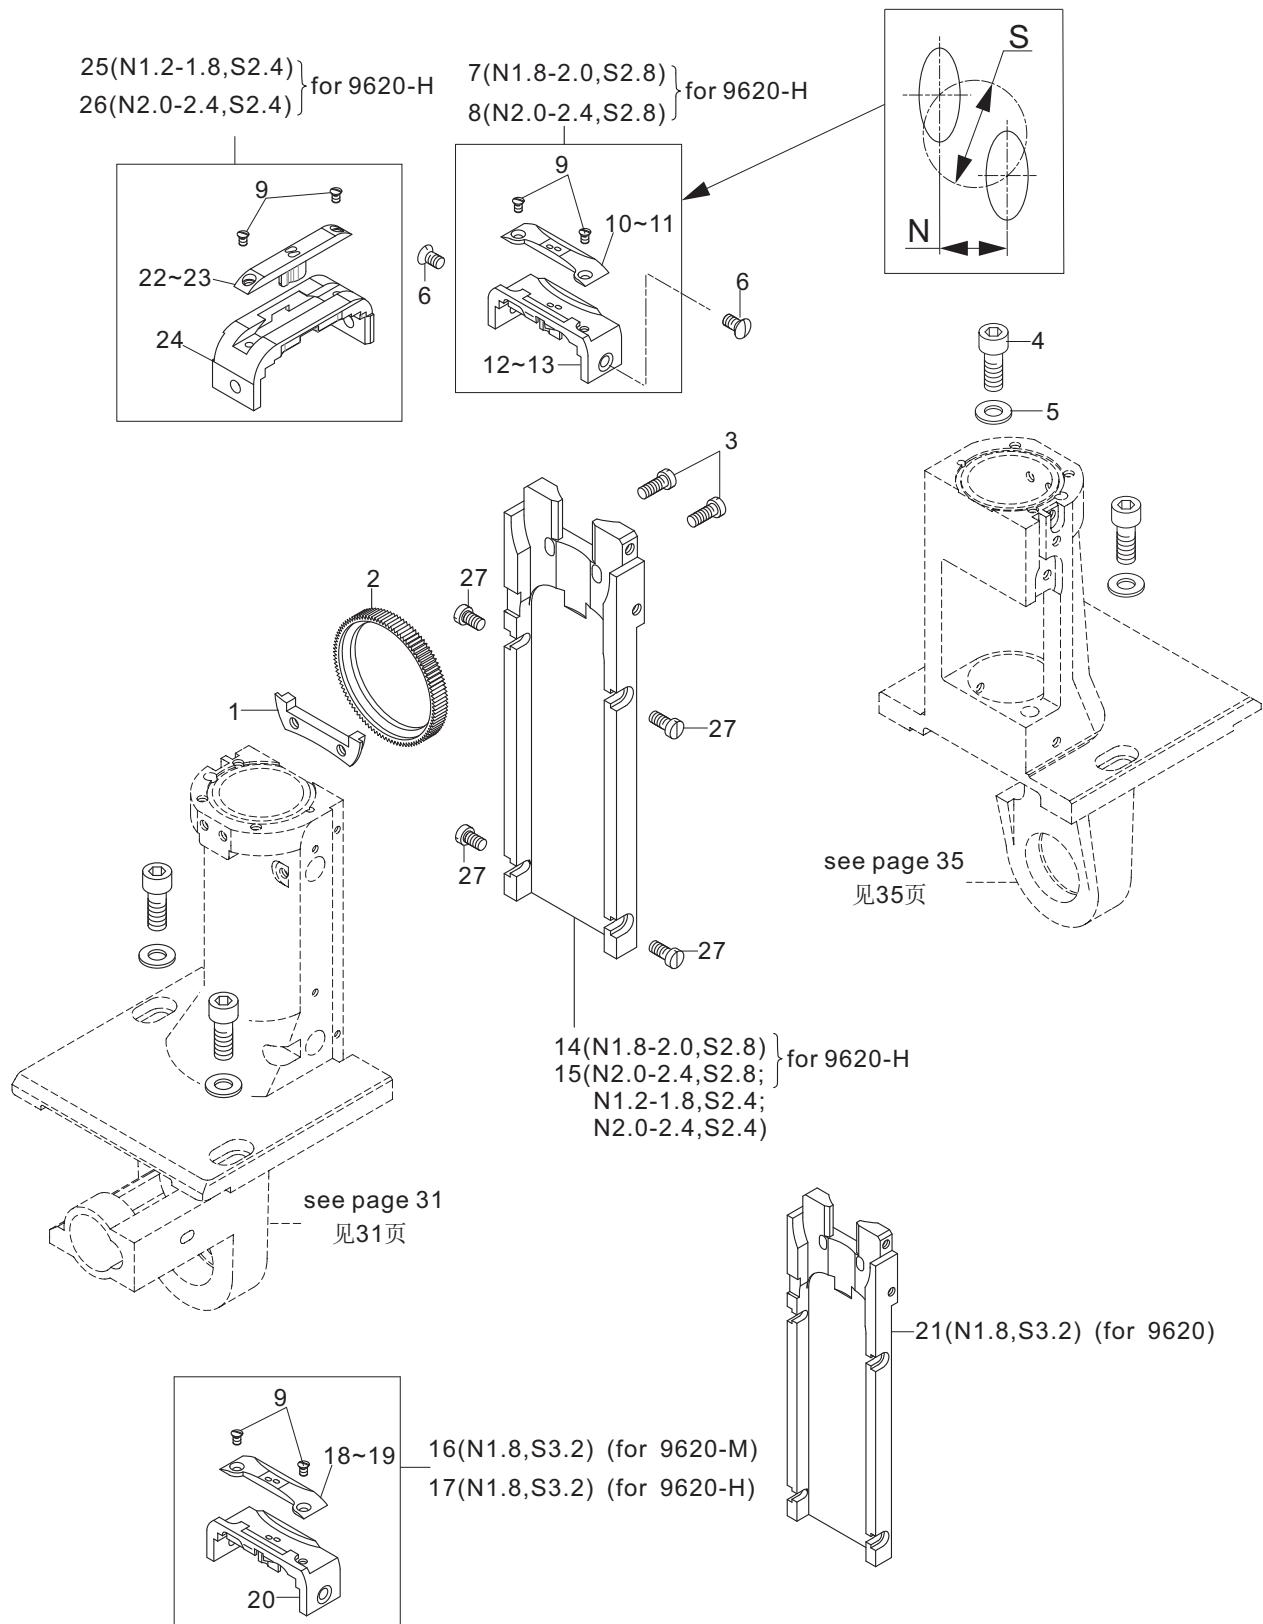


20. 送料轮托盘 Feed wheel mounting plate

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10030181	送料轮调整块	Feeding wheel adjusting block	1
2	10030180	送料轮	Feeding wheel	1
3	1001580	螺钉 M4×10	Screw M4×10	2
4	10009008	螺钉 M6×16	Screw M6×10	4
5	10005550	垫圈 Φ6	Washer Φ6	4
6	10002545	螺钉 M4×6	Screw M4×6	2
7	10039214	双针针板组件(N1.8-2.0,S2.8)	Double needle plate assembly(N1.8-2.0)	(1)
8	10039215	双针针板组件(N2.0-2.4,S2.8)	Double needle plate assembly(N2.0-2.4)	1
9	10001578	双针针板固定螺钉 M3×3.2	Screw M3×3.2	2
10	10049413	双针小针板(N1.8-2.0,S2.8)	Small double needle plate(N2.0-2.4)	1
11	10049414	双针小针板(N2.0-2.4,S2.8)	Small double needle plate(N2.0-2.4)	(1)
12	10049415	针板罩(N1.8-2.0,S2.8)	Double needle plate cover(N1.8-2.0)	1
13	10049416	针板罩(N2.0-2.4,S2.8)	Double needle plate cover(N2.0-2.4)	(1)
14	10045669	针板罩座 (N1.8-2.0,S2.8)	Double needle plate cover seat(N1.8-2.0)	(1)
15	10043208	针板罩座 (N2.0-2.4,S2.8)	Double needle plate cover seat(N2.0-2.4)	1
16	10041323	双针针板组件(N1.8,S3.2) for -M	Double needle plate assembly(N1.8)	(1)
17	10041324	双针针板组件(N1.8,S3.2) for -H	Double needle plate assembly(N1.8)	(1)
18	10001383	双针小针板(N1.8,S3.2) for -M	Small double needle plate(N1.8)	(1)
19	10030579	双针小针板(N1.8,S3.2) for -H	Small double needle plate(N1.8)	(1)
20	10041325	针板罩 (N1.8,S3.2)	Double needle plate cover(N1.8)	(1)
21	10001388	针板罩座 (N1.8,S3.2)	Double needle plate cover seat (N1.8)	(1)
22	10051306	针板组件AN1.2-1.8	Double needle plate assembly(AN1.2-1.8)	(1)
23	10051307	针板组件AN2.0-2.4	Double needle plate assembly(AN2.0-2.4)	(1)
24	10051303	双针针板罩A	Double needle plate cover	(1)
25	10051304	小针板AN1.2-1.8	Small double needle plate(AN1.2-1.8)	(1)
26	10051305	小针板AN2.0-2.4	Small double needle plate(AN2.0-2.4)	(1)
27	10010595	螺钉 M4×7.5	Screw M4×7.5	4

21. 倒缝装置

Backtacking mechanism

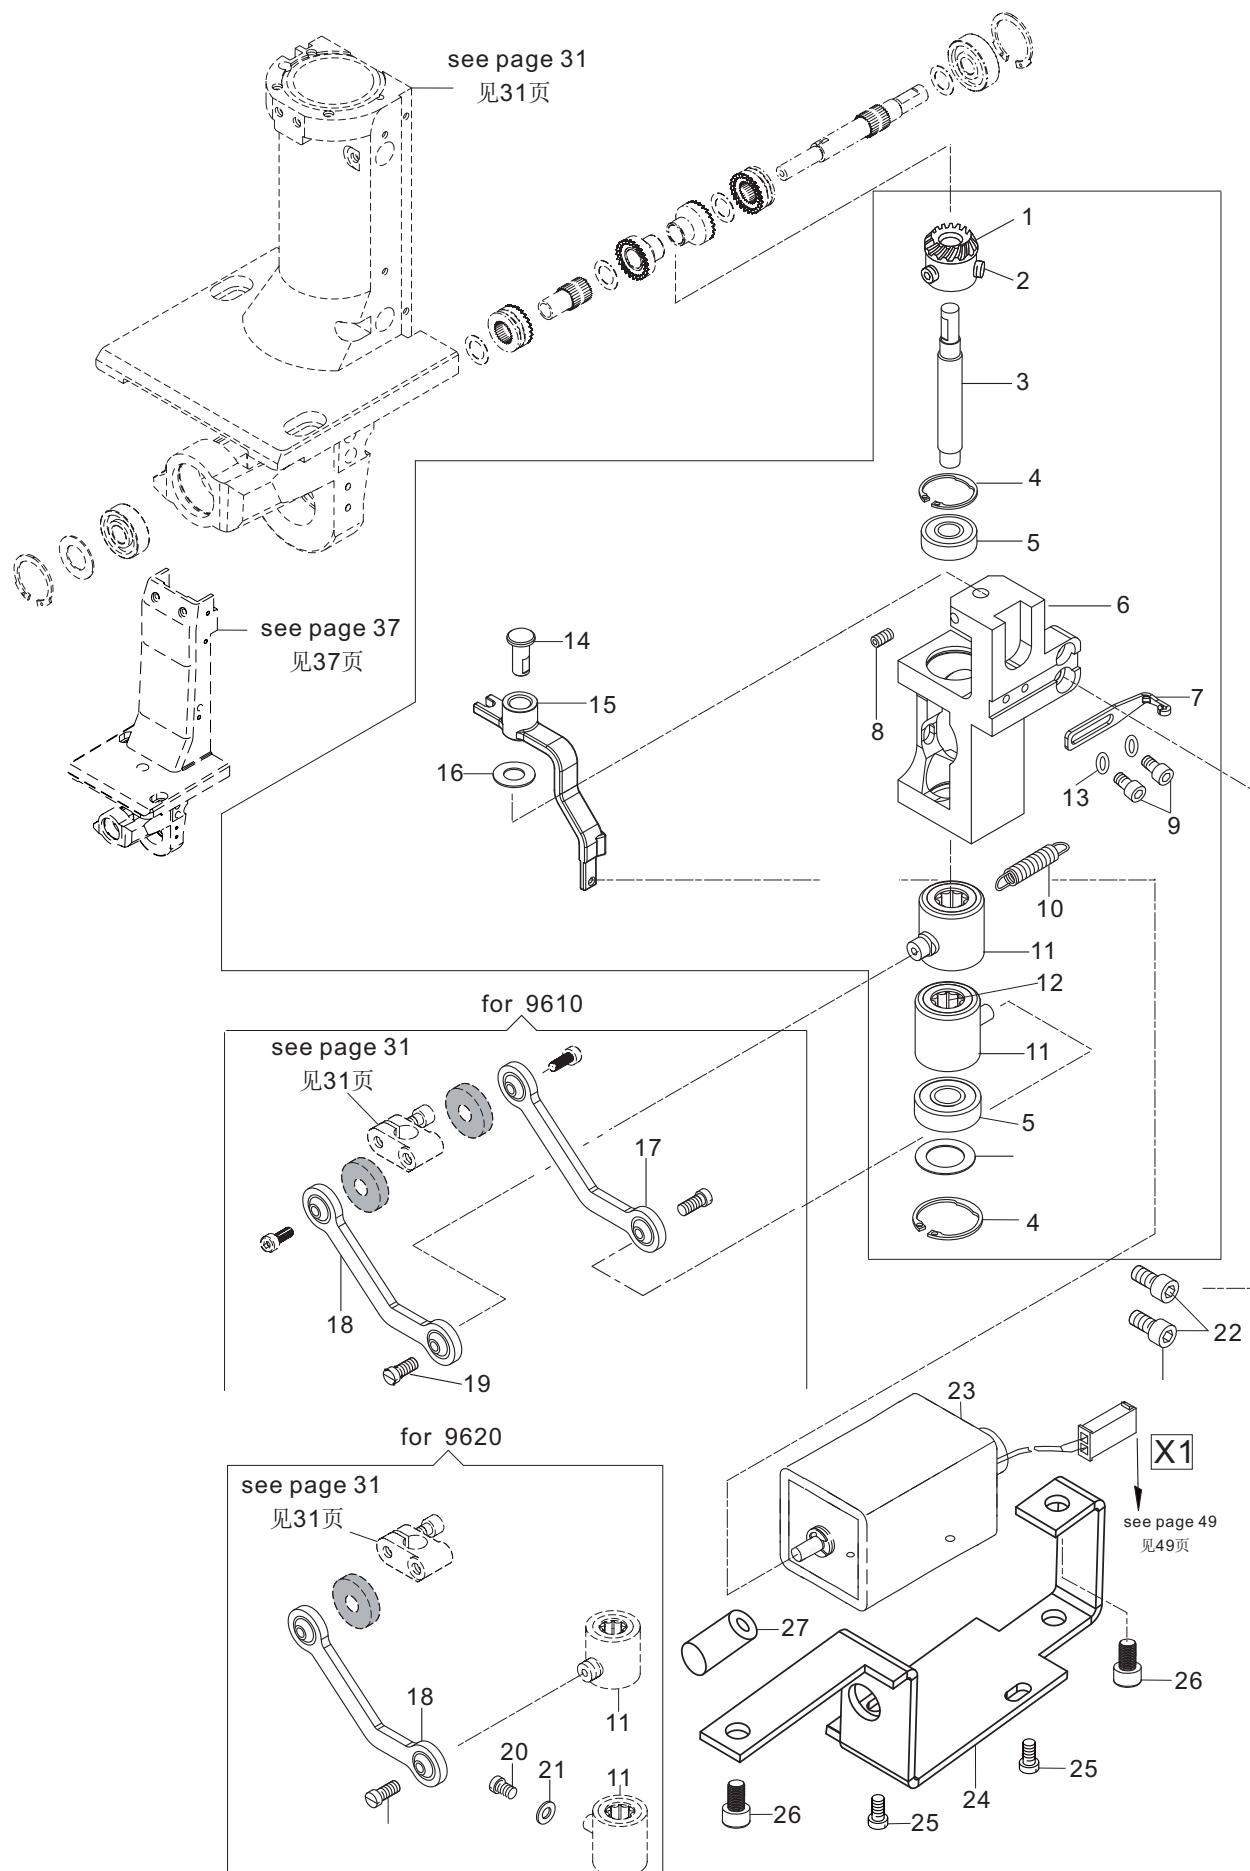


21.倒缝装置

Backtacking mechanism

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10007075	574倒缝传动齿轮 I	574 Backstitch transmission gear	1
2	10005549	螺钉 M6×5	Screw M6×5	2
3	10005540	轴	Shaft	1
4	10005432	开口挡圈	Collar	2
5	10003586	轴承 608ZZ	Bearing 608ZZ	2
6	10038315	倒缝支座	Backstitch transmission	1
7	10038316	复位弹簧勾	Spring hook	1
8	10009741	螺钉 M4×6	Screw M4×6	1
9	10005350	螺钉 M4×8	Screw M4×8	2
10	10038317	复位弹簧	Reset spring	1
11	10005454	轴承座	Bearing seat	2
12	10005286	滚轮联接轴轴承	One-way bearing	2
13	10005260	垫圈 Φ4	Washer Φ4	2
14	10038318	销	Pin	1
15	10038382	摆动杠杆	Swinging lever	1
16	10038319	垫片	Washer	2
17	10038321	球连杆组件	Ball connecting rod assembly	1
18	10001432	574球连杆组件	574 Ball connecting rod assembly	1
19	10005405	螺钉 M4×9	Screw M4×9	2
20	10001804	螺钉 M4×5	Screw M4×5	1
21	10005260	垫圈 Φ4	Washer Φ4	1
22	10010953	螺钉 M5×10	Screw M5×10	2
23	10038322	倒缝电磁铁A	Backstitch electromagnet	1
24	10038320	电磁铁支架	Electromagnet bracket	1
25	10005107	螺钉 M4×6	Screw M4×6	2
26	10005122	螺钉 M6×10	Screw M6×10	2
27	10042057	双针倒缝联接头	Connecting block	(1)

22. 剪线结构(-D) Thread trimmer (-D)

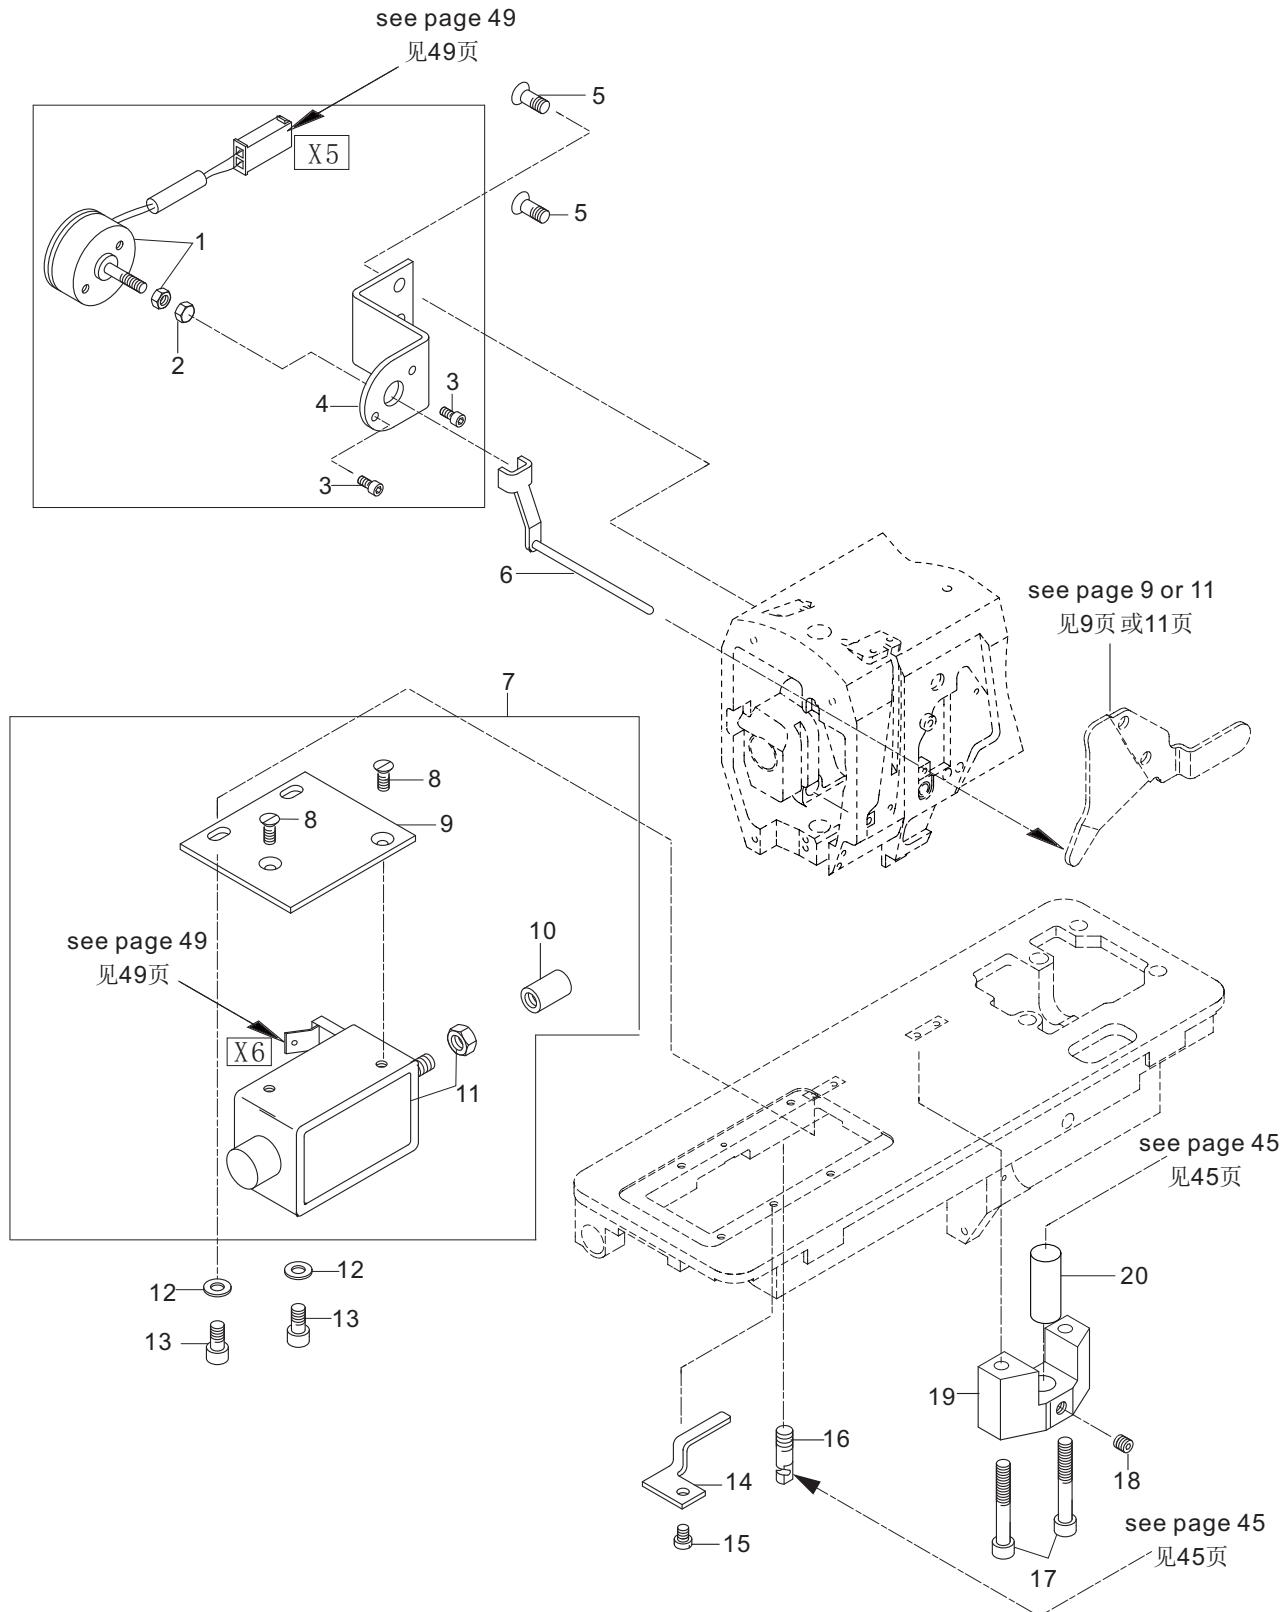


22. 剪线结构 (-D)

Thread tirmmer (-D)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10001510	松线电磁铁	Loose line electromagnet	1
2	10001511	挺线电磁铁帽 M4	Nut M4	1
3	10002129	螺钉 M3×5	Screw M3×5	2
4	10001506	松线电磁铁安装板	Mounting plate	1
5	10001948	螺钉 M5×10	Screw M5×10	2
6	10001657	电磁铁挺线钉	Tension release pin	1
7	10006402	剪线电磁铁整组	Shear line electromagnet assembly	1
8	10008233	螺钉 M4×6	Screw M4×6	2
9	10001502	剪线电磁铁安装板	Mounting plate	1
10	10001614	剪线电磁铁联接节	Connecting block	1
11	10001499	剪线电磁铁	Shear line electromagnet	1
12	10005016	垫圈 Φ5	Washer Φ5	2
13	10010953	螺钉 M5×10	Screw M5×10	2
14	10001508	油线挡板	Oil line baffle	1
15	10005076	螺钉 M4×5	Screw M4×5	1
16	10005318	螺钉 M6×8	Screw M6×8	1
17	10001497	螺钉 M5×30	Screw M5×30	2
18	10012162	螺钉 M5×5	Screw M5×5	1
19	10002142	剪线摆动杆座	Shear line swing rod seat	1
20	10001498	剪线摆动杆座销 10×32	Pin 10×32	1

23. 剪线结构(-D) Thread trimmer (-D)

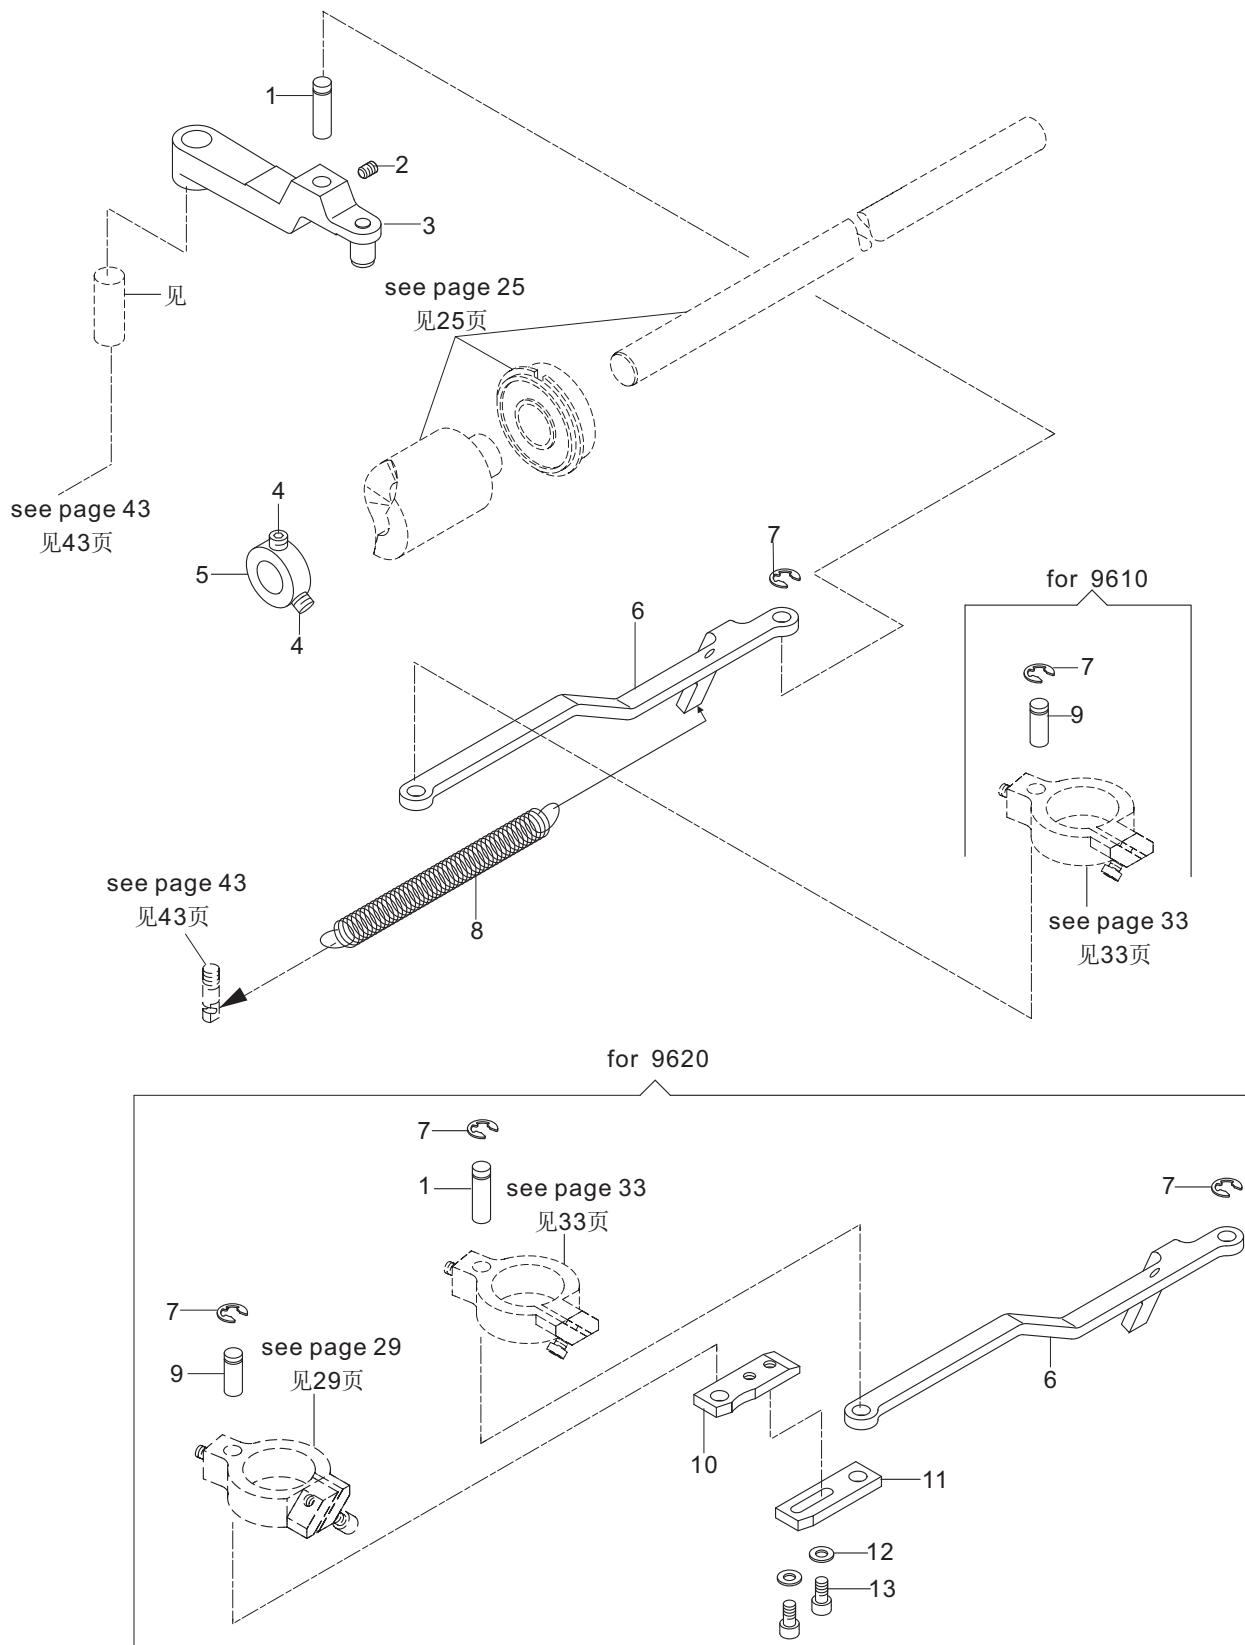


23. 剪线结构 (-D)

Thread tirmmer (-D)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10001501	剪线摆动杆销	Pin	2
2	10012162	螺钉 M5×5	Screw M5×5	1
3	10001503	剪线摆动杆组件	Swing rod assembly	1
4	10012162	螺钉 M5×5	Screw M5×5	2
5	10005409	12万向联接轴挡圈	Retaining ring	1
6	10001504	剪线摆动拉杆	Shear line swing rod	1
7	10001947	剪线摆动杆销卡圈	Collar	3
8	10001946	剪线摆动拉杆弹簧	Spring	1
9	10001505	剪线摆动销	Pin	2
10	10002201	剪线摆动拉杆连接板 II	Connecting plate II	1
11	10001722	剪线摆动拉杆连接板 I	Connecting plate I	1
12	10005260	垫圈 Φ4	Washer Φ4	2
13	10005350	螺钉 M4×8	Screw M4×8	2

24. 自动抬压脚

Atutomatic presser foot lifter

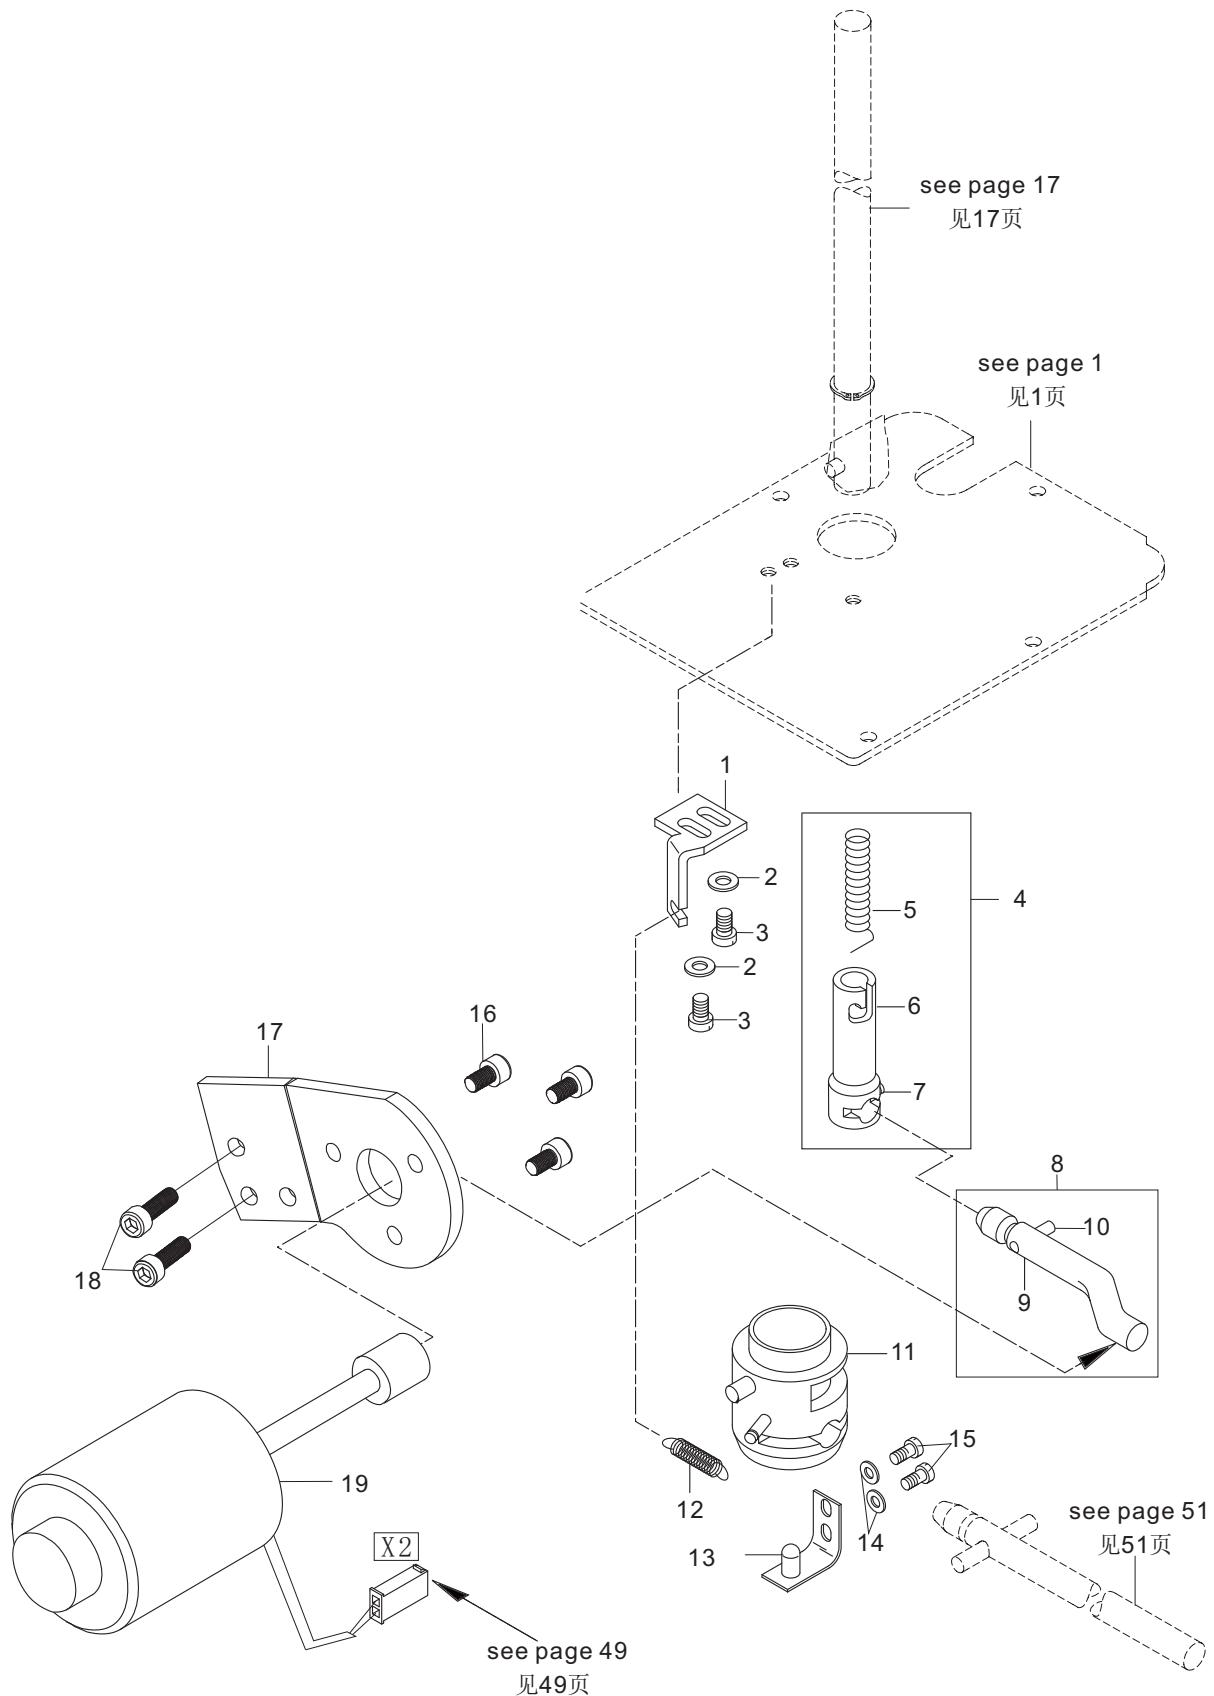


24. 自动抬压脚 Automation presser foot lifter

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10001489	操纵顶柱复位板	Reset plate	1
2	10005260	垫圈 Φ4	Washer Φ4	2
3	10005003	螺钉 M5×8	Screw M5×8	2
4	10005514	操纵顶柱组件	Manipulating the top column assembly	1
5	10005158	操纵顶柱弹簧	Spring	1
6	10005053	操纵顶柱	Manipulating of the top pillar	1
7	10009741	螺钉 M4×6	Screw M4×6	1
8	10002145	操纵弯杆组件	Control rod bending component	1
9	10002146	操纵弯杆	Control rod bending	1
10	10001487	操作弯杆销 4×16	Pin	1
11	10001453	脚膝抬压脚操作顶柱组件	Presser foot lifting component of knee	1
12	10002144	复位弹簧	Spring	1
13	10001450	操纵弯杆挡片组件	Baffle assembly	1
14	10005260	垫圈 Φ4	Washer Φ4	2
15	10005204	螺钉 M4×6	Screw M4×6	2
16	10005122	螺钉 M6×10	Screw M6×10	3
17	10001802	中间板	Mounting plate	1
18	10002028	螺钉 M6×20	Screw M6×20	2
19	10041477	一体机压脚电磁铁	Presser foot lifting electromagnet	1

25. 电控

Elecctrice control

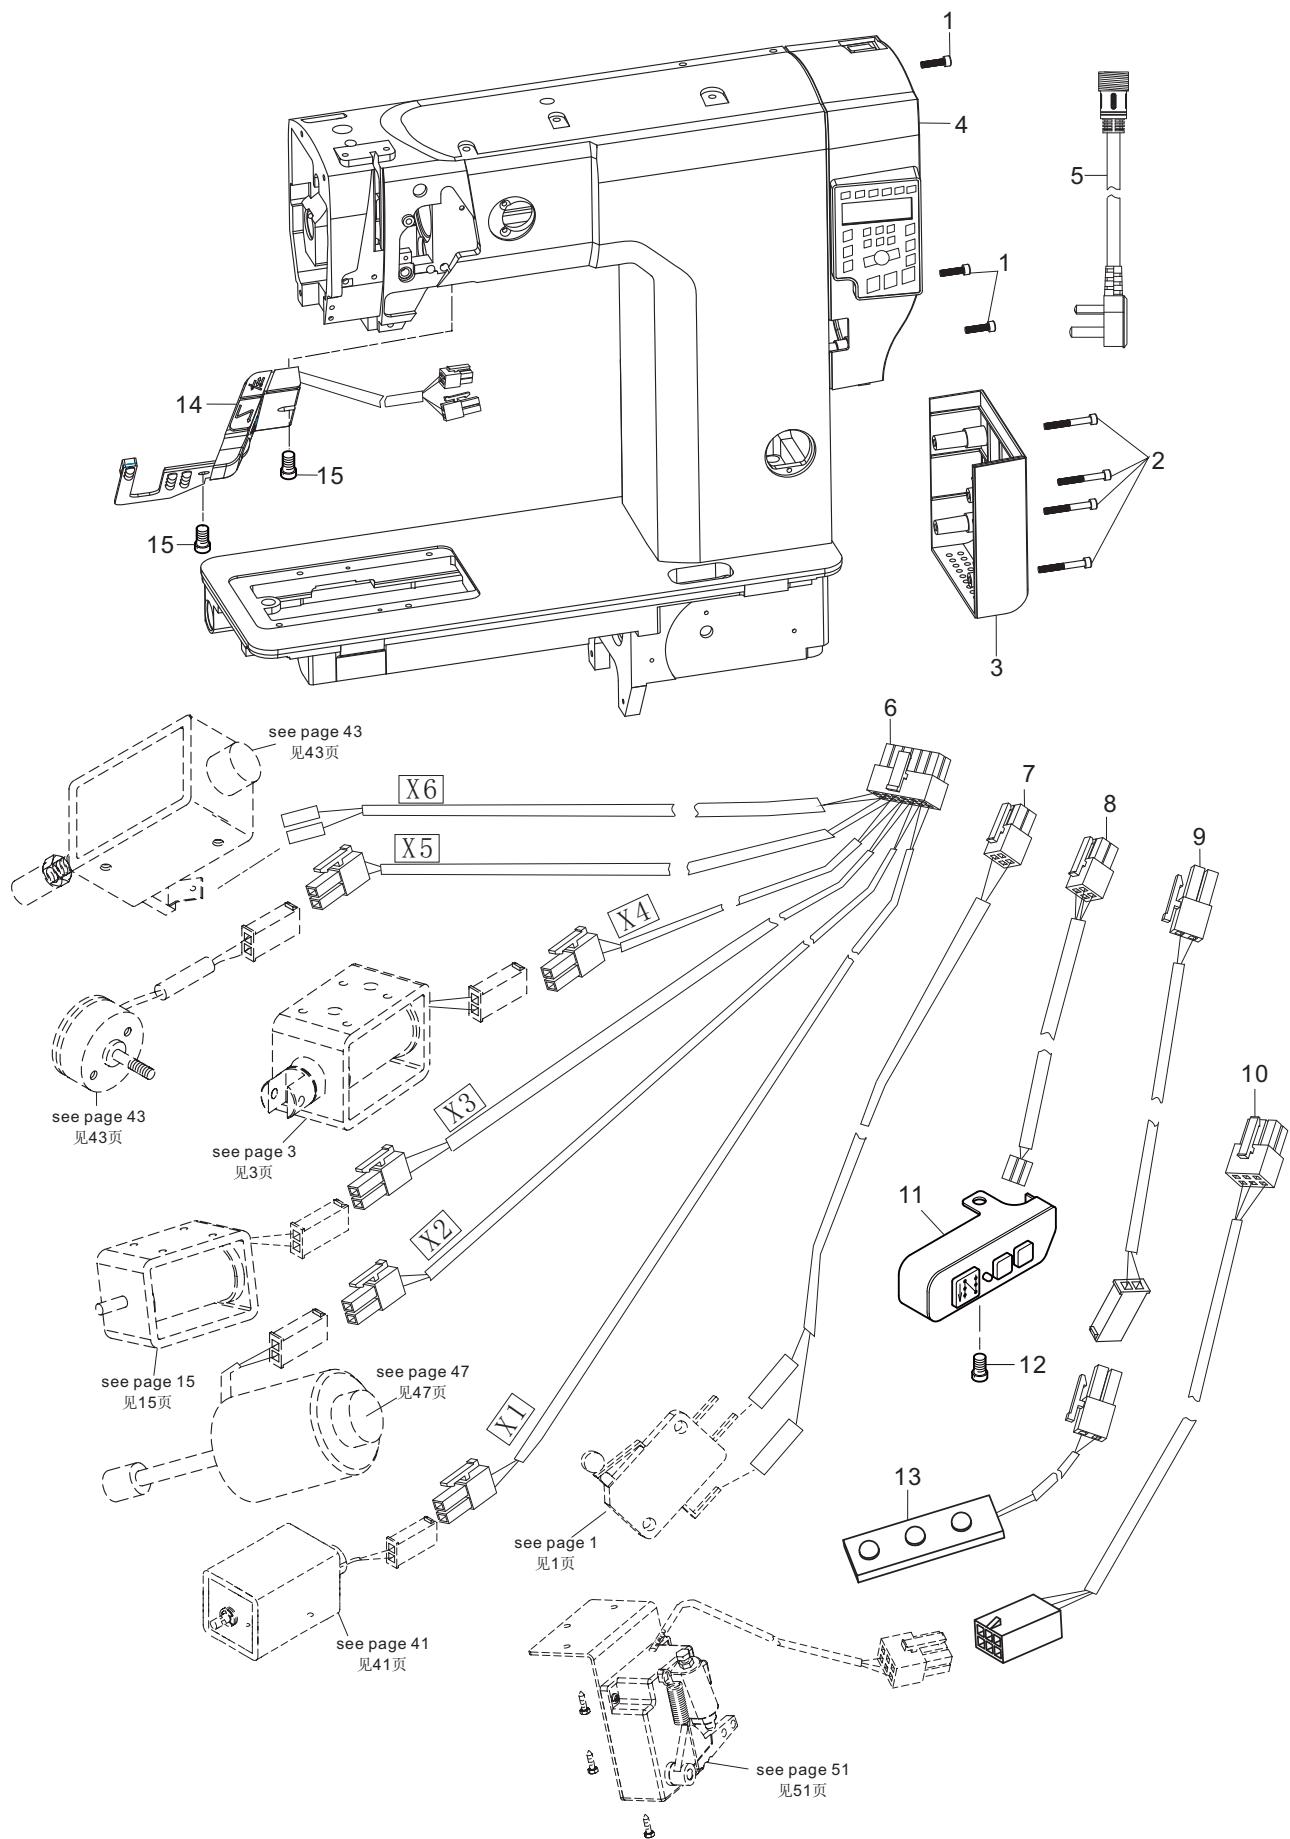

25. 电控


Electric control

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10003141	螺钉 M5×20	Screw M5×20	3
2	10007637	螺钉 M5×40	Screw M5×40	4
3	10041727	一体机下罩盖☆	Cover	1
4	10050042	WR58L-01-01电控☆	Electronic control	1
5	10048630	电源转接线	The power adapter cable	1
6	10048216	主控线	Main control line	1
7	10048222	点动倒缝开关线	Swich line	1
8	10048217	倒缝开关线	Reverse stitching switch wiring	(1)
9	10048220	机头灯转接线	head lamp adapter	(1)
10	10048218	踏板转接线	Redal switch line	1
11	10028338	倒缝开关 (积致电控)	Reverse stitching switch	(1)
12	10007096	螺钉 M5×10	Screw M5×10	1
13	10050733	罗拉车机头灯	head lamp	1
14	10052190	集成机头灯组件☆	Integrated lamp	1
15	10005107	螺钉 M4×8	Screw M5×10	2





26. 附件(1)

Accessories components (1)

1 (for 9620)

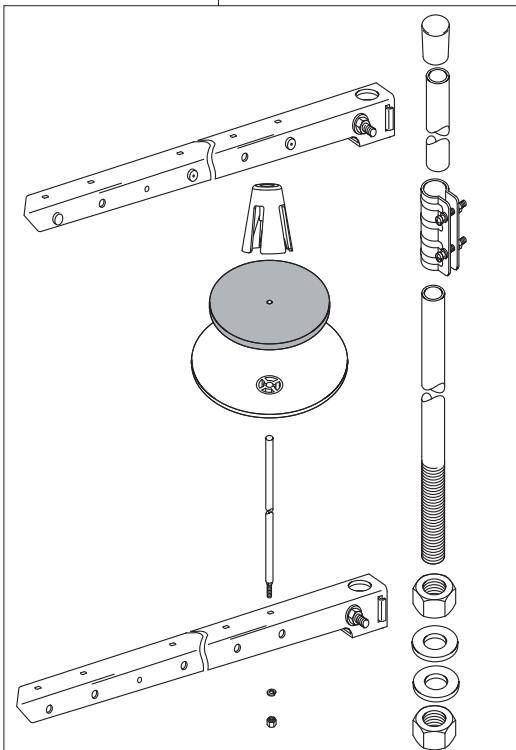

for 9610

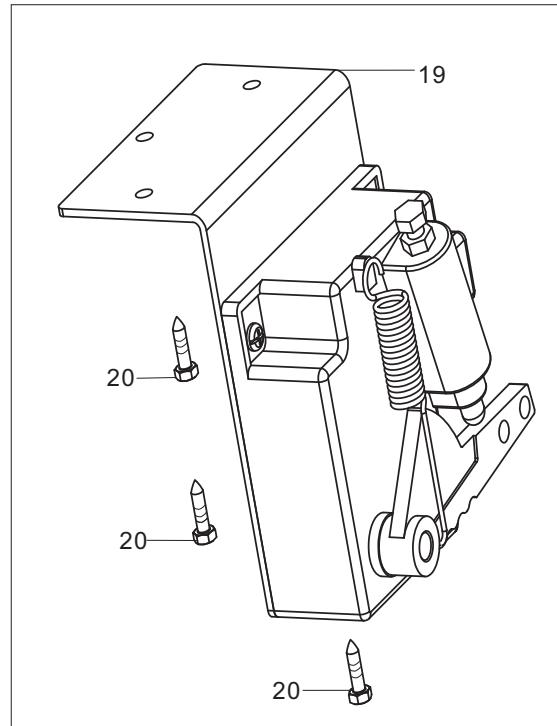
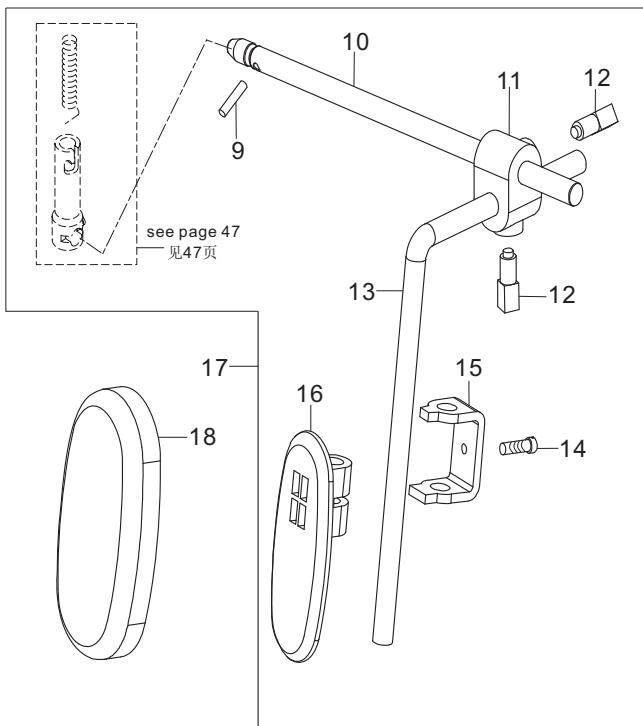
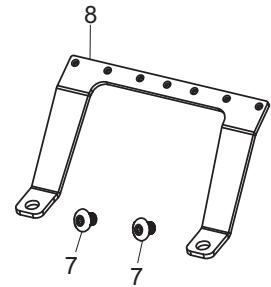
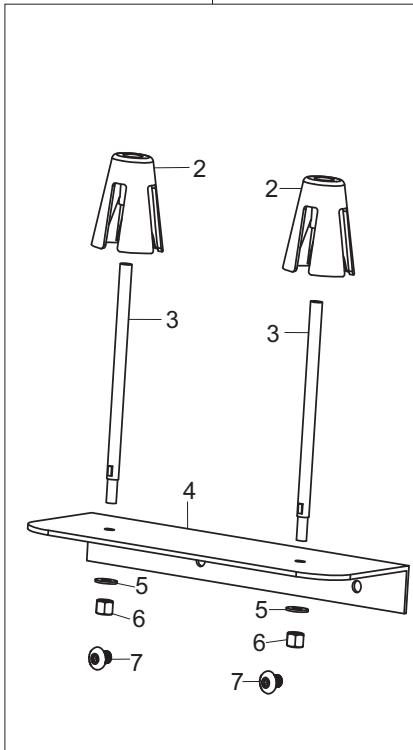


26.附件 (1) Accessories components (1)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10006300	三线线架 (for 9620)	Three wire frame component	1
2	10004287	线盘塑料压块	Wire disc plastic pressing block	2
3	10041472	线架轴	Wire rack shaft	2
4	10041471	线盘支架	Wire coil bracket	1
5	10009207	垫片 Φ5	Washer Φ5	2
6	10002953	螺母 M5	Nut M5	2
7	10007096	螺钉 M5×10	Screw M5×10	2
8	10041470	过线架	Lead wire frame	1
9	10005193	销 4×18	Pin 4×18	1
10	10005045	操纵连杆	Control rod	1
11	10005199	操纵杆接头	Control rod joints	1
12	10005234	螺钉 M8×14	Screw M8×14	2
13	10005213	操纵杆	Control stick	1
14	10005421	螺钉 M5×13.3	Screw M5×13.3	1
15	10005273	膝控调节支架	Knee control adjusting bracket	1
16	10005115	膝控操纵架	Knee control frame	1
17	10004975	膝控组件	Knee control assembly	1
18	10005455	膝控软垫	Knee control pad	1
19	10048219	踏板	Pedal	1
20	10048223	踏板螺钉	Self tapping Screw	3



27. 附件(2)

Accessories components (2)

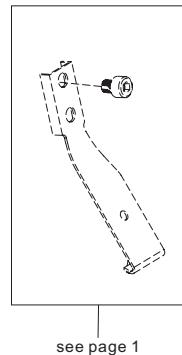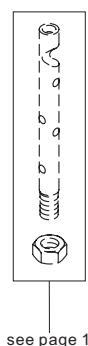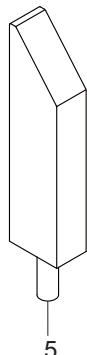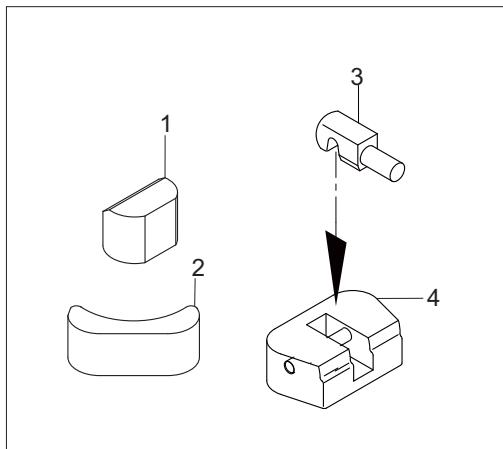


see page 19
见19页

see page 1
见1页

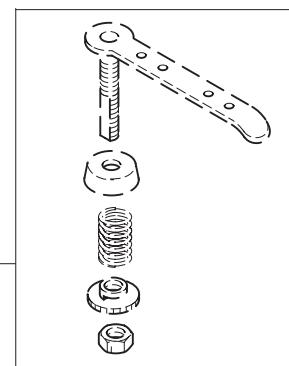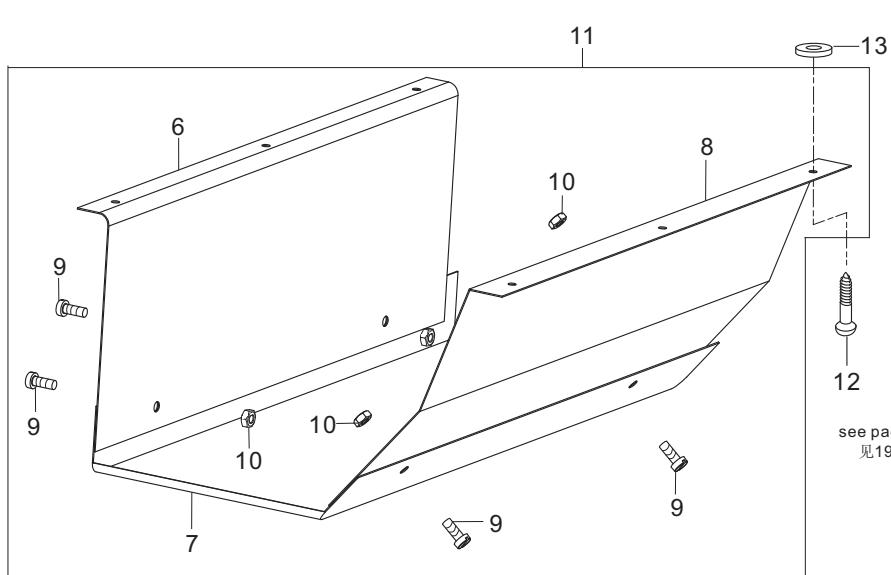


see page 19
见19页

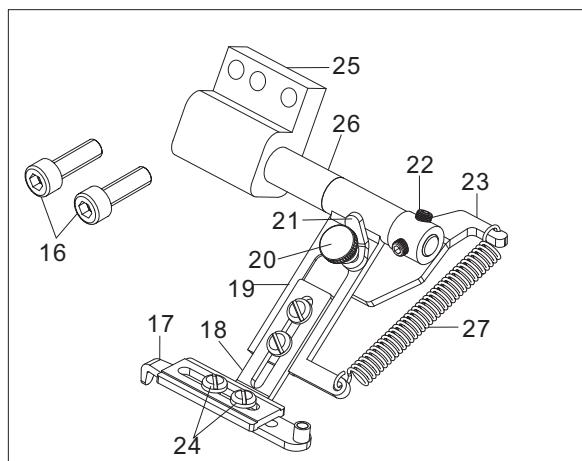

33~34 (for 9610)
35~36 (for 9620)




15

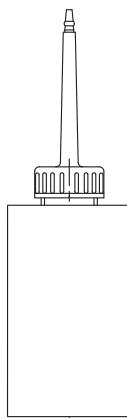


28



29

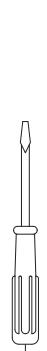

30

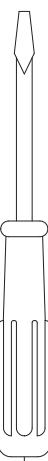

31



27.附件 (2) Accessories components (2)

序号 No.	件号 Part No.	名称	DESCRIPTION	数量 Qty
1	10005114	机头支座	Head support	3
2	10005248	机头座垫	Head cushion	2
3	10005374	机头铰链	head hinge	2
4	10005030	机头铰链座组件	Head hinge base assembly	2
5	10005484	木支架组件	Wood bracket assembly	1
6	10005191	机头油盘前座	Front seat head pan	1
7	10005077	机头油盘底座	Head pan base	1
8	10005292	机头油盘后座	Head pan back	1
9	10005299	螺钉 M4×5	Screw M4×5	4
10	10005297	螺母 M4	Nut M4	4
11	10005296	机头油盘组件	Head pan assembly	1
12	10008323	螺钉 ST4.2×20-C-H	Wood screw ST4.2×20-C-H	6
13	10005363	油盘油毡垫	Oil felt gasket	6
14	10001177	机头罩☆	Head cover	1
15	10040232	罗拉车靠边器	Pull device	1
16	10003164	螺钉 M5×16	Screw M5×16	2
17	10041972	靠边板组件	side plate assembly	1
18	10041959	调节板	Adjusting plate	1
19	10041961	导向板焊接件	Welding guide plate	1
20	10041958	滚花高头螺钉 M4×12	Screw M4×12	1
21	10041964	紧固扳手	Fastening wrench	1
22	10041976	螺钉 M6×5	Screw M6×5	1
23	10041968	调整焊接件	Welding adjustment	1
24	10003065	螺钉 M4×5	Screw M4×5	4
25	10041965	安装座	Mounting seat	1
26	10041966	轴	Shaft	1
27	10041971	拉簧	Drag spring	1
28	10005356	油壶	Oil pot	1
29	10009270	内六角扳手	Inner six angle wrench	1
30	10013185	小螺丝刀	Small screwdriver	1
31	10010995	中螺丝刀	Medium screwdriver	1
32	10005461	梭心	Bobbin	3
33	10006103	机针134PCL 90/14(for 9610-M)	Needle 134PCL 90/14 (for 9610-M)	4
34	10004103	机针134PCL120/19(for 9610-H)	Needle 134PCL120/19 (for 9610-H)	(4)
35	10001375	机针134-35 90/14(for 9620-M)	Needle 134-35 90/14 (for 9620-M)	4
36	10030202	机针134-35120/19(for 9620-H)	Needle 134-35120/19 (for 9620-H)	(4)

10050458

